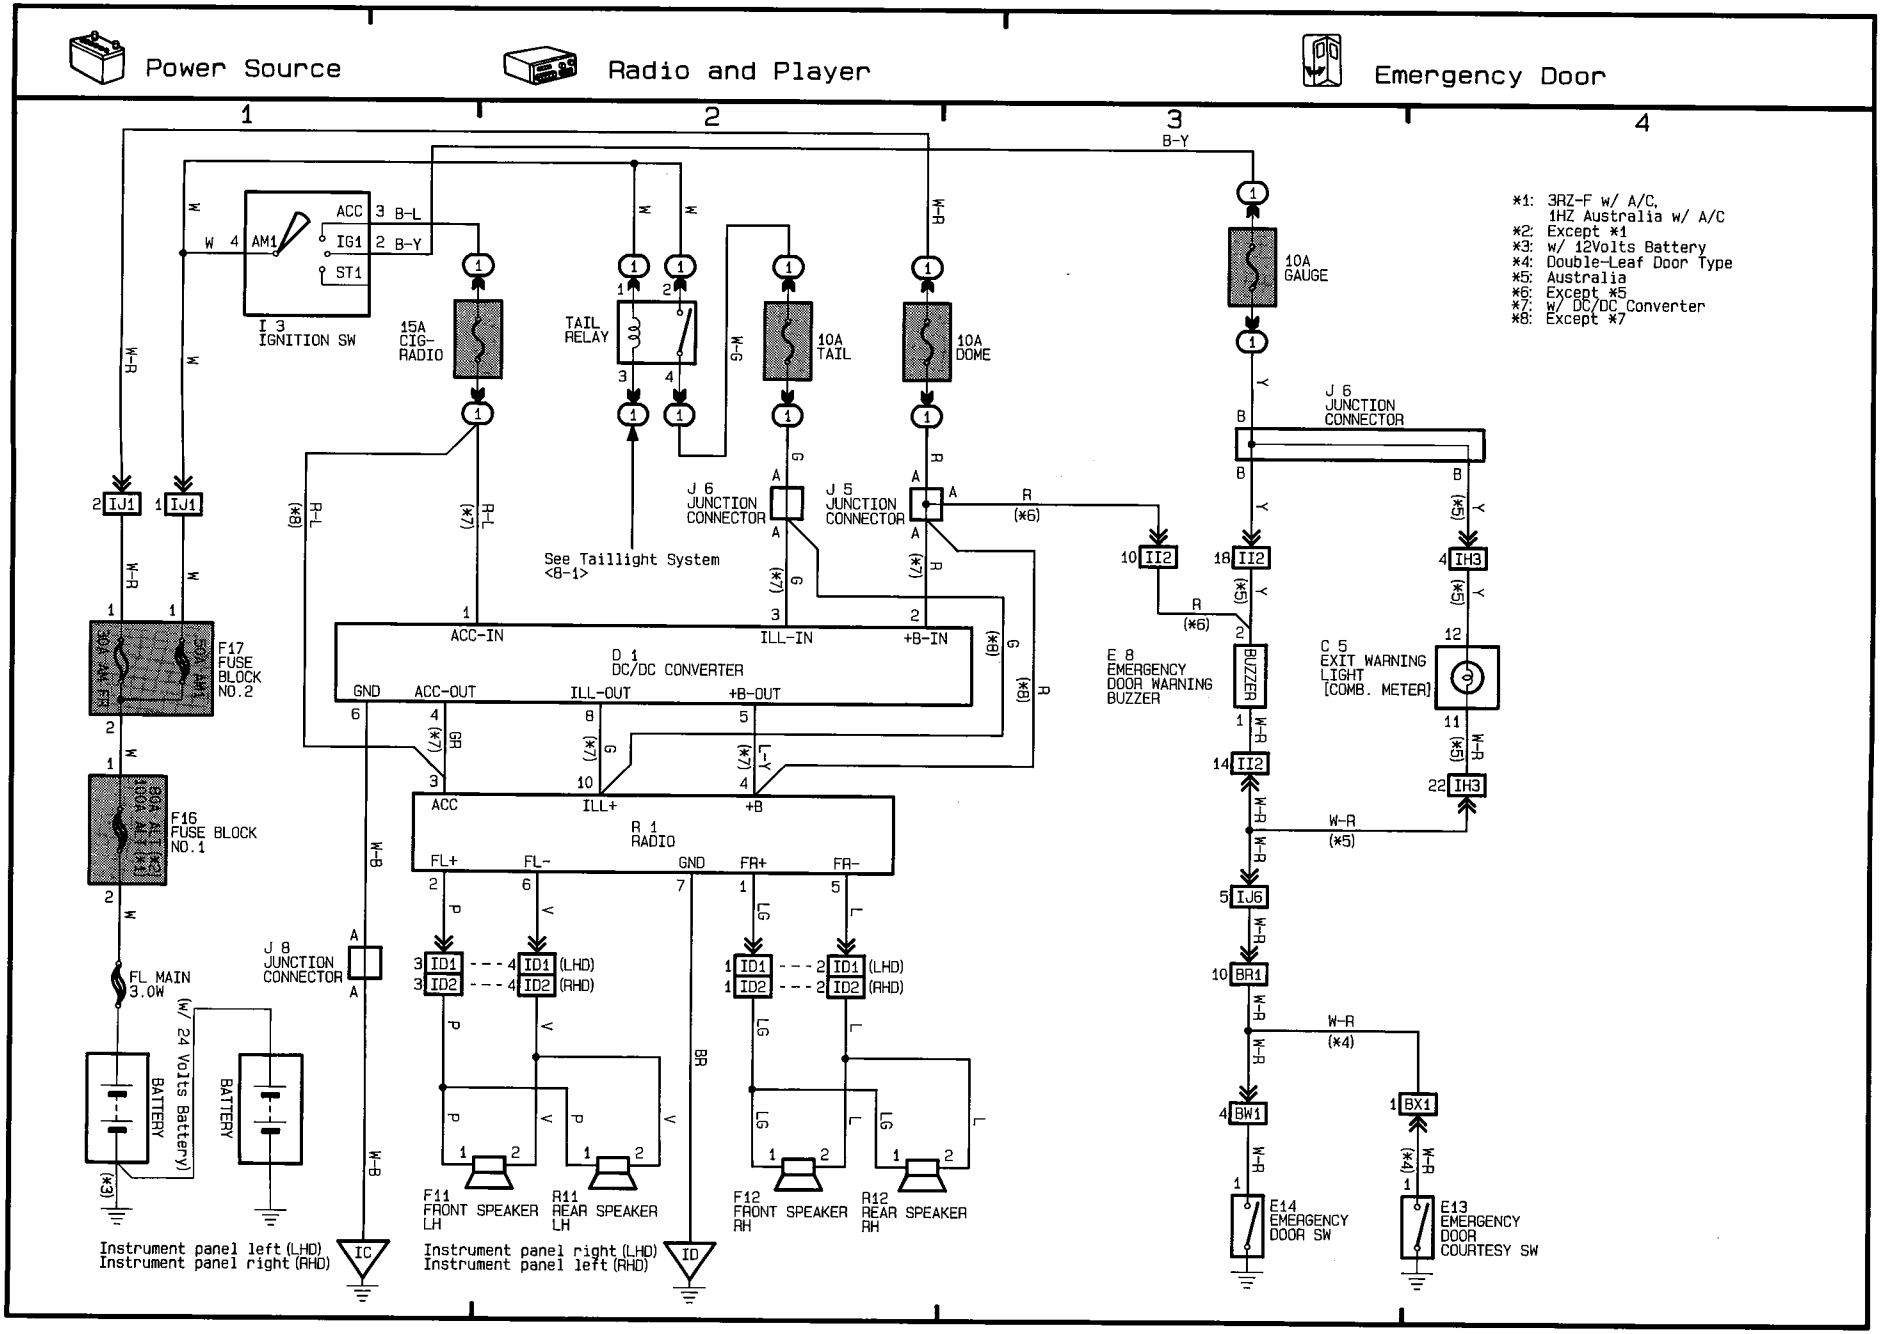

Power Source
Radio and Player
Emergency Door
1
2
3
4
B-Y
ACC 3 B-L
IG1 2 B-Y
ST1
AM1
I 3
IGNITION SW
15A
CIG-
RADIO
TAIL
RELAY
10A
TAIL
10A
DOME
10A
GAUGE
J 6
JUNCTION
CONNECTOR
J 5
JUNCTION
CONNECTOR
See Taillight System
<8-1>
F17
FUSE
BLOCK
NO.2
F16
FUSE BLOCK
NO.1
FL MAIN
3.0W
(w/ 24 Volts Battery)
BATTERY
BATTERY
J 8
JUNCTION
CONNECTOR
D 1
DC/DC CONVERTER
ACC-IN
ILL-IN
+B-IN
GND
ACC-OUT
ILL-OUT
+B-OUT
R 1
RADIO
ACC
ILL+
+B
FL+
FL-
GND
FR+
FR-
F11
FRONT SPEAKER
LH
R11
REAR SPEAKER
LH
F12
FRONT SPEAKER
RH
R12
REAR SPEAKER
RH
Instrument panel left (LHD)
Instrument panel right (RHD)
Instrument panel right (LHD)
Instrument panel left (RHD)
E 8
EMERGENCY
DOOR WARNING
BUZZER
C 5
EXIT WARNING
LIGHT
[COMB. METER]
E14
EMERGENCY
DOOR SW
E13
EMERGENCY
DOOR
COURTESY SW
*1: 3RZ-F w/ A/C,
1HZ Australia w/ A/C
*2: Except *1
*3: w/ 12Volts Battery
*4: Double-Leaf Door Type
*5: Australia
*6: Except *5
*7: w/ DC/DC Converter
*8: Except *7