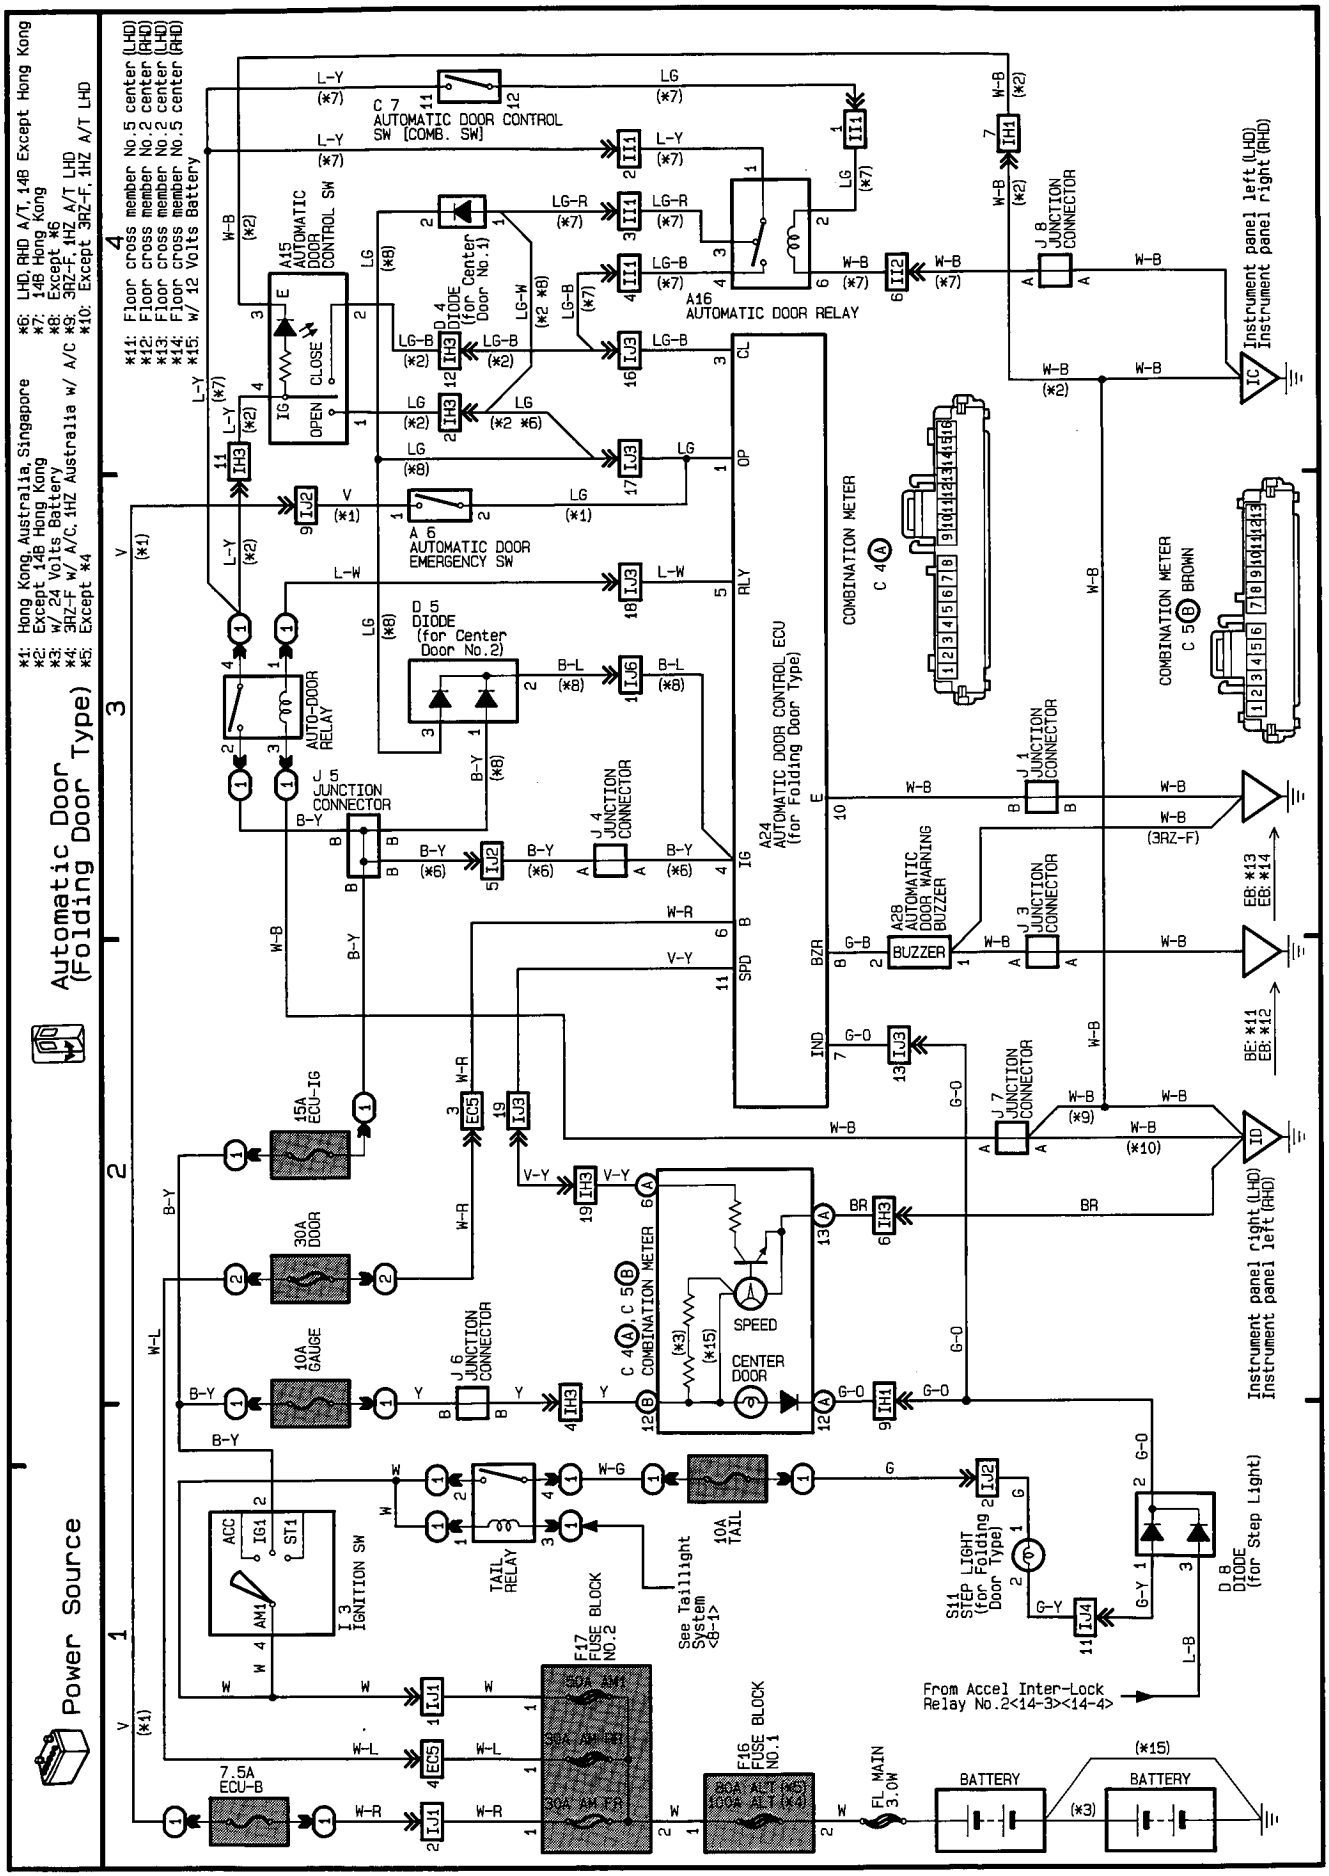

Automatic Door (Folding Door Type)
Power Source
19 COASTER
*1: Hong Kong, Australia, Singapore
*2: Except 14B Hong Kong
*3: w/ 24 Volts Battery
*4: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*5: Except *4
*6: LHD, RHD A/T, 14B Except Hong Kong
*7: 14B Hong Kong
*8: Except *6
*9: 3RZ-F, 1HZ A/T LHD
*10: Except 3RZ-F, 1HZ A/T LHD
*11: Floor cross member No.5 center (LHD)
*12: Floor cross member No.2 center (RHD)
*13: Floor cross member No.2 center (LHD)
*14: Floor cross member No.5 center (RHD)
*15: w/ 12 Volts Battery
C 7 AUTOMATIC DOOR CONTROL SW (COMB. SW)
A15 AUTOMATIC DOOR CONTROL SW
A16 AUTOMATIC DOOR RELAY
D 4 DIODE (for Center Door No.1)
A 6 AUTOMATIC DOOR EMERGENCY SW
D 5 DIODE (for Center Door No.2)
AUTO-DOOR RELAY
J 5 JUNCTION CONNECTOR
J 4 JUNCTION CONNECTOR
A24 AUTOMATIC DOOR CONTROL ECU (for Folding Door Type)
COMBINATION METER
C 4
C 5 BROWN
J 1 JUNCTION CONNECTOR
J 3 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
Instrument panel left (LHD)
Instrument panel right (RHD)
Instrument panel right (LHD)
Instrument panel left (RHD)
15A ECU-IG
30A DOOR
10A GAUGE
J 6 JUNCTION CONNECTOR
SPEED
CENTER DOOR
I 3 IGNITION SW
ACC
IG1
ST1
AM1
TAIL RELAY
10A TAIL
See Taillight System <8-1>
S11 STEP LIGHT (for Folding Door Type)
D 8 DIODE (for Step Light)
From Accel Inter-Lock Relay No.2<14-3><14-4>
7.5A ECU-B
F17 FUSE BLOCK NO.2
50A AM1
30A AM2
30A AM FR
F16 FUSE BLOCK NO.1
80A ALT (*5)
100A ALT (*4)
FL MAIN 3.0W
BATTERY
BATTERY
(*15)
(*3)
EB: *13
EB: *14
BE: *11
EB: *12
(3RZ-F)
(*9)
(*10)