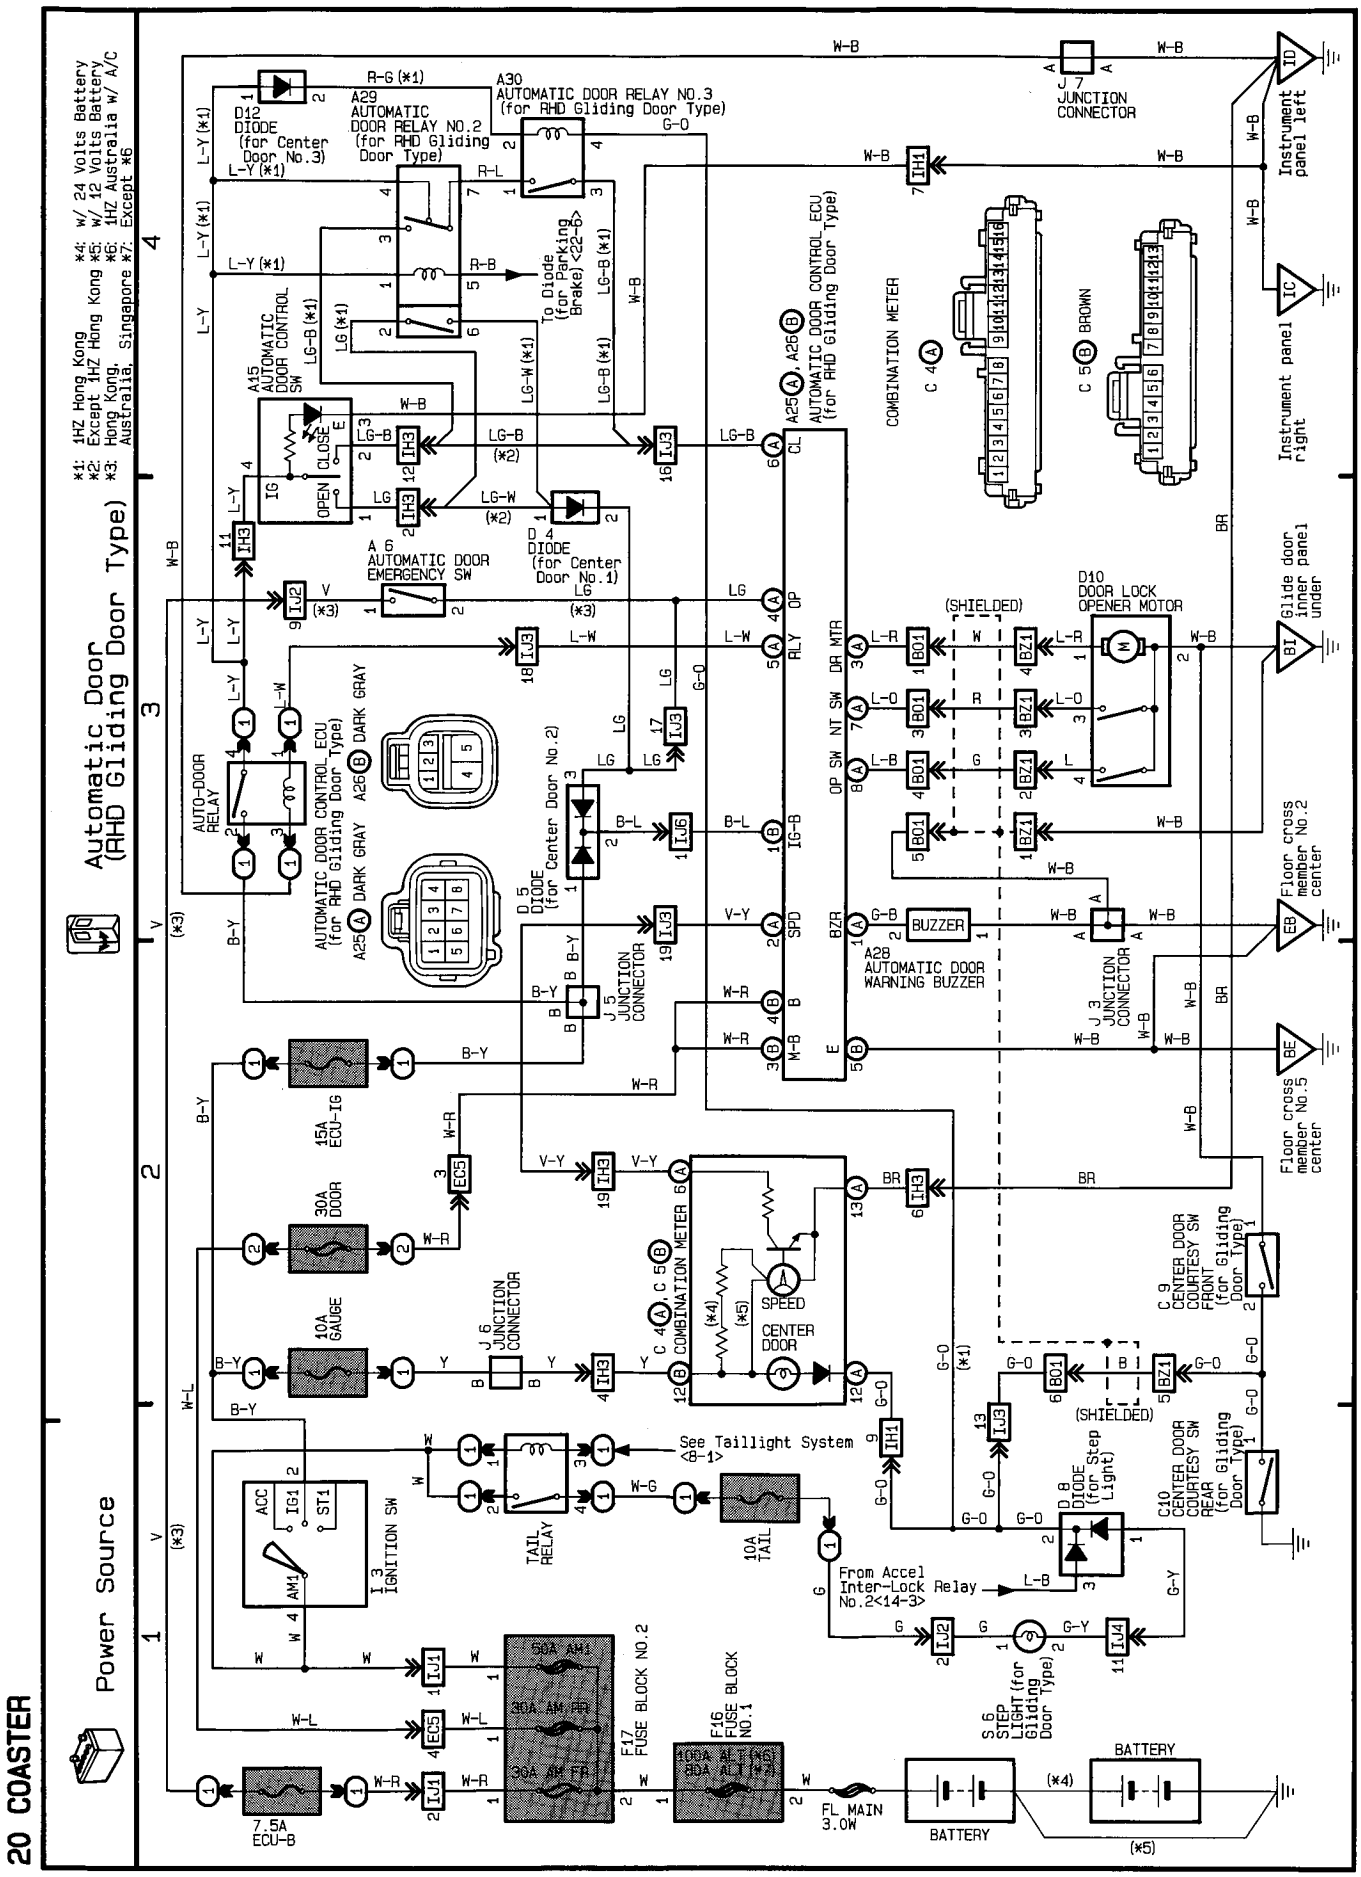

20 COACST
Power Source
Automatic Door
(RHD Gliding Door Type)
*1: 1HZ Hong Kong
*2: Except 1HZ Hong Kong
*3: Hong Kong, Australia, Singapore
*4: w/ 24 Volts Battery
*5: w/ 12 Volts Battery
*6: 1HZ Australia w/ A/C
*7: Except *6
7.5A ECU-B
15A ECU-IG
30A DOOR
10A GAUGE
10A TAIL
50A AM1
30A AM1 FR
30A AM1 RR
100A ALT (NO)
80A ALT (*7)
F16 FUSE BLOCK NO.1
F17 FUSE BLOCK NO.2
FL MAIN 3.0W
BATTERY
I 3 IGNITION SW
TAIL RELAY
AUTO-DOOR RELAY
D12 DIODE (for Center Door No.3)
A29 AUTOMATIC DOOR RELAY NO.2 (for RHD Gliding Door Type)
A30 AUTOMATIC DOOR RELAY NO.3 (for RHD Gliding Door Type)
A15 AUTOMATIC DOOR CONTROL SW
A 6 AUTOMATIC DOOR EMERGENCY SW
D 4 DIODE (for Center Door No.1)
D 5 DIODE (for Center Door No.2)
To Diode (for Parking Brake) <22-6>
A25, A26 AUTOMATIC DOOR CONTROL ECU (for RHD Gliding Door Type)
AUTOMATIC DOOR CONTROL ECU (for RHD Gliding Door Type)
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
COMBINATION METER
SPEED
CENTER DOOR
D10 DOOR LOCK OPENER MOTOR
(SHIELDED)
C 9 CENTER DOOR COURTESY SW FRONT (for Gliding Door Type)
C10 CENTER DOOR COURTESY SW REAR (for Gliding Door Type)
D 8 DIODE (for Step Light)
From Accel Inter-Lock Relay No.2<14-3>
S 6 STEP LIGHT (for Gliding Door Type)
See Taillight System <8-1>
J 3 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
Instrument panel left
Instrument panel right
Glide door inner panel under
Floor cross member No.2 center
Floor cross member No.5 center