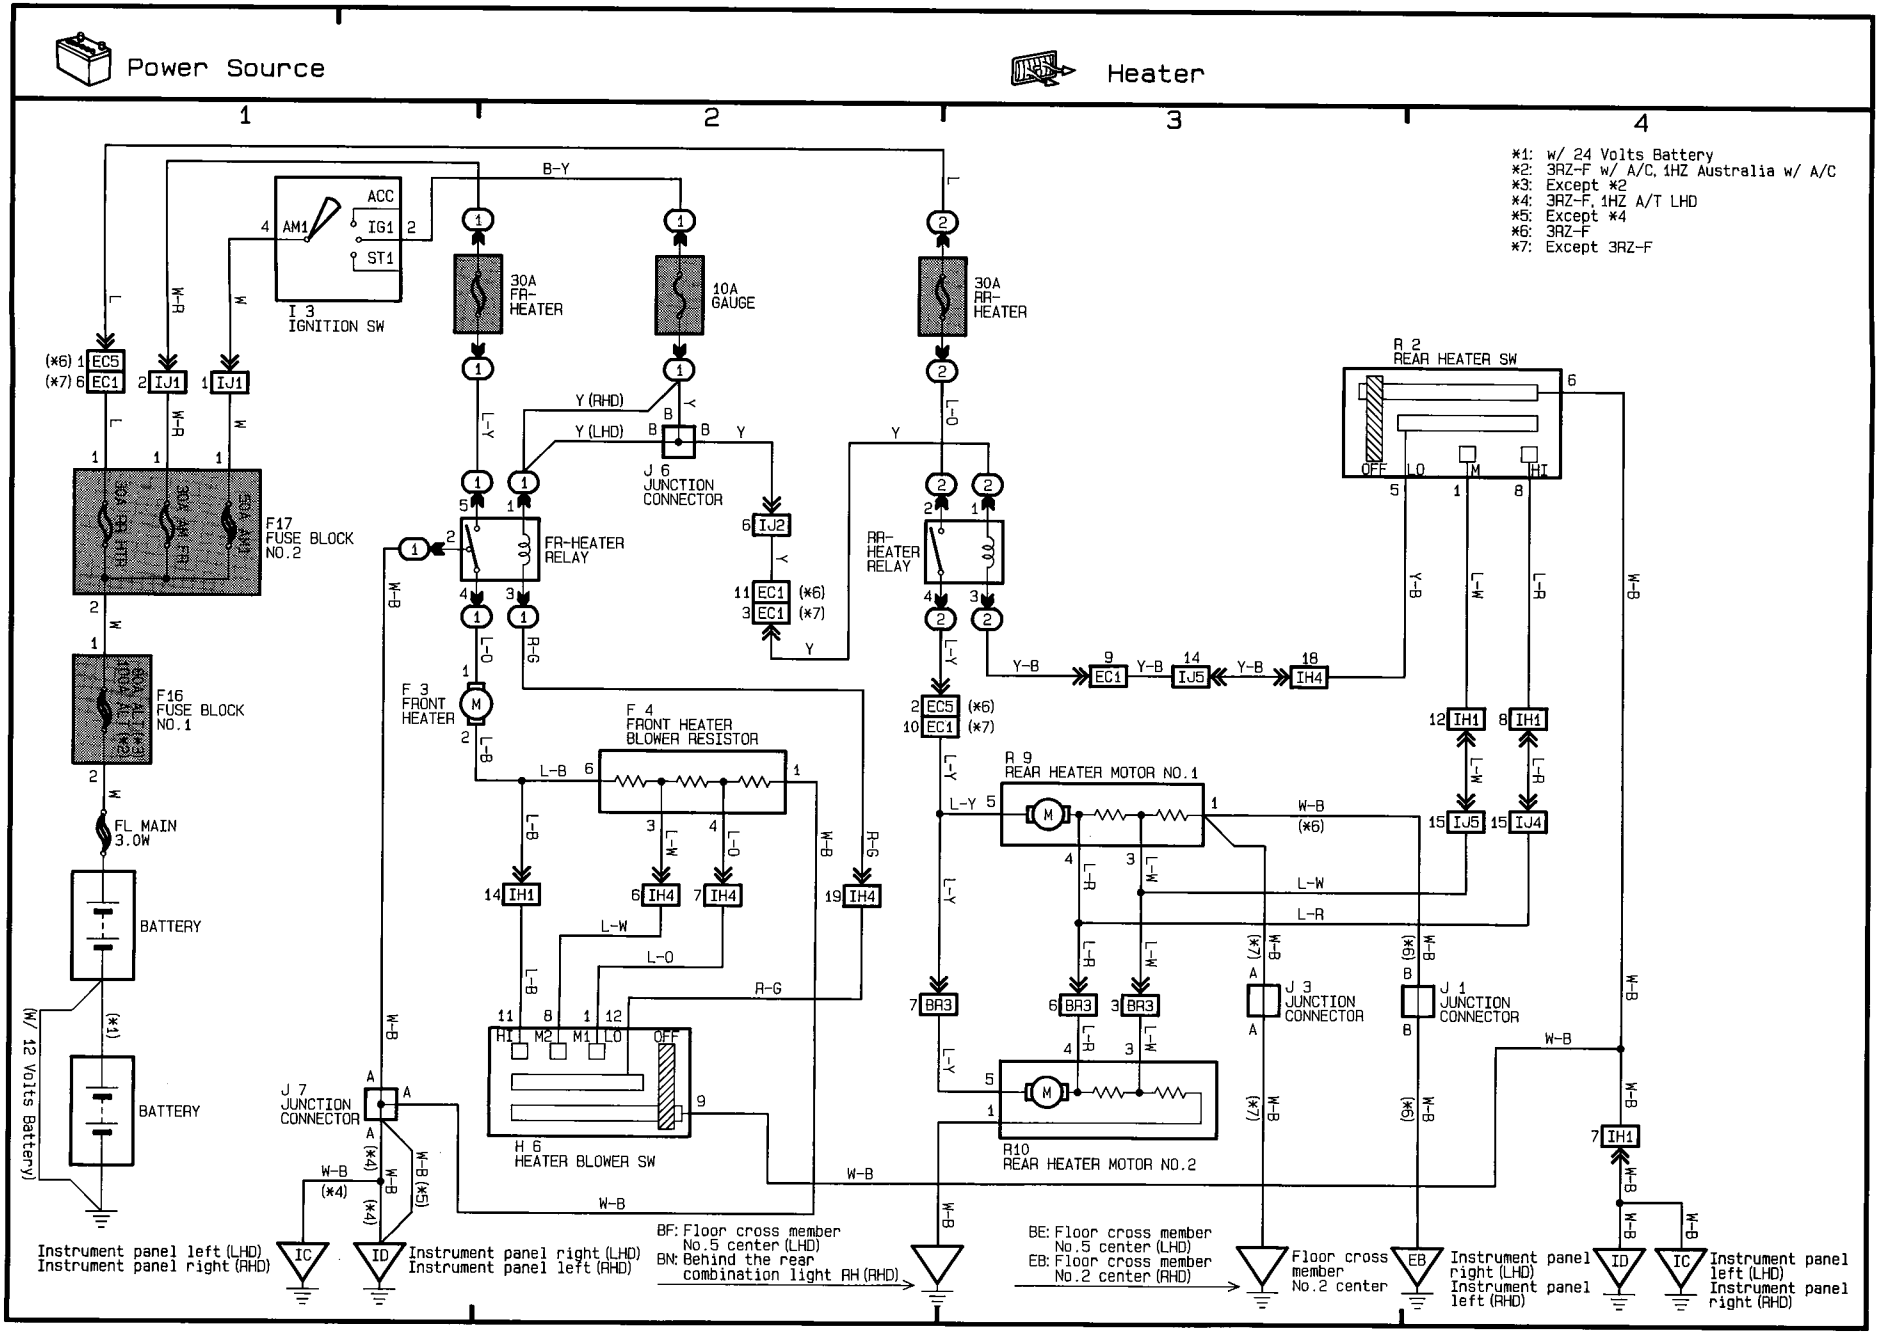

Power Source
Heater
1
2
3
4
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*3: Except *2
*4: 3RZ-F, 1HZ A/T LHD
*5: Except *4
*6: 3RZ-F
*7: Except 3RZ-F
I 3 IGNITION SW
ACC
IG1
ST1
AM1
30A FR-HEATER
10A GAUGE
30A RR-HEATER
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
FL MAIN 3.0W
BATTERY
(W/ 12 Volts Battery)
J 6 JUNCTION CONNECTOR
FR-HEATER RELAY
RR-HEATER RELAY
F 3 FRONT HEATER
F 4 FRONT HEATER BLOWER RESISTOR
H 6 HEATER BLOWER SW
R 2 REAR HEATER SW
R 9 REAR HEATER MOTOR NO.1
R10 REAR HEATER MOTOR NO.2
J 7 JUNCTION CONNECTOR
J 3 JUNCTION CONNECTOR
J 1 JUNCTION CONNECTOR
Instrument panel left (LHD)
Instrument panel right (RHD)
Instrument panel right (LHD)
Instrument panel left (RHD)
BF: Floor cross member No.5 center (LHD)
BN: Behind the rear combination light RH (RHD)
BE: Floor cross member No.5 center (LHD)
EB: Floor cross member No.2 center (RHD)
Floor cross member No.2 center
Instrument panel right (LHD)
Instrument panel left (RHD)
Instrument panel left (LHD)
Instrument panel right (RHD)