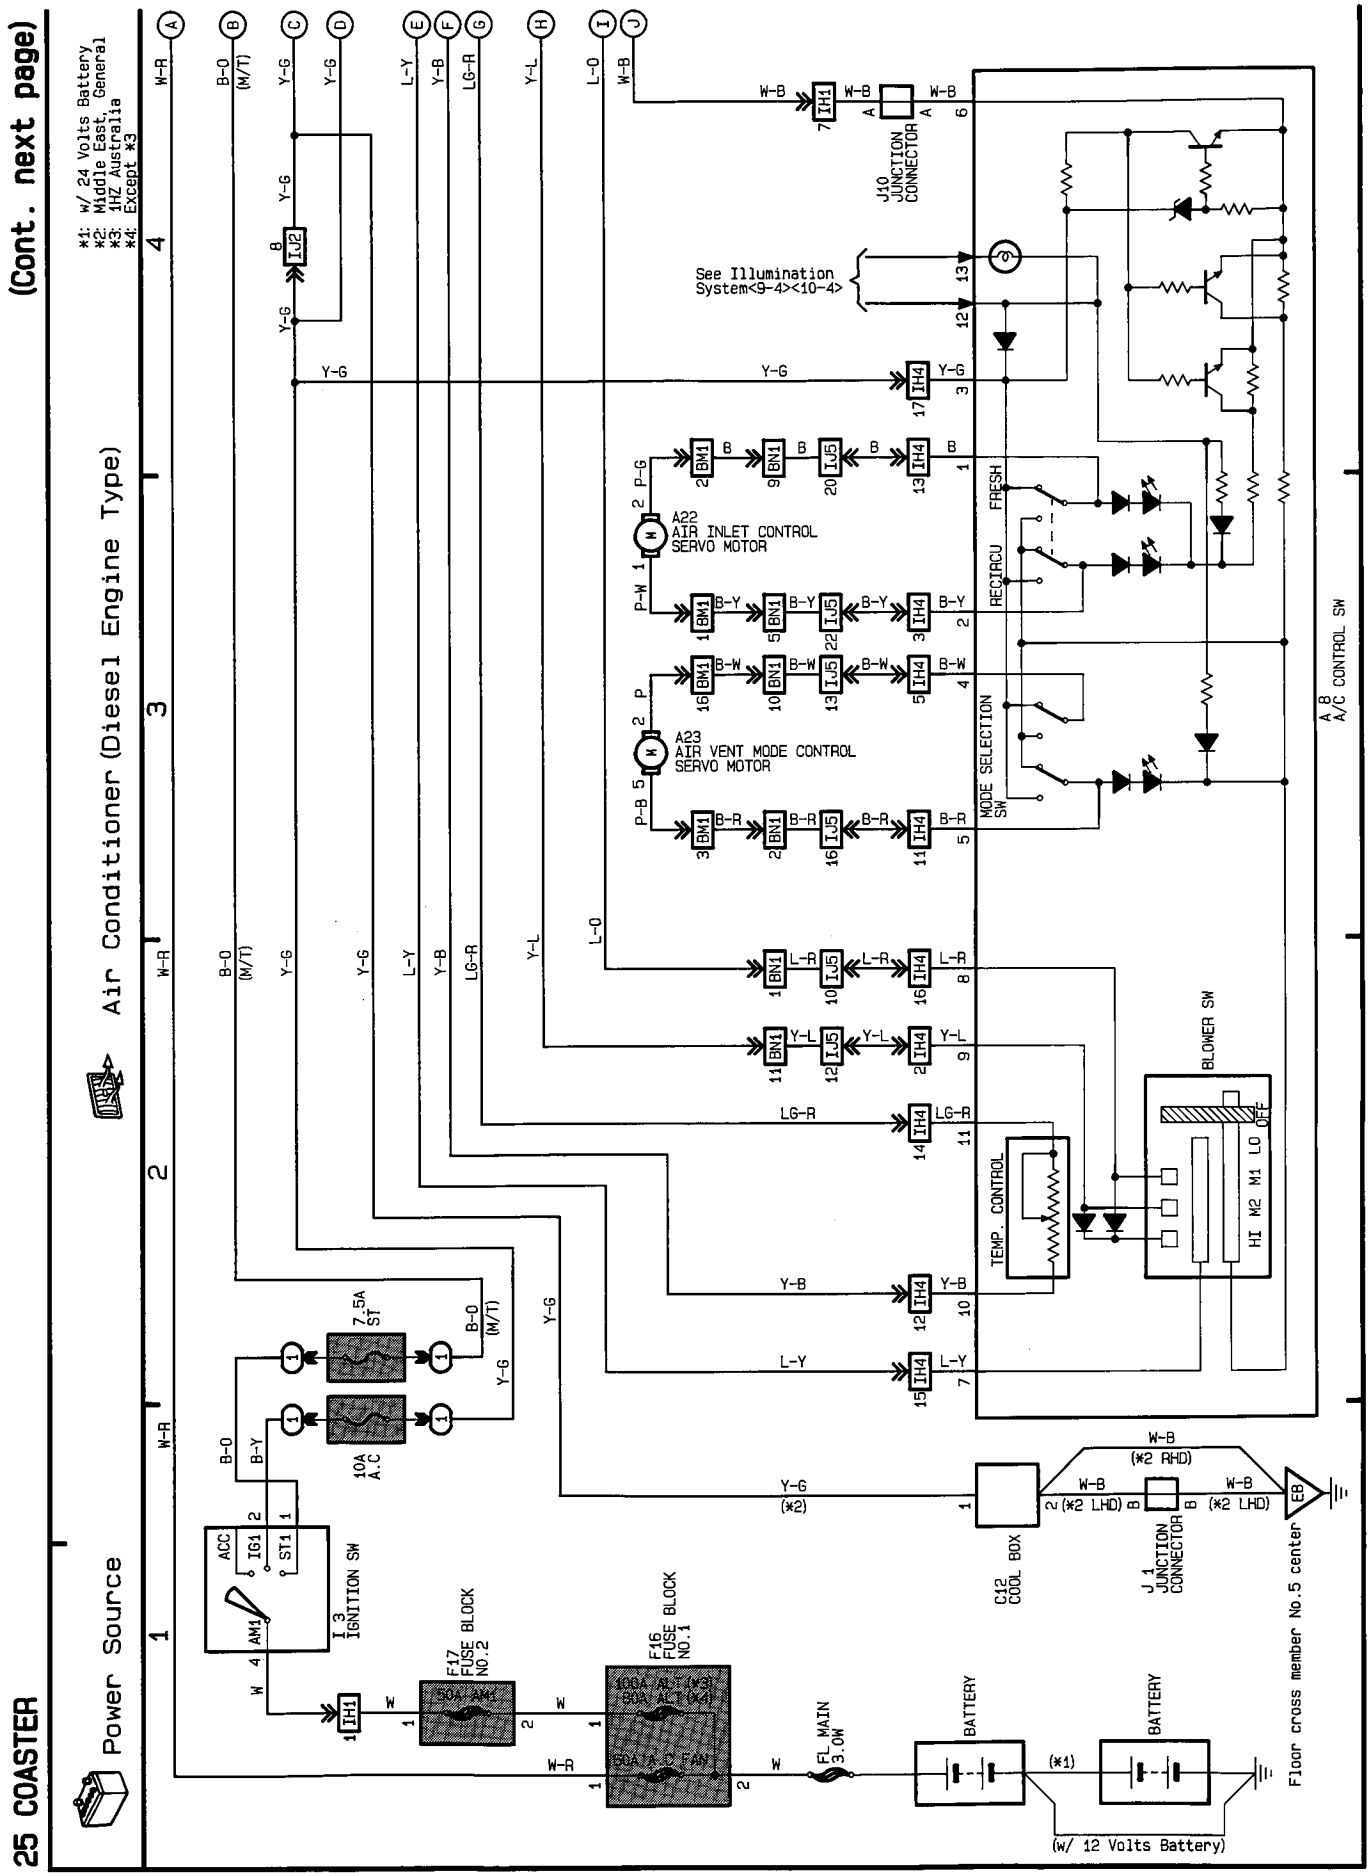

25 COACTER
(Cont. next page)
Power Source
Air Conditioner (Diesel Engine Type)
*1: w/ 24 Volts Battery
*2: Middle East, General
*3: 1HZ Australia
*4: Except *3
See Illumination System<9-4><10-4>
J10 JUNCTION CONNECTOR
A22 AIR INLET CONTROL SERVO MOTOR
A23 AIR VENT MODE CONTROL SERVO MOTOR
MODE SELECTION SW
A8 A/C CONTROL SW
FRESH
RECIRCU
BLOWER SW
HI M2 M1 LO OFF
TEMP. CONTROL
I3 IGNITION SW
ACC IG1 ST1 AM1
F17 FUSE BLOCK NO.2
F46 FUSE BLOCK NO.1
50A AM2
100A ALT (*3) 80A ALT (*4)
50A A/C FAN
7.5A ST
10A A/C
FL MAIN 3.0W
BATTERY
(*1)
(w/ 12 Volts Battery)
C12 COOL BOX
J1 JUNCTION CONNECTOR
Floor cross member No.5 center
EB

Air Conditioner (Diesel Engine Type)

