
Position of Parts in Engine Compartment

[LHD : 15B–FT]

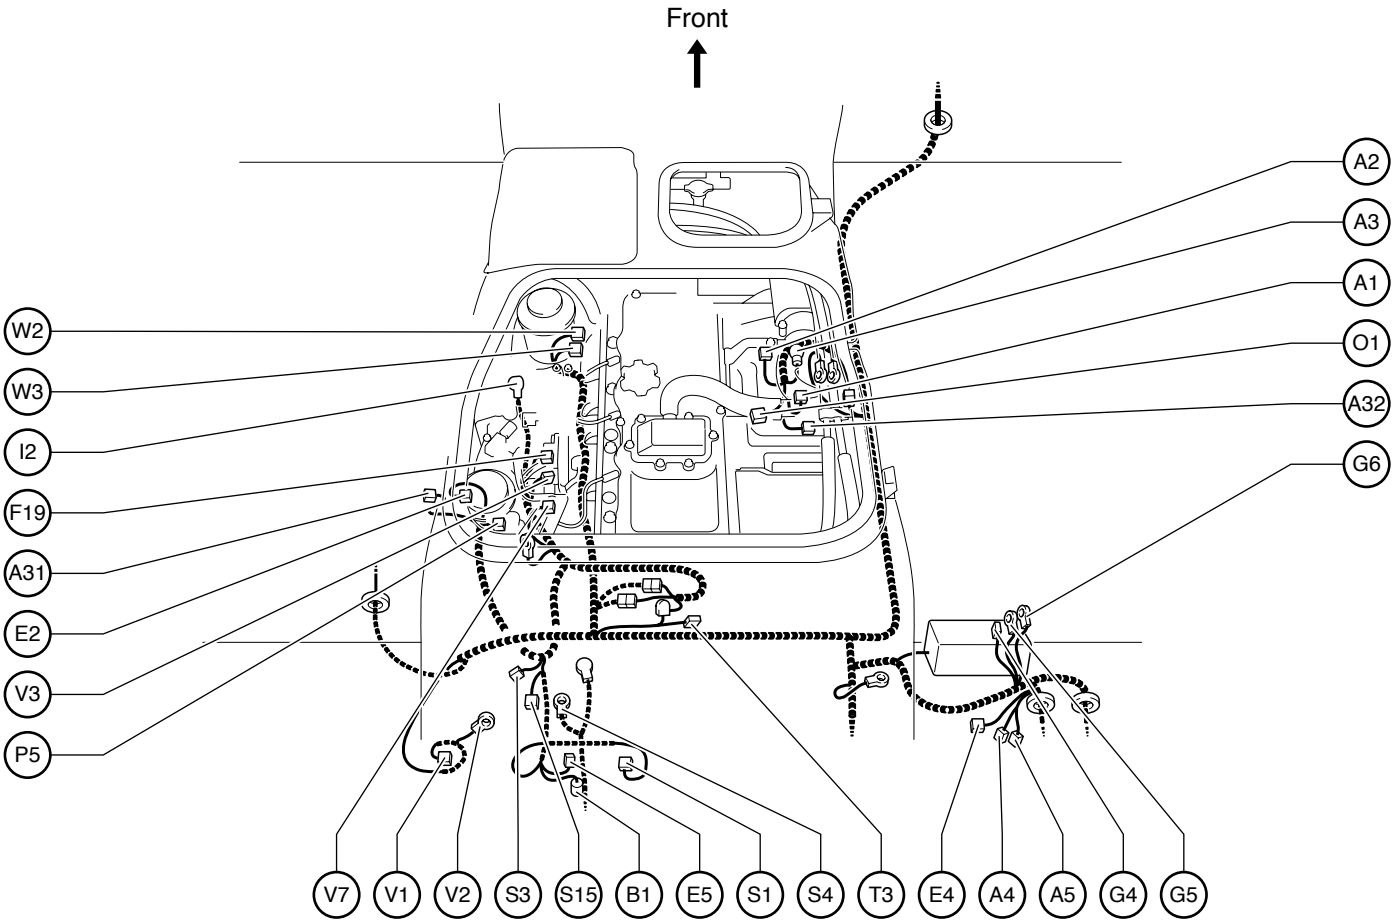

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 4 Automatic Door Control ECU (LHD Gliding Door Type)
A 5 Automatic Door Control ECU (LHD Gliding Door Type)
A31 ABS Speed Sensor Front LH
A32 ABS Speed Sensor Front RH

B 1 Back–Up Light SW

E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW

F19 Fuel Cut Solenoid

G 4 Glow Plug Relay (Main)
G 5 Glow Plug Relay (Main)
G 6 Glow Plug Relay (Main)

I 2 Intake Heater

O 1 Oil Pressure SW

P 5 Pick–Up Sensor

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter
S15 Shift Position Indicator SW

T 3 Turbo Pressure SW

V 1 Vacuum SW (+)
V 2 Vacuum SW (–)
V 3 VSV (A/C Idle–Up)
V 7 VSV (Power Control System)

W 2 Water Temp. Sender
W 3 Water Temp. Sensor (Glow)