
Position of Parts in Instrument Panel

[LHD]

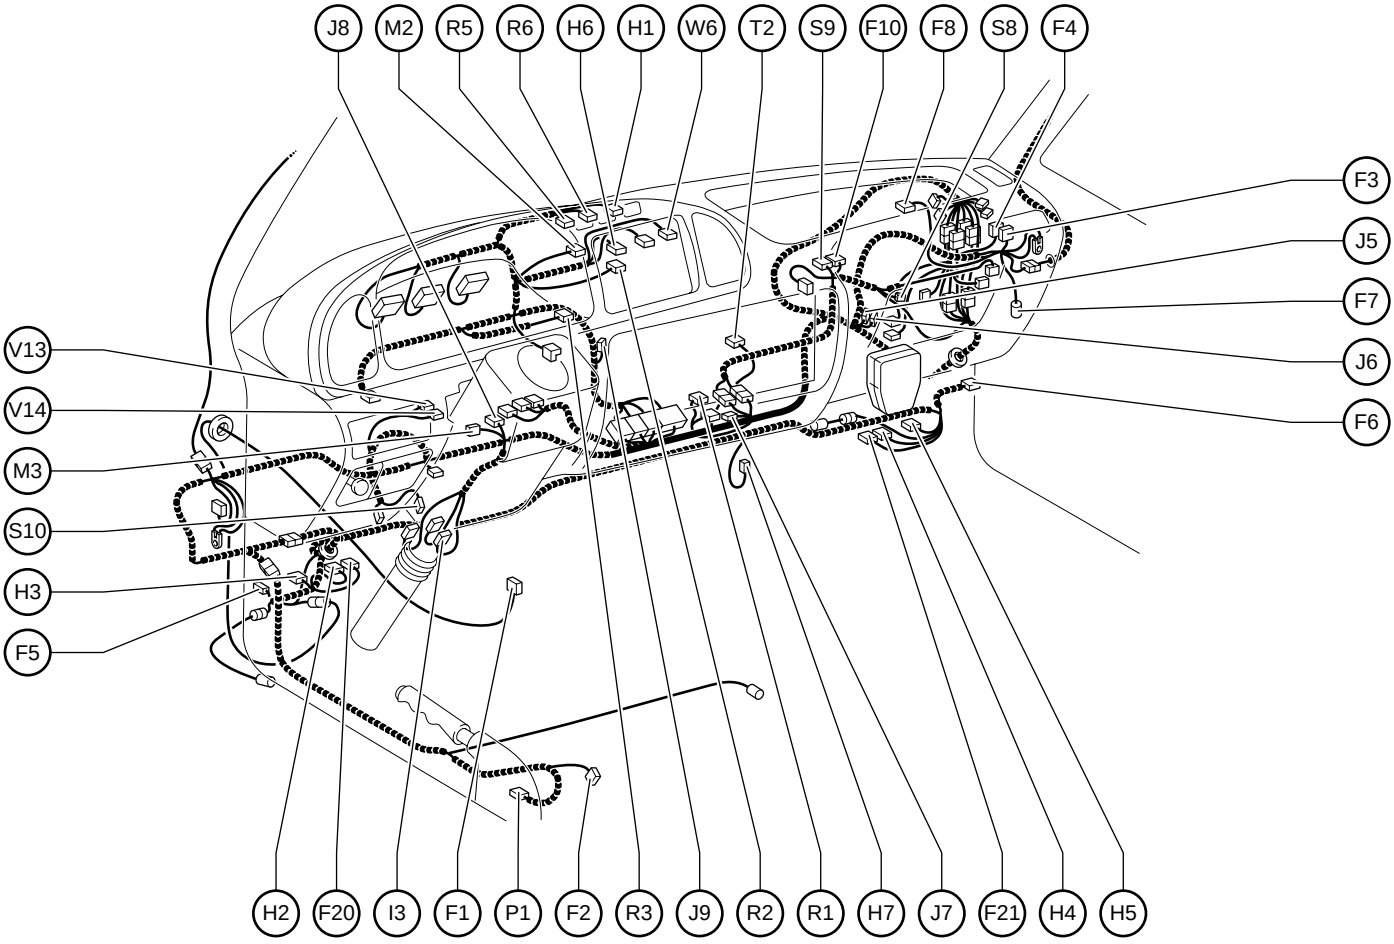

F 1 Front Door Courtesy Light
F 2 Front Door Courtesy SW
F 3 Front Heater
F 4 Front Heater Blower Resistor
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 7 Front Washer Motor
F 8 Front Wiper Motor
F 10 Fuel Sedimentary Warning Buzzer
F 20 Front Fog Light LH
F 21 Front Fog Light RH

H 1 Hazard SW
H 2 Headlight LH (Hi)
H 3 Headlight LH (Hi–Lo)
H 4 Headlight RH (Hi)
H 5 Headlight RH (Hi–Lo)
H 6 Heater Blower SW
H 7 Horn

I 3 Ignition SW

J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector

M 2 Max Warm SW
M 3 Master Cylinder Pressure Sensor

P 1 Parking Brake SW

R 1 Radio
R 2 Rear Heater SW
R 3 Rear Window Defogger SW
R 5 Room Light SW No.1
R 6 Room Light SW No.2

S 8 Seat Belt Warning Relay
S 9 Speed Warning Buzzer
S 10 Stop Light SW

T 2 Tachograph

V 13 Vacuum Sensor 1 (Brake)
V 14 Vacuum Sensor 2 (Brake)

W 6 Warm–Up SW