
Position of Parts in Body

[LHD : Luggage Room Type]

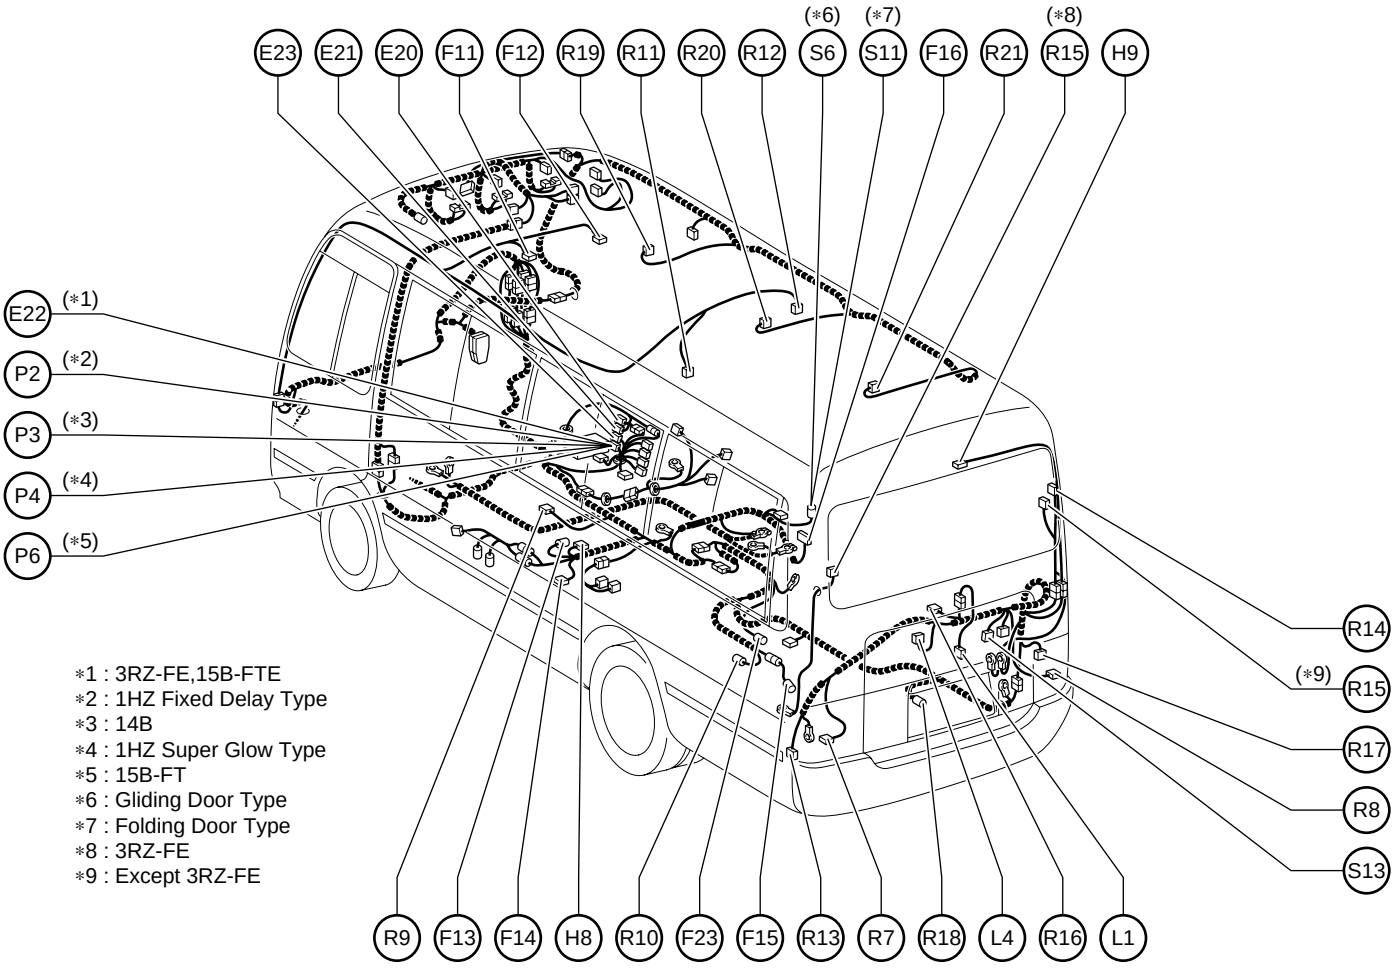

E20 Engine ECU
E21 Engine ECU
E22 Engine ECU
E23 Engine ECU

F 11 Front Speaker LH
F 12 Front Speaker RH
F 13 Fuel Heater
F 14 Fuel Sedimentary SW
F 15 Fuel Sender
F 16 Fuse Block
F 23 Fuel Pump

H 8 Heater Pump
H 9 High Mounted Stop Light

L 1 License Plate Light (Luggage Room Type)
L 4 Luggage Room Light

P 2 Pre–Heating Timer (Fixed Delay Type)
P 3 Pre–Heating Timer (Intake Heater)
P 4 Pre–Heating Timer (Super Glow Type)
P 6 Pre–Heating Timer (15B–FT)

R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Heater Motor No.1
R10 Rear Heater Motor No.2
R 11 Rear Speaker LH
R12 Rear Speaker RH
R13 Rear Washer Motor
R14 Rear Window Defogger
R15 Rear Window Defogger
R16 Rear Wiper Motor
R17 Rear Wiper Relay
R18 Reverse Warning Buzzer
R19 Room Light No.1
R20 Room Light No.2
R21 Room Light No.3

S 6 Step Light (Gliding Door Type)
S 11 Step Light (Folding Door Type)
S 13 Short Connector (Rear Lights)