
Position of Parts in Engine Compartment

[RHD : 1HZ]

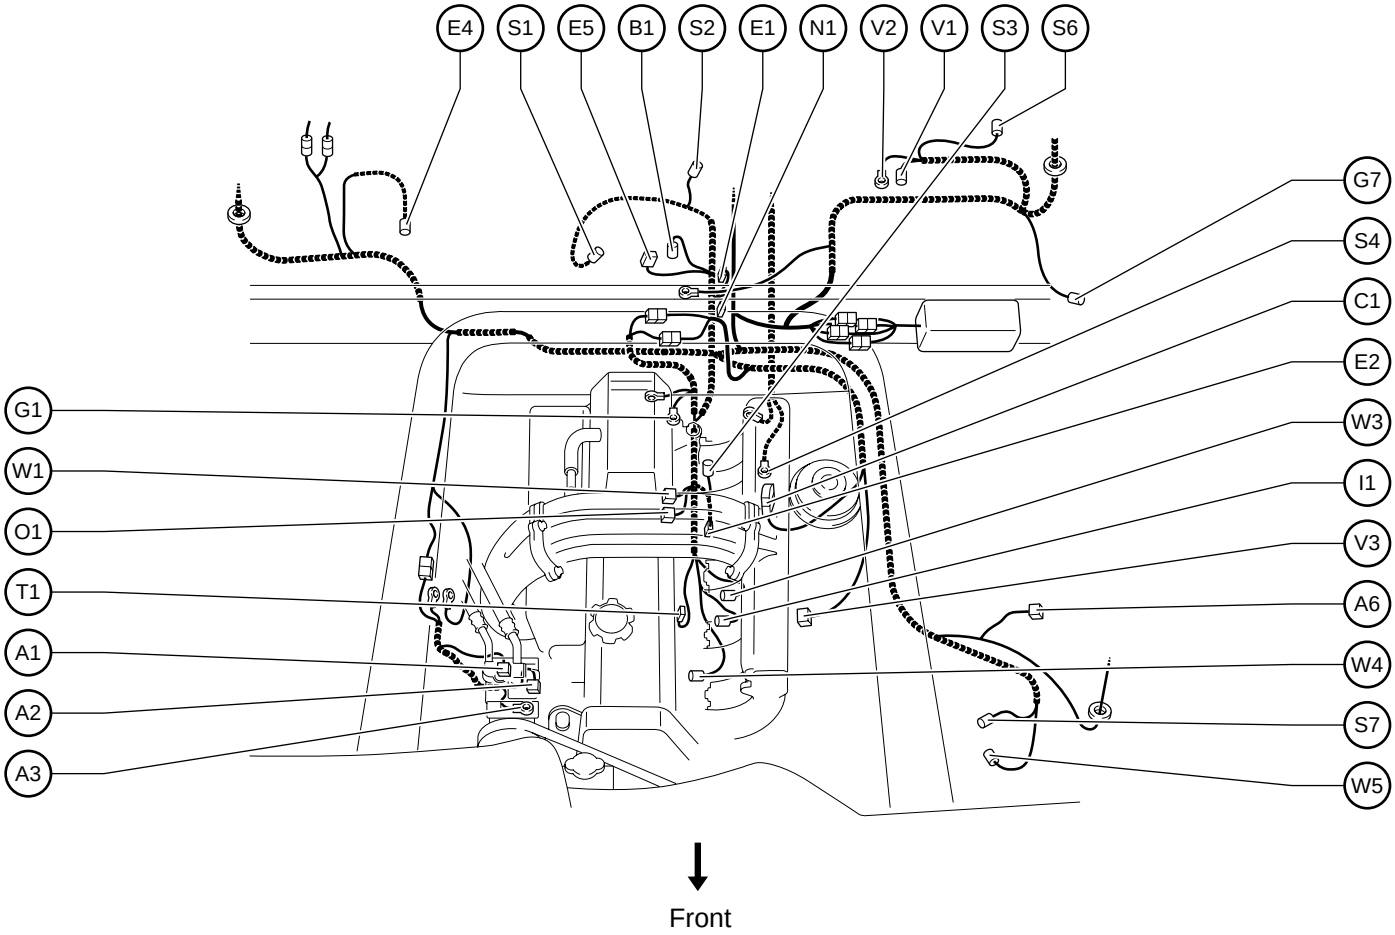

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 6 Automatic Door Emergency SW

B 1 Back–Up Light SW

C 1 Check Connector

E 1 ECT Solenoid
E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW

G 1 Glow Plug
G 7 Glow Plug Relay (Sub)

I 1 Injector Pump

N 1 Neutral Start SW (A/T)

O 1 Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 2 Speed Sensor (ECT)
S 3 Starter
S 4 Starter
S 6 Step Light (Gliding Door Type)
S 7 Sub Radiator Fan Motor

T 1 Throttle Position Sensor

V 1 Vacuum SW (+)
V 2 Vacuum SW (–)
V 3 VSV (A/C Idle–Up)

W 1 Water Temp. Sender
W 3 Water Temp. Sensor (Glow)
W 4 Water Temp. SW (ECT)
W 5 Water Temp. SW (Sub Radiator Fan)