
## Position of Parts in Engine Compartment

**[RHD : 14B]**

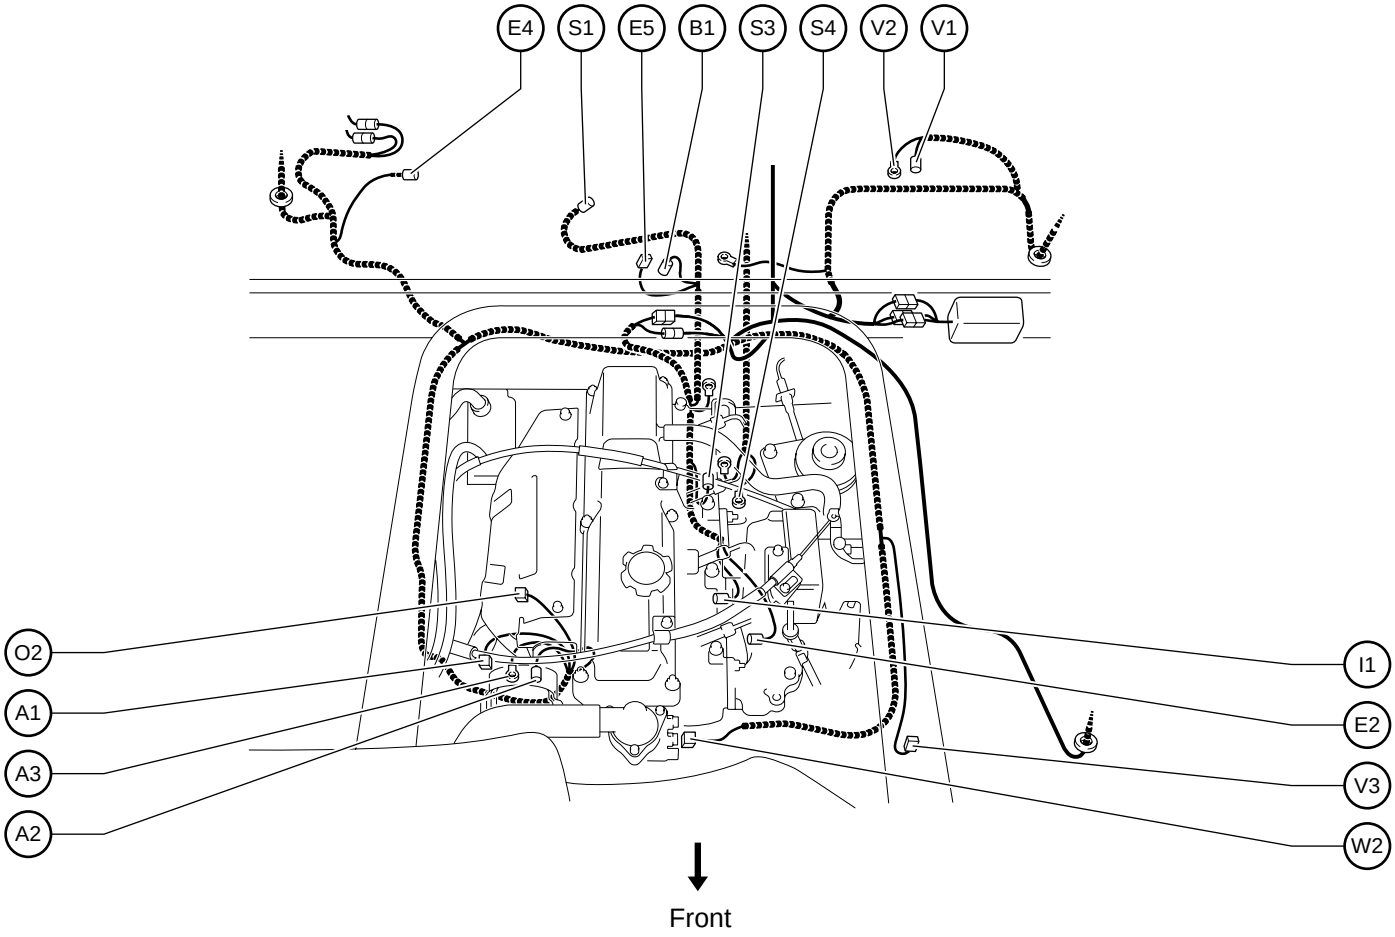


A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator

B 1 Back–Up Light SW

E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW

I 1 Injector Pump

O 2 Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter

V 1 Vacuum SW (+)
V 2 Vacuum SW (–)
V 3 VSV (A/C Idle–Up)

W 2 Water Temp. Sender