
Position of Parts in Instrument Panel

[RHD]

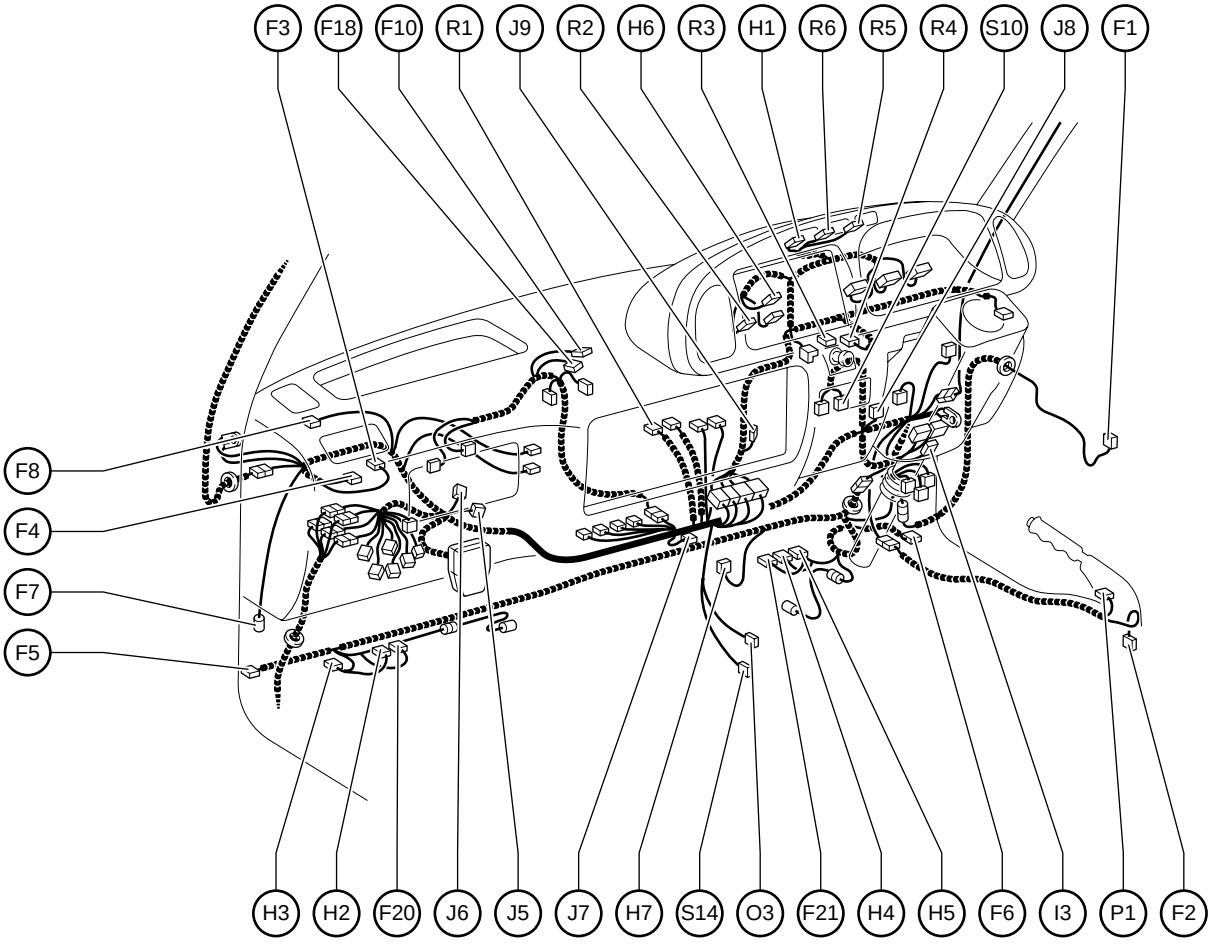

F 1 Front Door Courtesy Light
F 2 Front Door Courtesy SW
F 3 Front Heater
F 4 Front Heater Blower Resistor
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 7 Front Washer Motor
F 8 Front Wiper Motor
F 10 Fuel Sedimentary Warning Buzzer
F 18 Front Reverse Warning Buzzer
F 20 Front Fog Light LH
F 21 Front Fog Light RH

H 1 Hazard SW
H 2 Headlight LH (Hi)
H 3 Headlight LH (Hi–Lo)
H 4 Headlight RH (Hi)
H 5 Headlight RH (Hi–Lo)
H 6 Heater Blower SW
H 7 Horn

I 3 Ignition SW

J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector

O 3 O/D Main SW

P 1 Parking Brake SW

R 1 Radio
R 2 Rear Heater SW
R 3 Rear Window Defogger SW
R 4 Room Light Control SW or Short Pin
R 5 Room Light SW No.1
R 6 Room Light SW No.2

S 10 Stop Light SW
S 14 Shift Lock ECU