
Connector Joining Wire Harness and Wire Harness

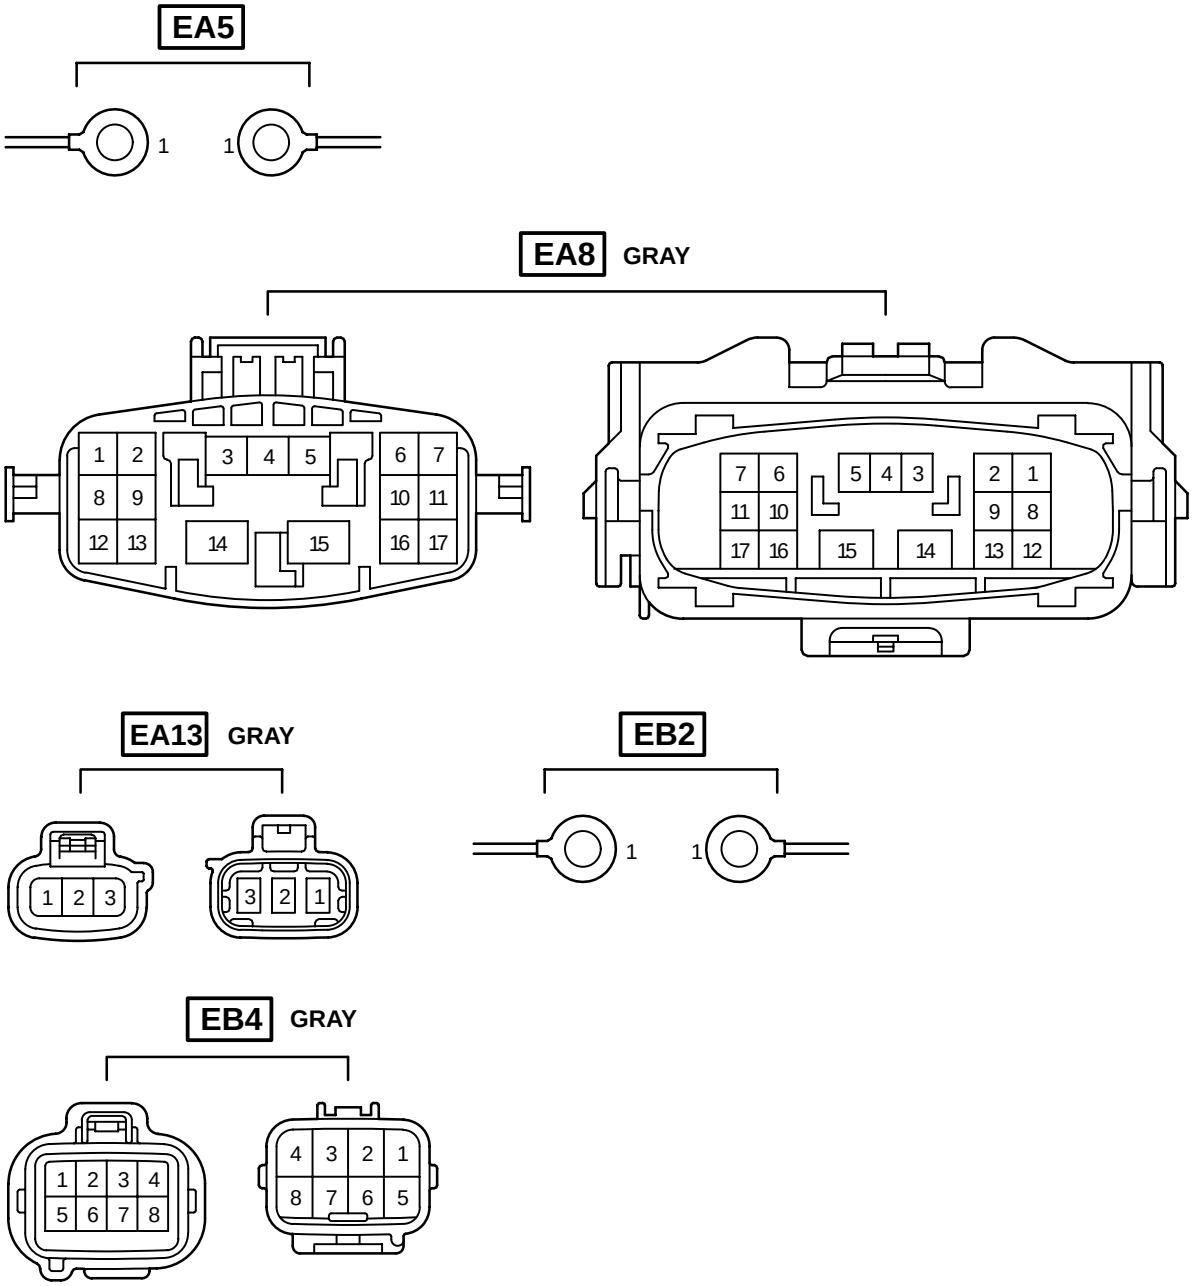

Code	Joining Wire Harness and Wire Harness
EA5	Engine Room Main Wire and Engine Wire
EA8	
EA13	
EB2	Engine Room Main Wire and Alternator Wire
EB4	