
Connector Joining Wire Harness and Wire Harness

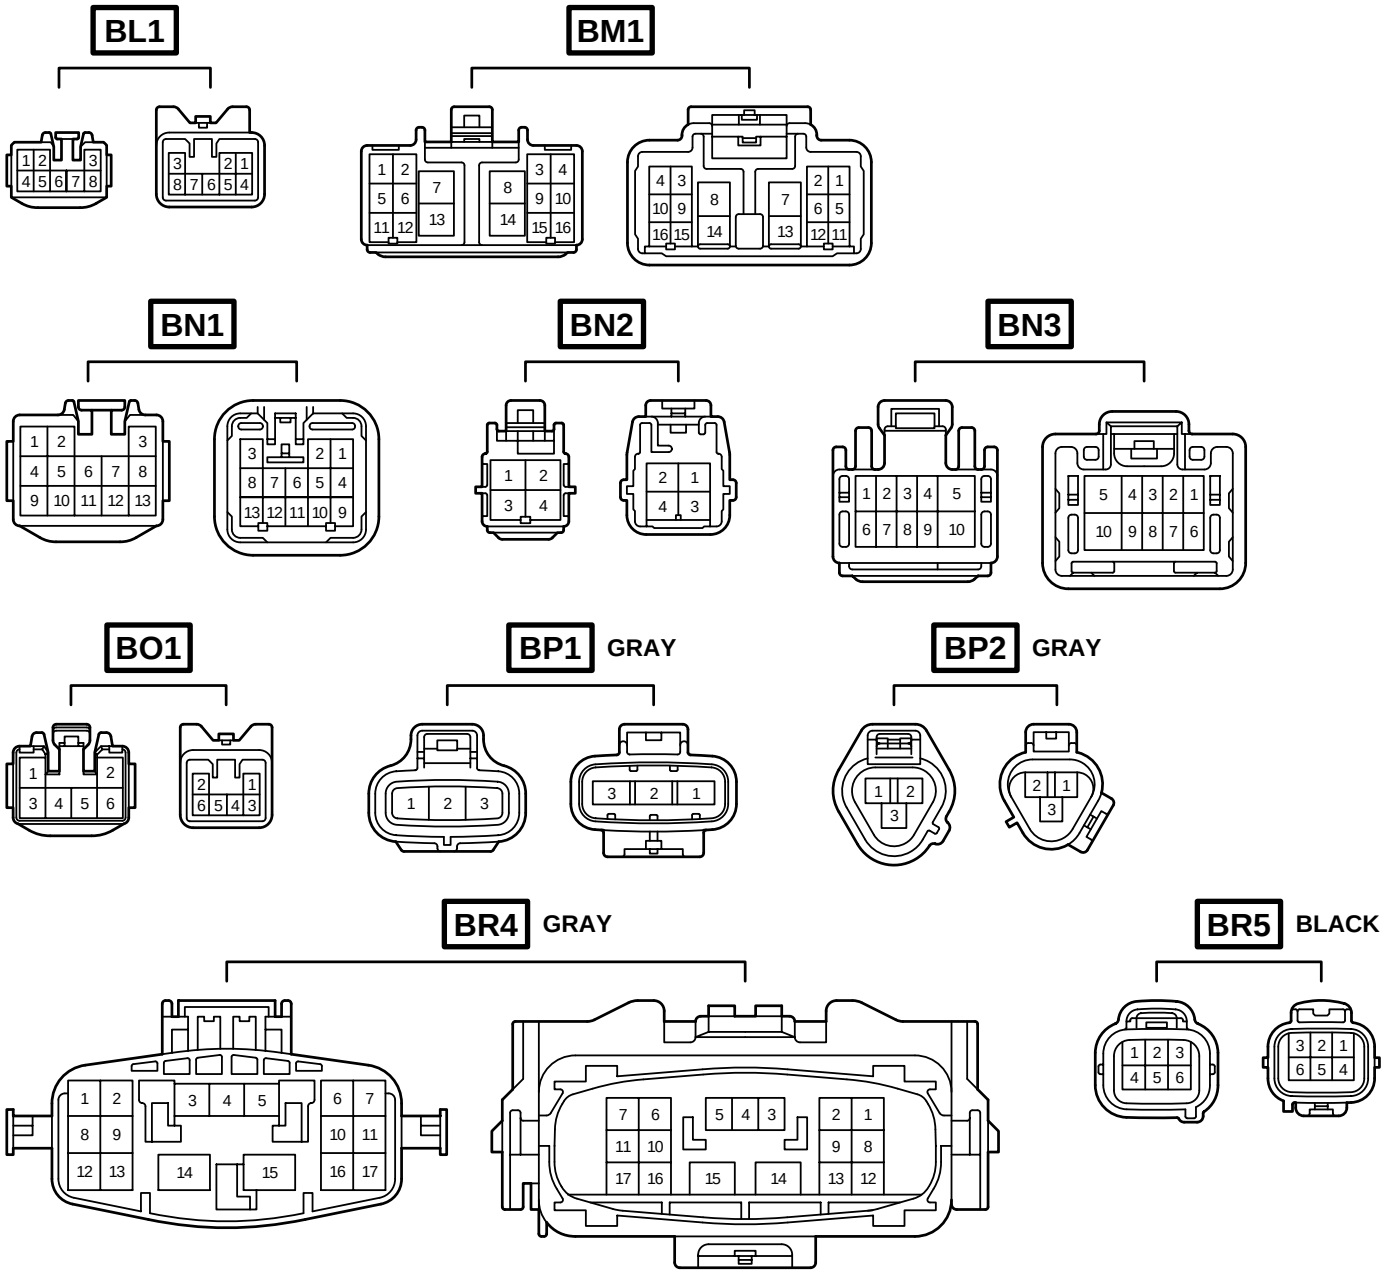

Code	Joining Wire Harness and Wire Harness
BL1	Roof No.3 Wire and Roof Wire
BM1	Roof No.4 Wire and A/C Sub No.1 Wire
BN1	Engine Room Main Wire and Roof No.4 Wire
BN2	
BN3	
BO1	Engine Room Main Wire and Rear Door No.1 Wire
BP1	Engine Room Main Wire and A/C Sub No.2 Wire
BP2	
BR4	Floor Wire and Engine Room Main Wire
BR5	