
Connector Joining Wire Harness and Wire Harness

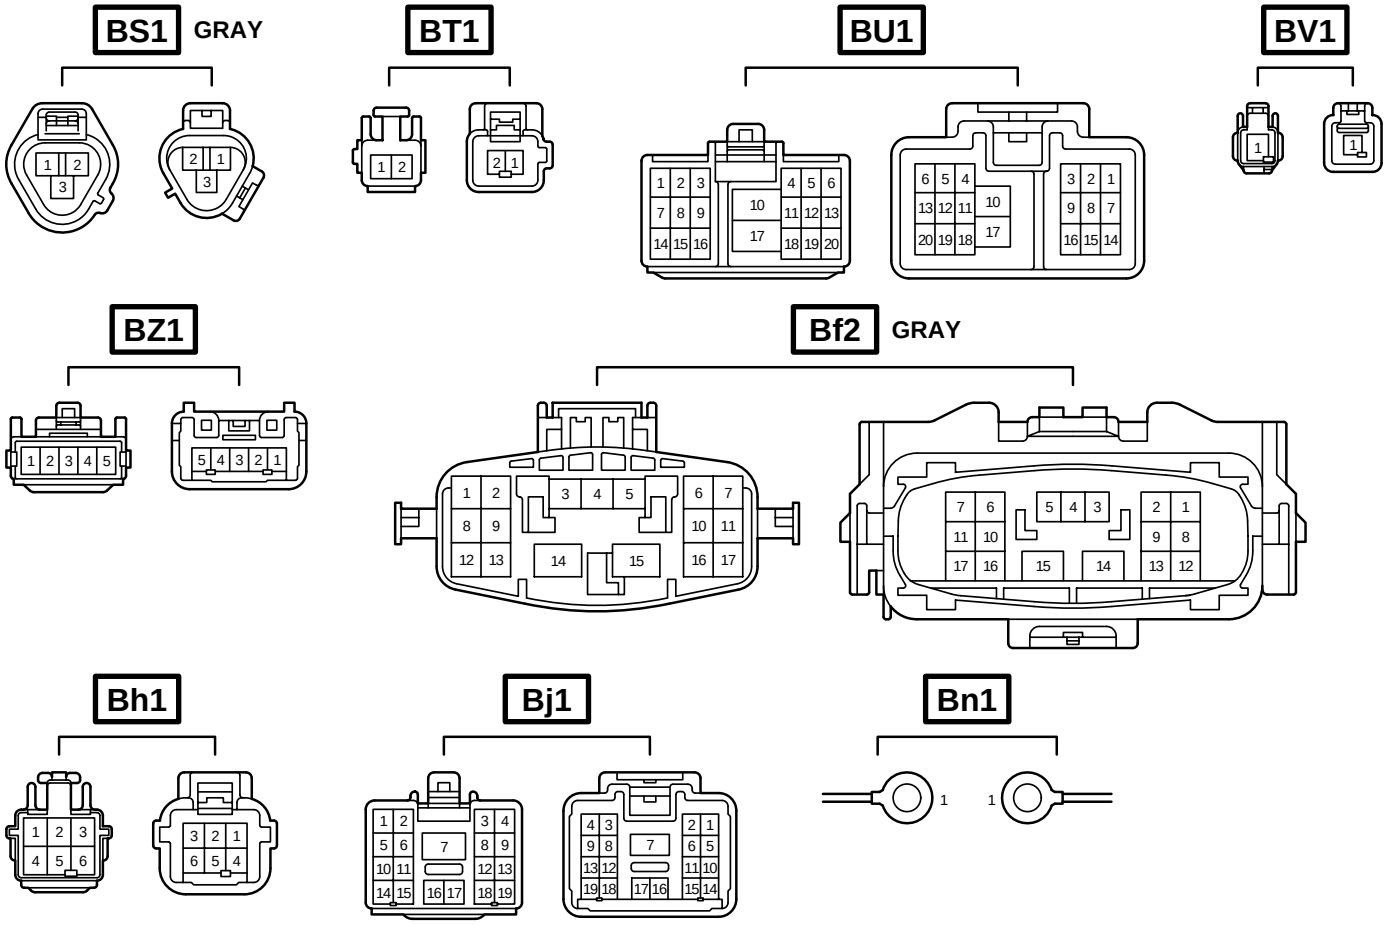

Code	Joining Wire Harness and Wire Harness
BS1	Floor Wire and Gauge Wire
BT1	Floor No.2 Wire and Back Door No.1 Wire
BU1	Floor Wire and Floor No.2 Wire
BV1	Rear Window No.1 Wire and Floor No.2 Wire
BZ1	Rear Door No.1 Wire and Rear Door No.2 Wire
Bf2	Engine Room Main Wire and Frame Wire
Bh1	Pillar No.2 Wire and Floor No.2 Wire
Bj1	Engine Room Main Wire and Engine Wire
Bn1	