
Connector Joining Wire Harness and Wire Harness

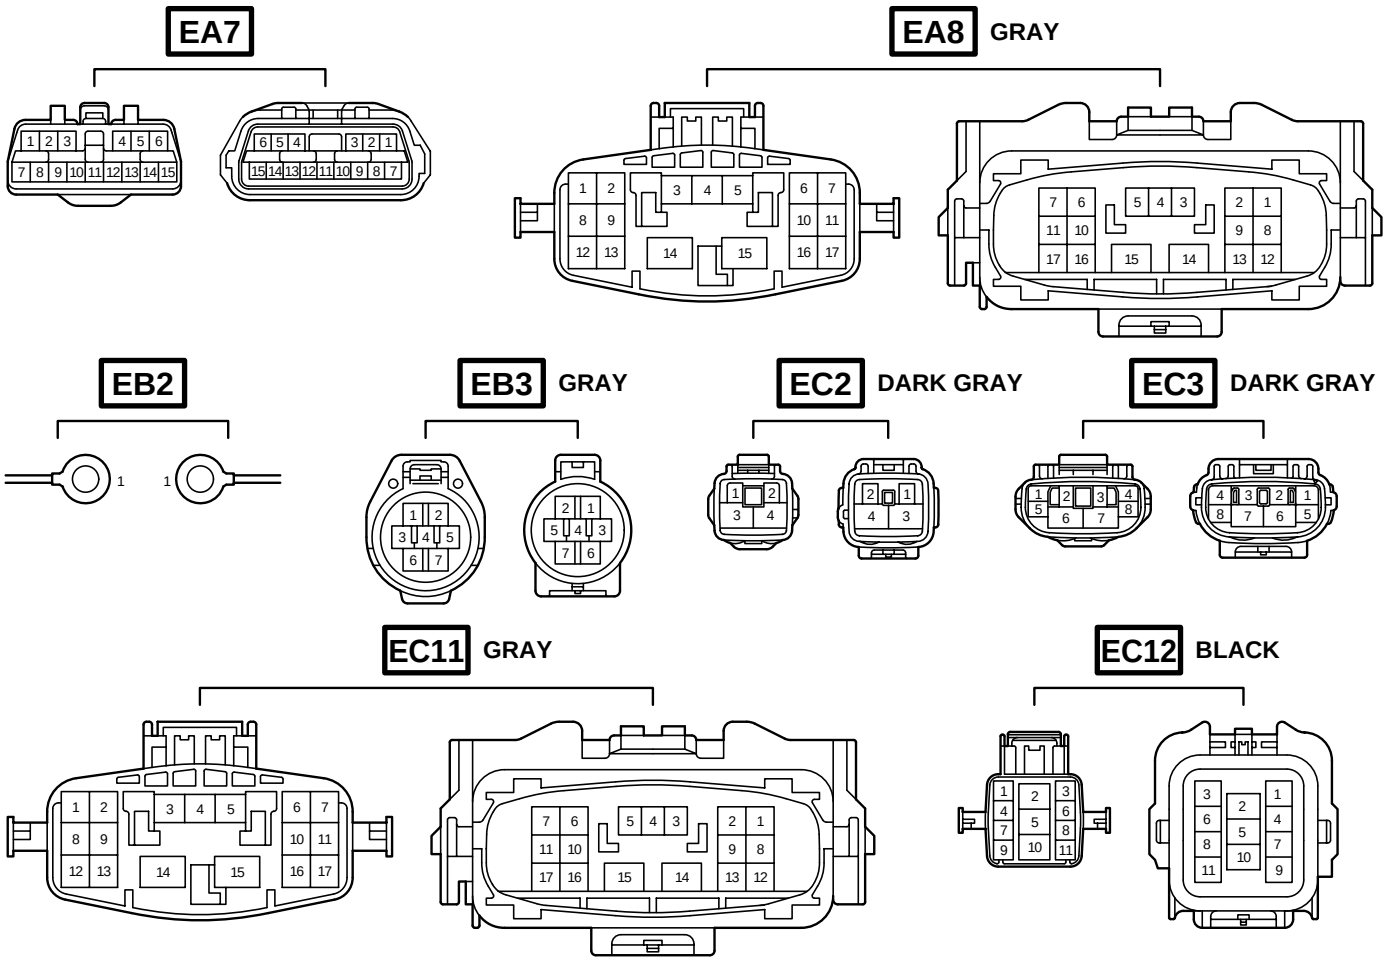

Code	Joining Wire Harness and Wire Harness
EA7	Engine Room Main Wire and Engine Wire
EA8	
EB2	Engine Room Main Wire and Alternator Wire
EB3	
EC2	Engine Room Main Wire and Relay Wire
EC3	
EC11	
EC12	