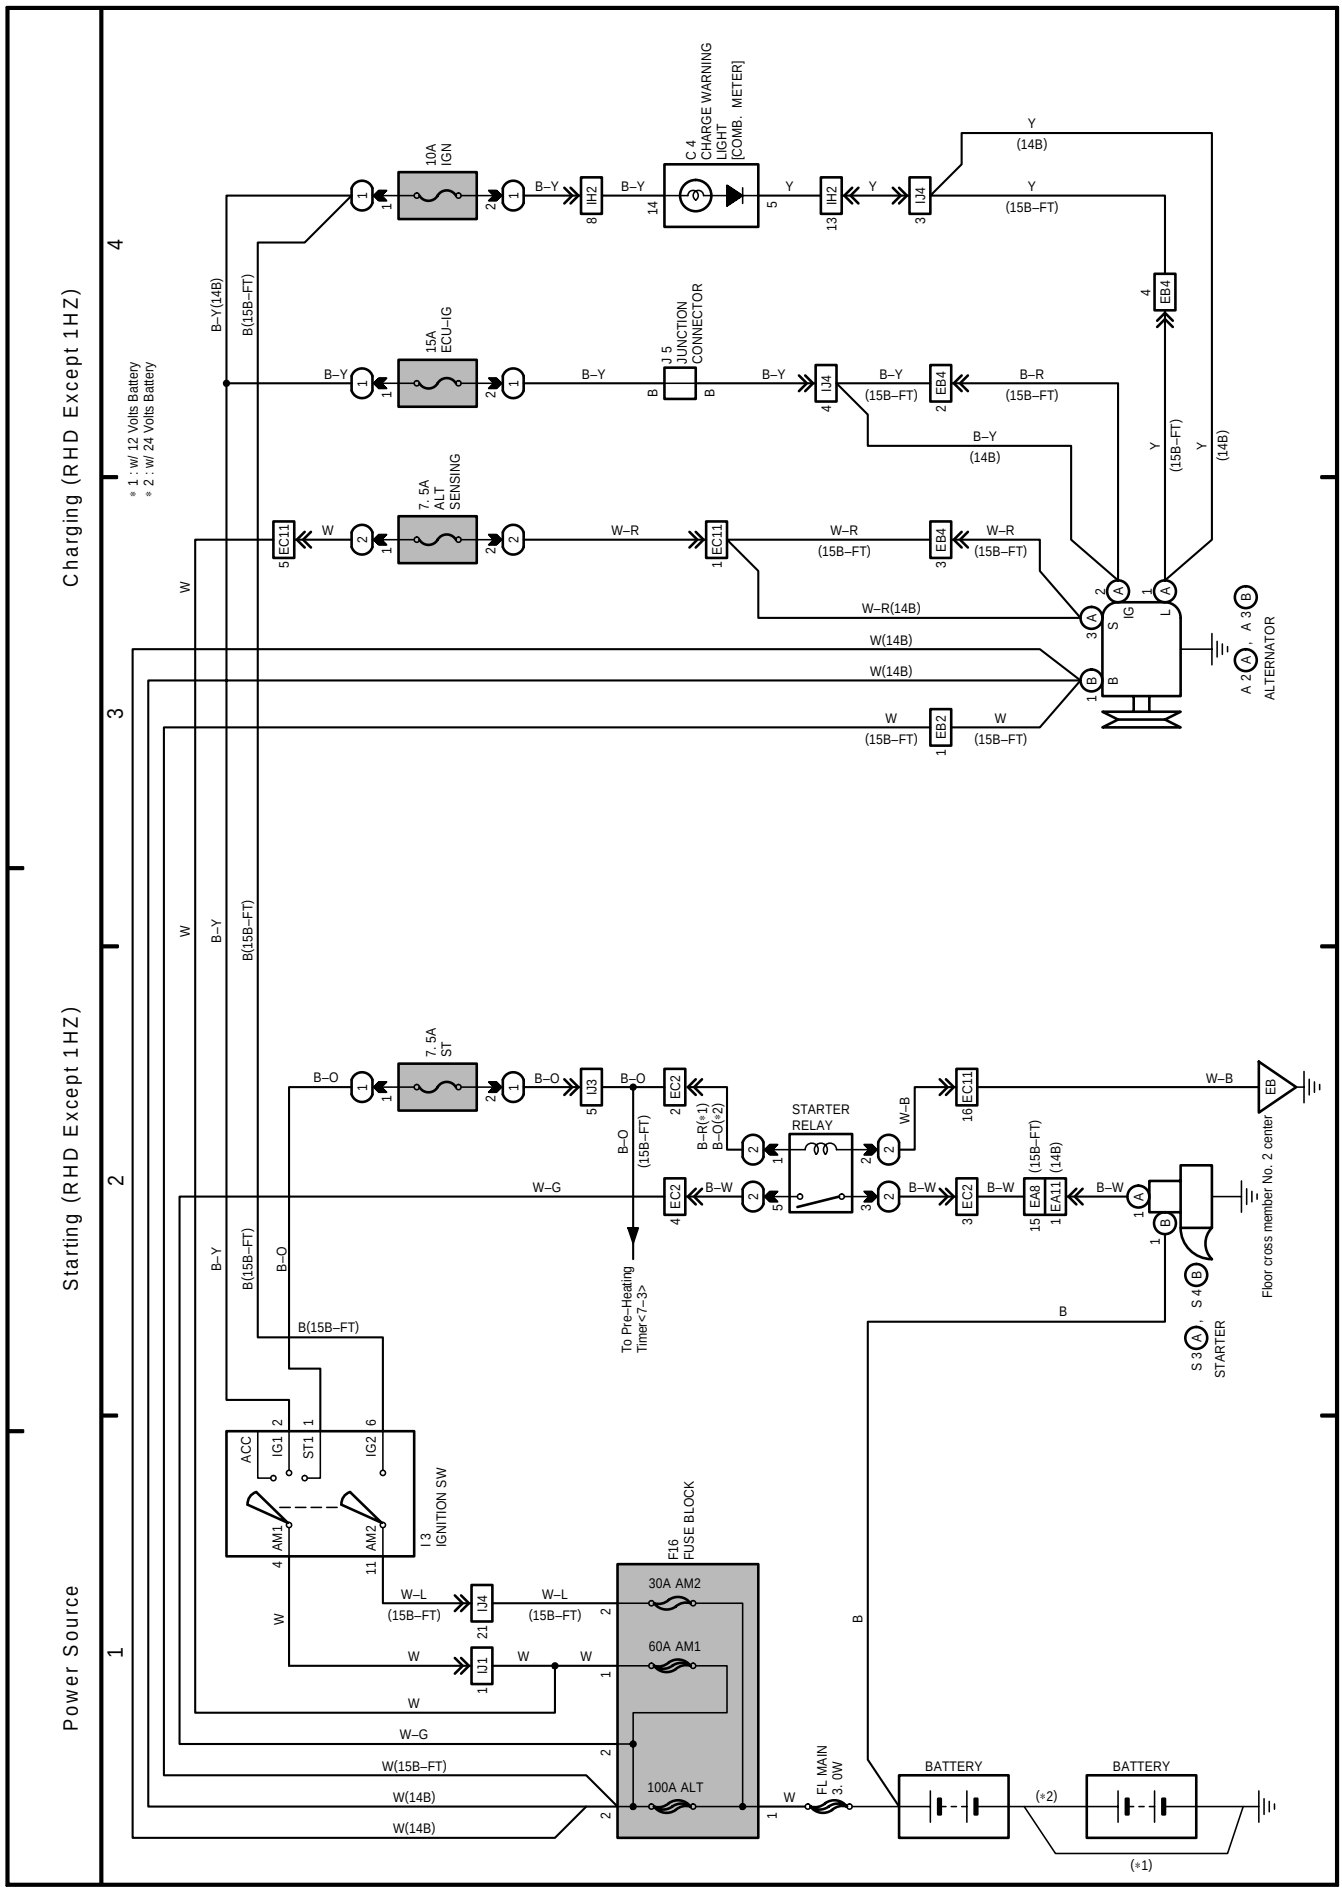

Power Source
Starting (RHD Except 1HZ)
Charging (RHD Except 1HZ)
* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
10A IGN
15A ECU-IG
7. 5A ALT SENSING
7. 5A ST
C 4 CHARGE WARNING LIGHT [COMB. METER]
J 5 JUNCTION CONNECTOR
STARTER RELAY
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
30A AM2
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
ALTERNATOR
STARTER
Floor cross member No. 2 center
To Pre-Heating Timer<7-3>
B–Y(14B)
B(15B–FT)
W(14B)
W(15B–FT)
W–G
W–R(14B)