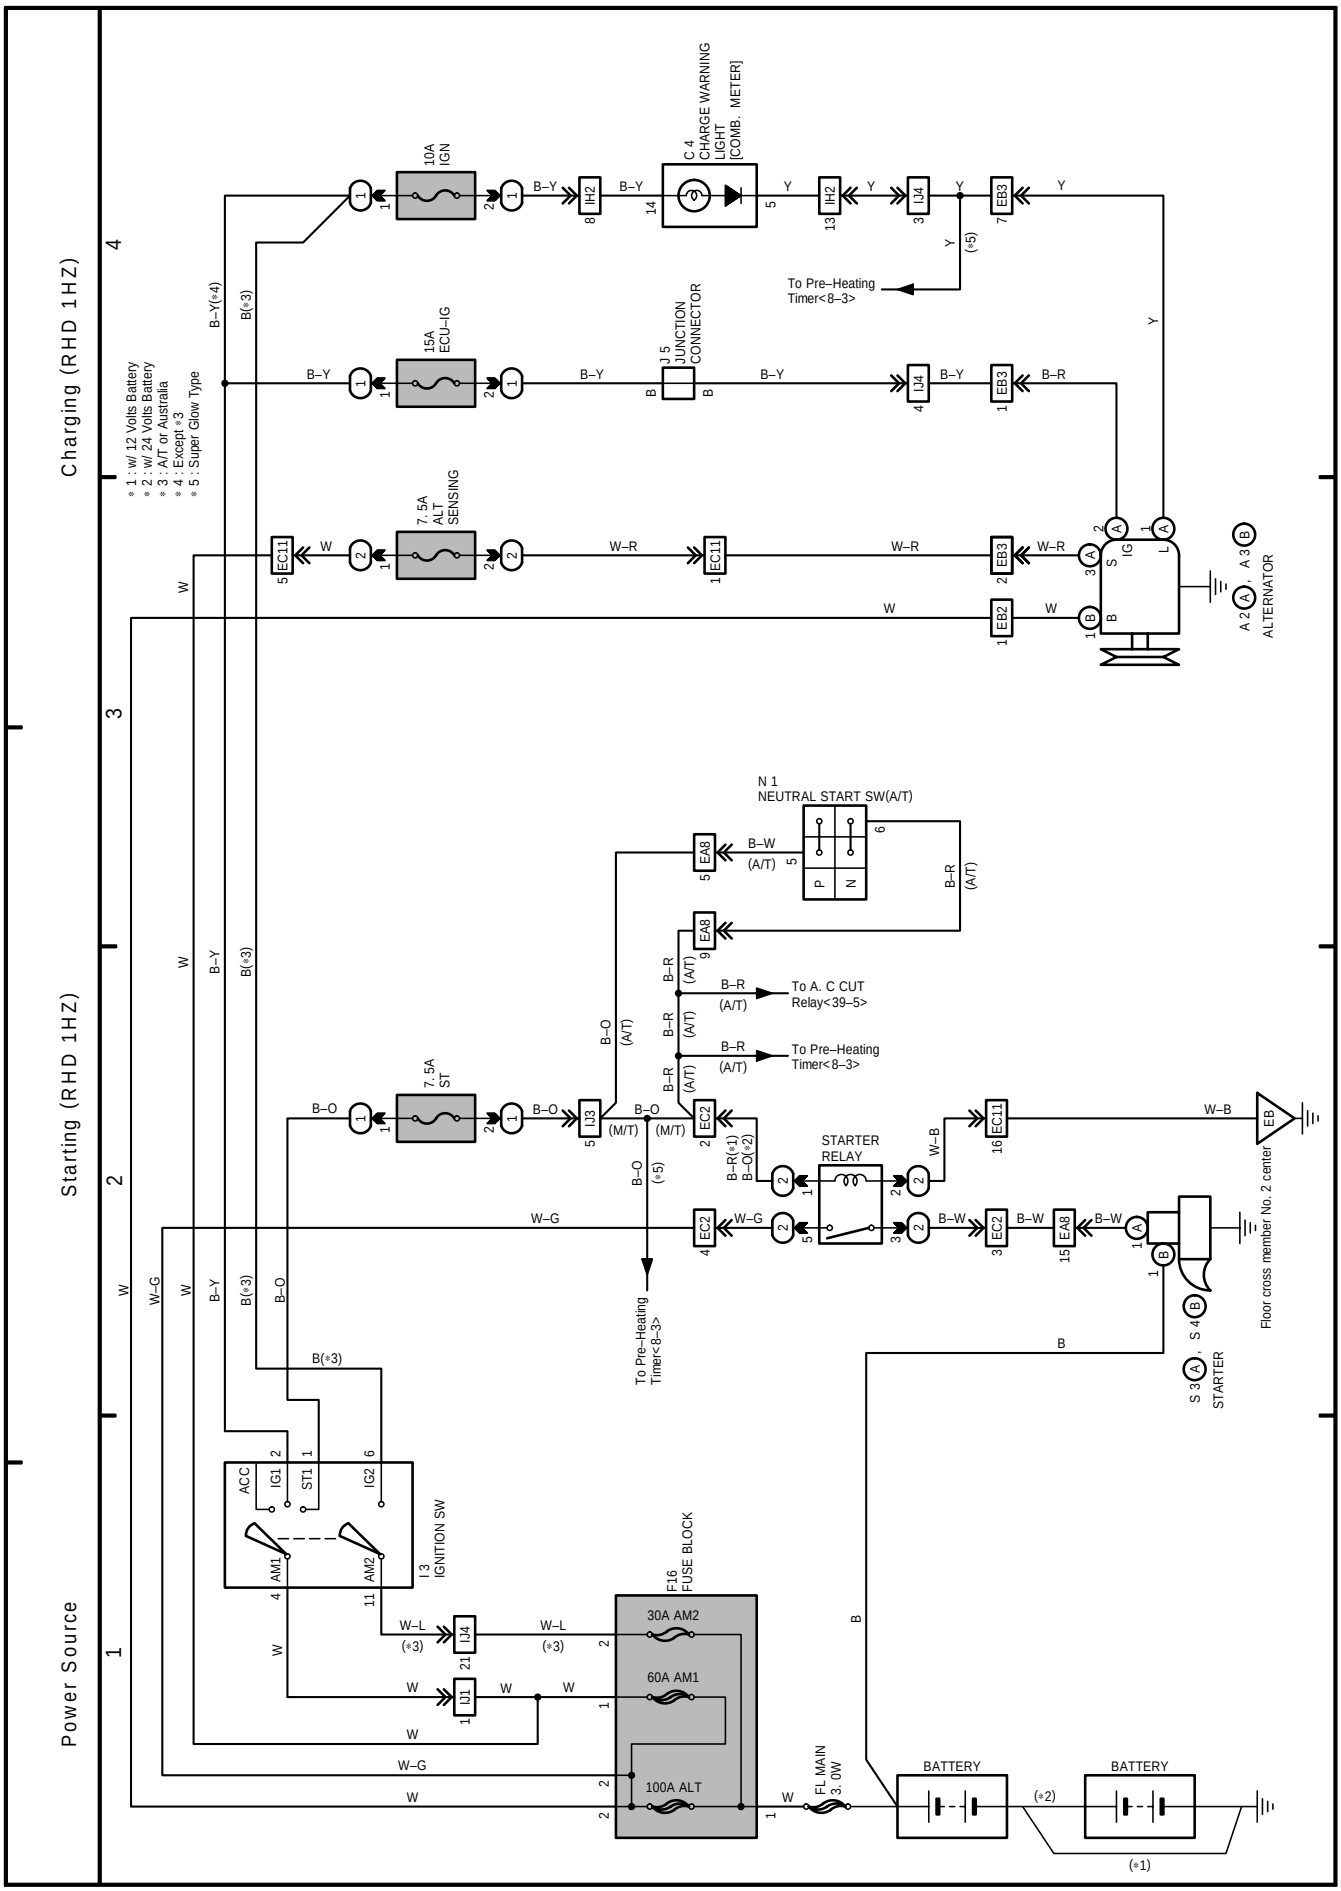

4 COASTER
Power Source
Starting (RHD 1HZ)
Charging (RHD 1HZ)
1
2
3
4
* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
* 3 : A/T or Australia
* 4 : Except *3
* 5 : Super Glow Type
10A IGN
C 4 CHARGE WARNING LIGHT [COMB. METER]
15A ECU–IG
J 5 JUNCTION CONNECTOR
7. 5A ALT SENSING
7. 5A ST
N 1 NEUTRAL START SW(A/T)
STARTER RELAY
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
30A AM2
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY
(*1)
(*2)
To Pre–Heating Timer< 8–3>
To A. C CUT Relay< 39–5>
To Pre–Heating Timer< 8–3>
To Pre–Heating Timer< 8–3>
A 2 (A), A 3 (B) ALTERNATOR
S 3 (A), S 4 (B) STARTER
Floor cross member No. 2 center
B–Y
B–Y(*4)
B(*3)
B–O
W
W–G
W–L
W–R
B–W
B–R
B–R(*1) B–O(*2)
Y
B