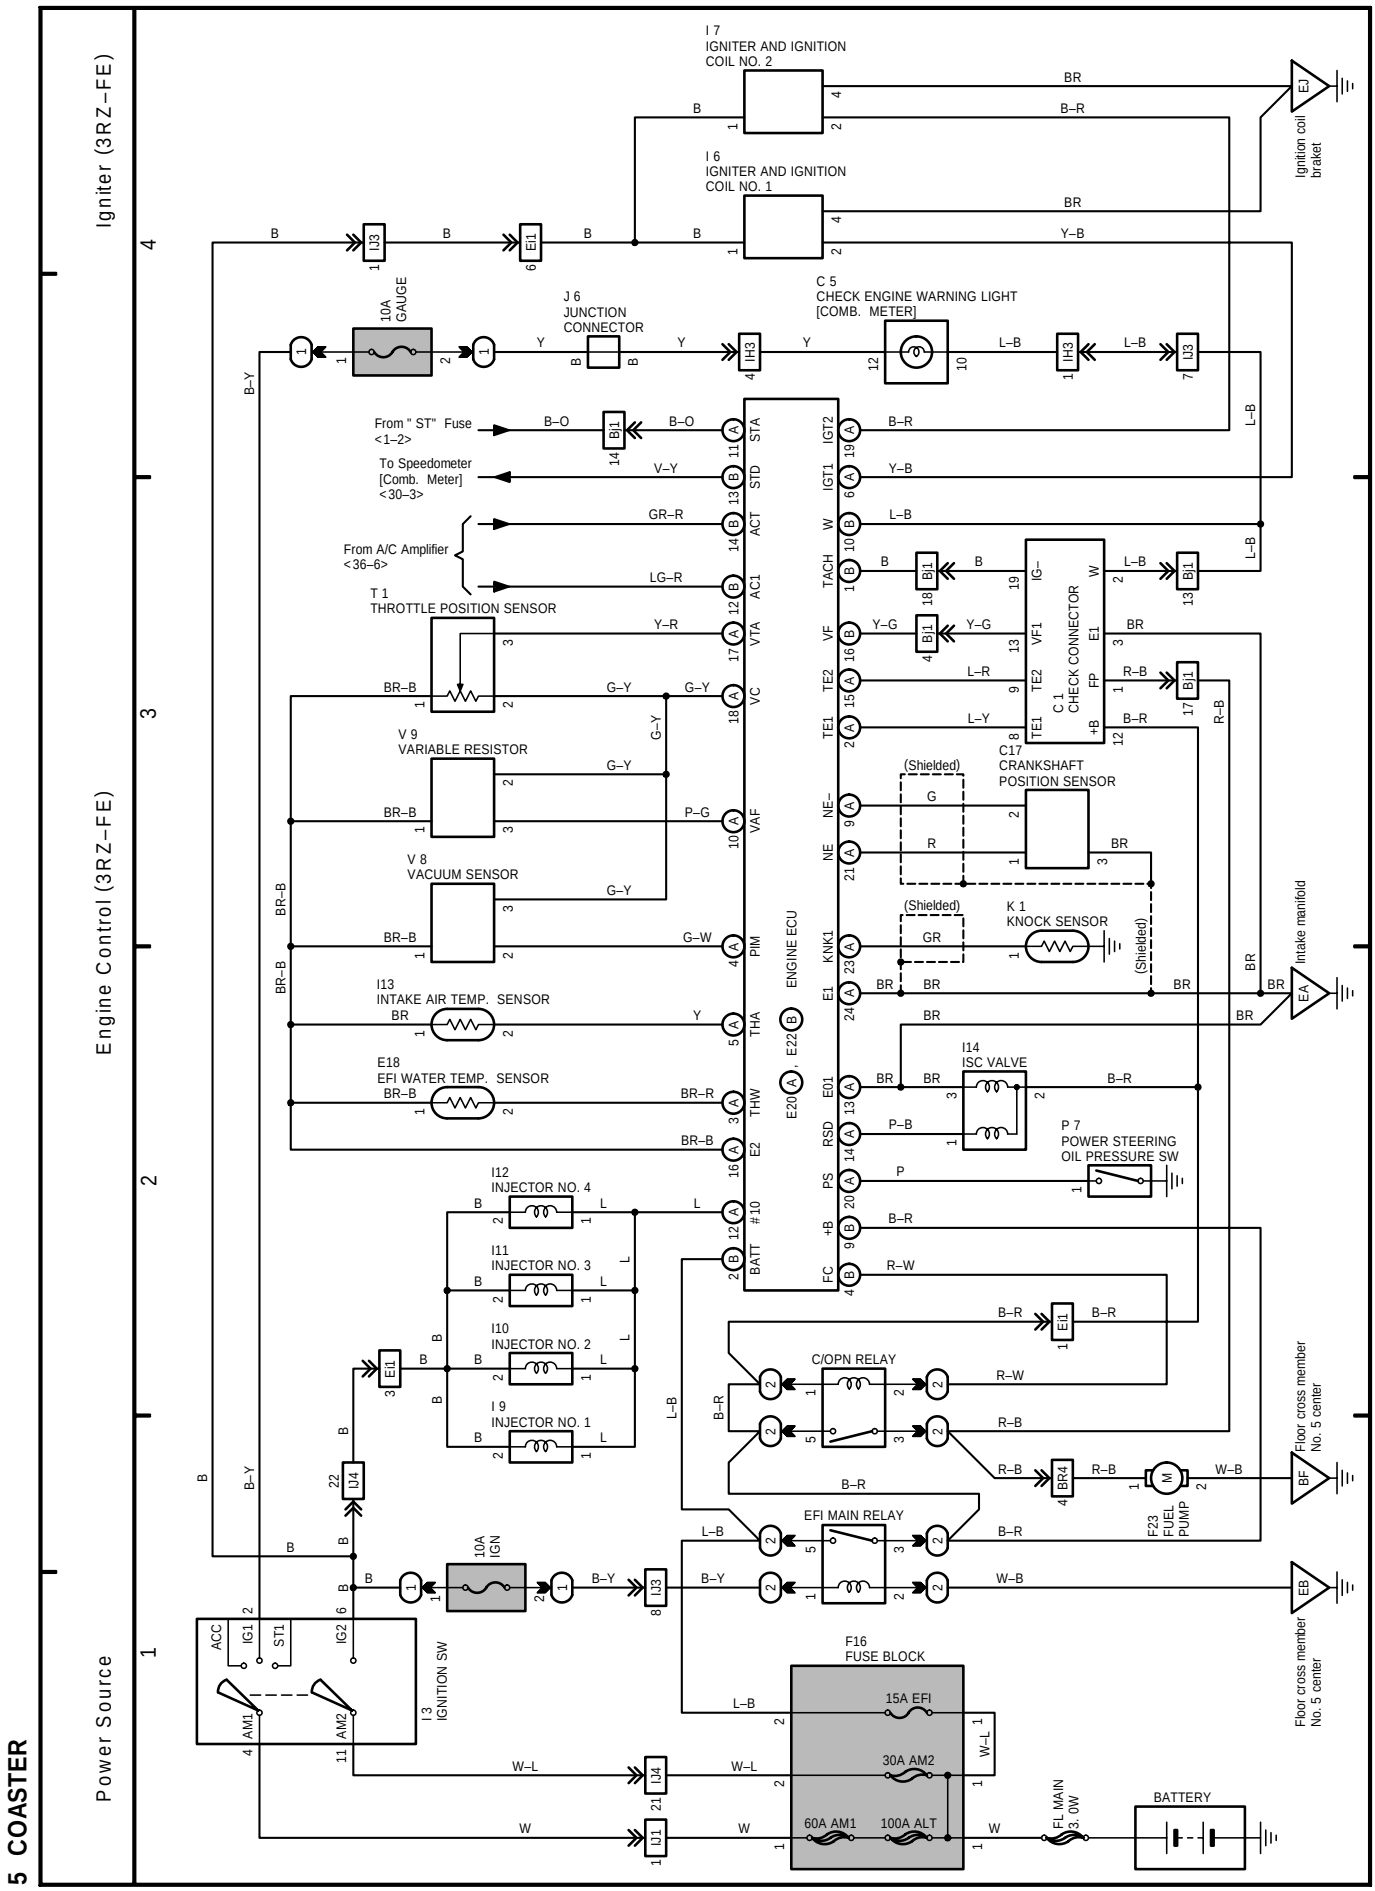

5 COASTER
Power Source
Engine Control (3RZ–FE)
Igniter (3RZ–FE)
I 7
IGNITER AND IGNITION COIL NO. 2
I 6
IGNITER AND IGNITION COIL NO. 1
Ignition coil braket
10A GAUGE
J 6
JUNCTION CONNECTOR
C 5
CHECK ENGINE WARNING LIGHT [COMB. METER]
From " ST" Fuse <1–2>
To Speedometer [Comb. Meter] <30–3>
From A/C Amplifier <36–6>
T 1
THROTTLE POSITION SENSOR
V 9
VARIABLE RESISTOR
V 8
VACUUM SENSOR
I13
INTAKE AIR TEMP. SENSOR
E18
EFI WATER TEMP. SENSOR
ENGINE ECU
C 1
CHECK CONNECTOR
C17
CRANKSHAFT POSITION SENSOR
(Shielded)
K 1
KNOCK SENSOR
Intake manifold
I14
ISC VALVE
P 7
POWER STEERING OIL PRESSURE SW
I12
INJECTOR NO. 4
I11
INJECTOR NO. 3
I10
INJECTOR NO. 2
I 9
INJECTOR NO. 1
C/OPN RELAY
EFI MAIN RELAY
10A IGN
I 3
IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16
FUSE BLOCK
15A EFI
30A AM2
60A AM1
100A ALT
F23
FUEL PUMP
Floor cross member No. 5 center
BATTERY
FL MAIN 3. 0W