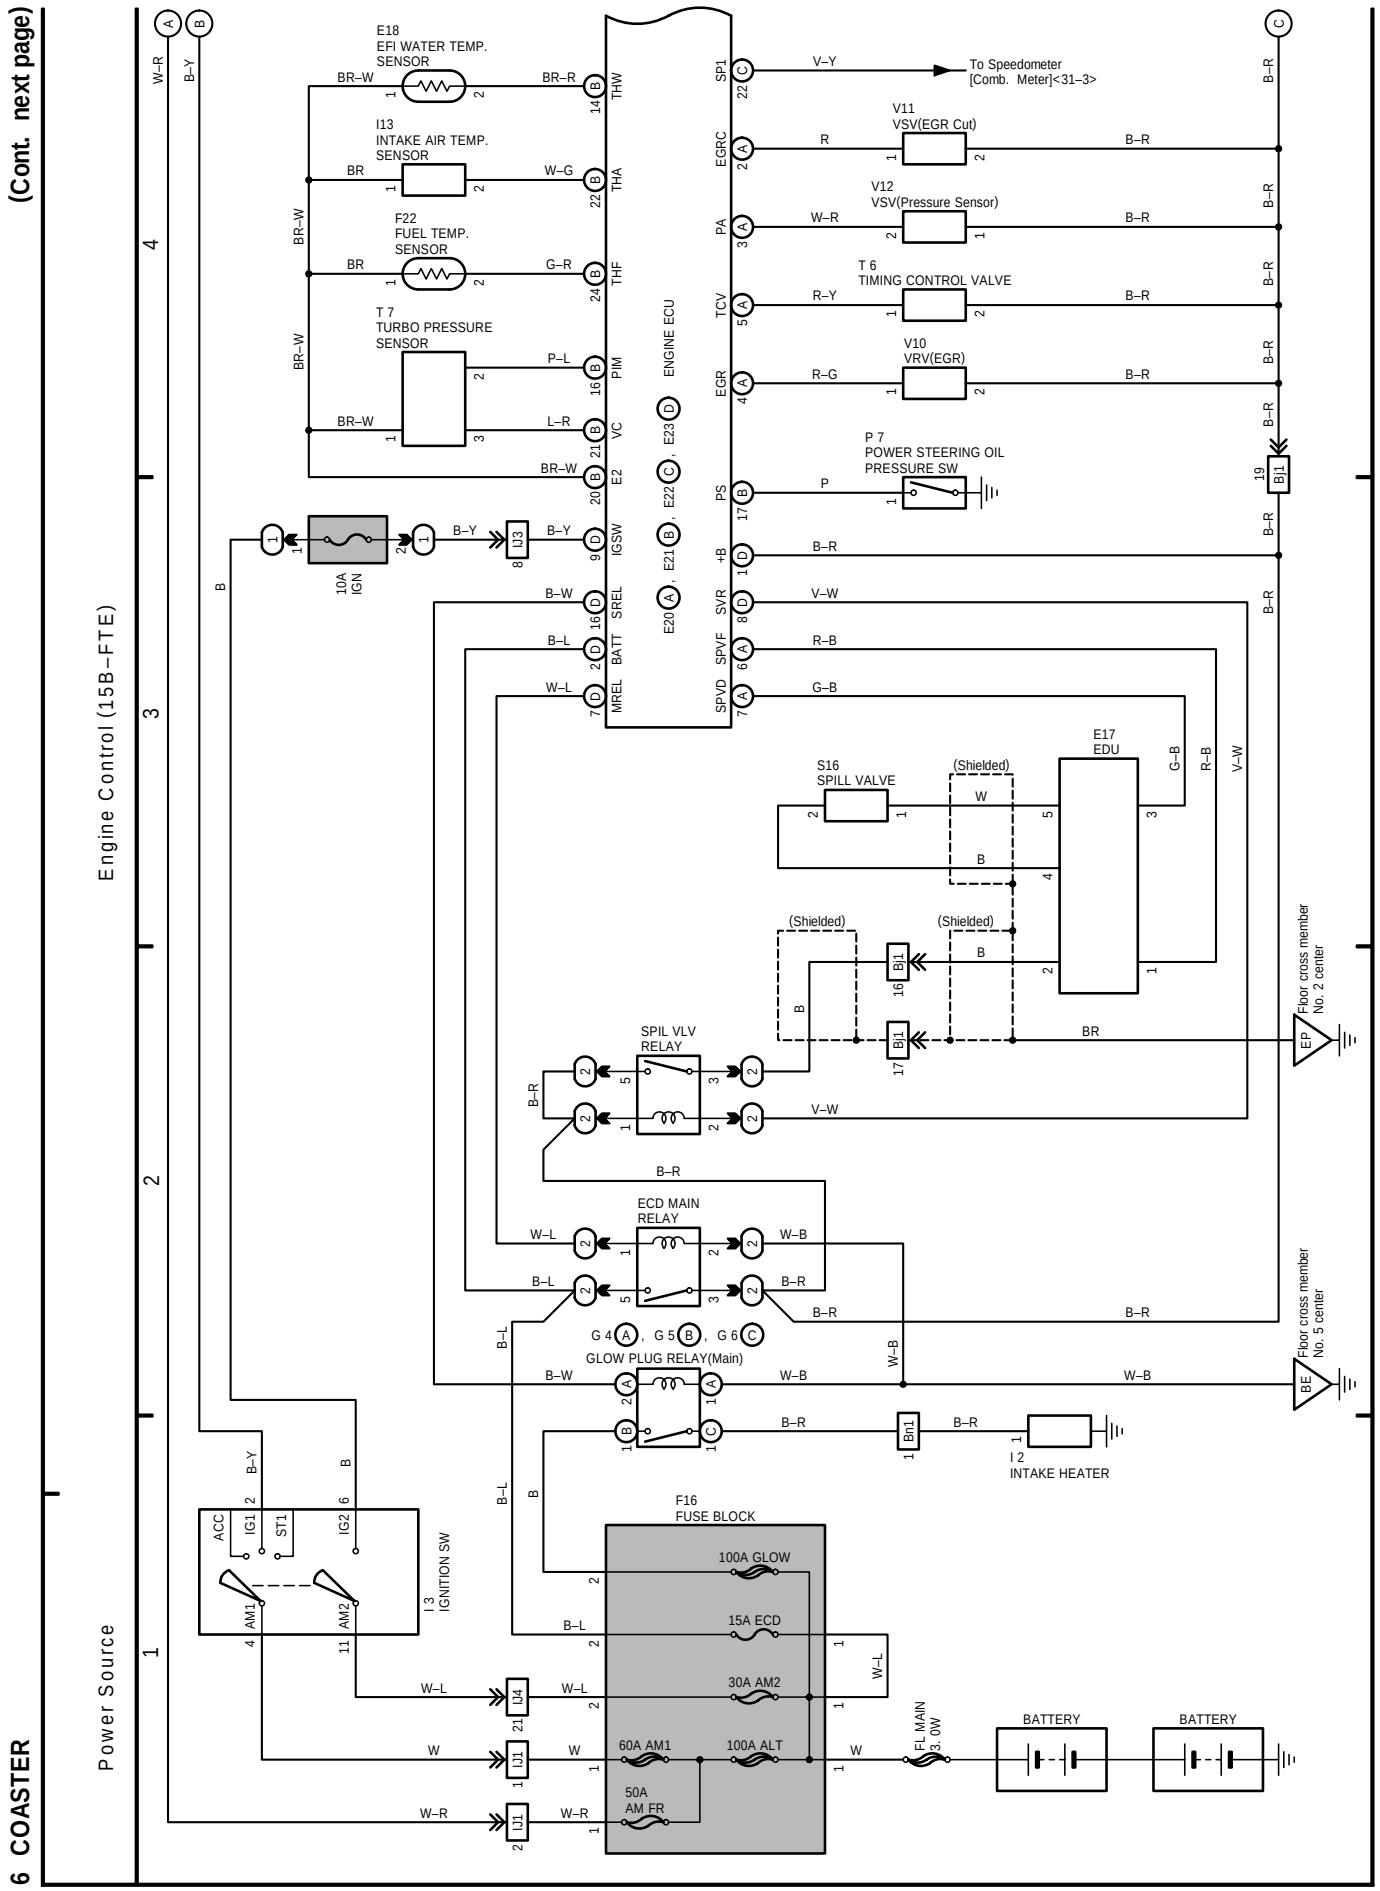

(Cont. next page)
Engine Control (15B–FTE)
Power Source
6 COASTER
E18
EFI WATER TEMP. SENSOR
I13
INTAKE AIR TEMP. SENSOR
F22
FUEL TEMP. SENSOR
T 7
TURBO PRESSURE SENSOR
ENGINE ECU
To Speedometer
[Comb. Meter]<31–3>
V11
VSV(EGR Cut)
V12
VSV(Pressure Sensor)
T 6
TIMING CONTROL VALVE
V10
VRV(EGR)
P 7
POWER STEERING OIL PRESSURE SW
10A IGN
S16
SPILL VALVE
E17
EDU
(Shielded)
SPIL VLV RELAY
ECD MAIN RELAY
G 4 , G 5 , G 6
GLOW PLUG RELAY(Main)
I 2
INTAKE HEATER
Floor cross member No. 2 center
Floor cross member No. 5 center
I 3
IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16
FUSE BLOCK
100A GLOW
15A ECD
30A AM2
60A AM1
100A ALT
50A AM FR
FL MAIN
3. 0W
BATTERY
BATTERY

6 COASTER (Cont' d)

