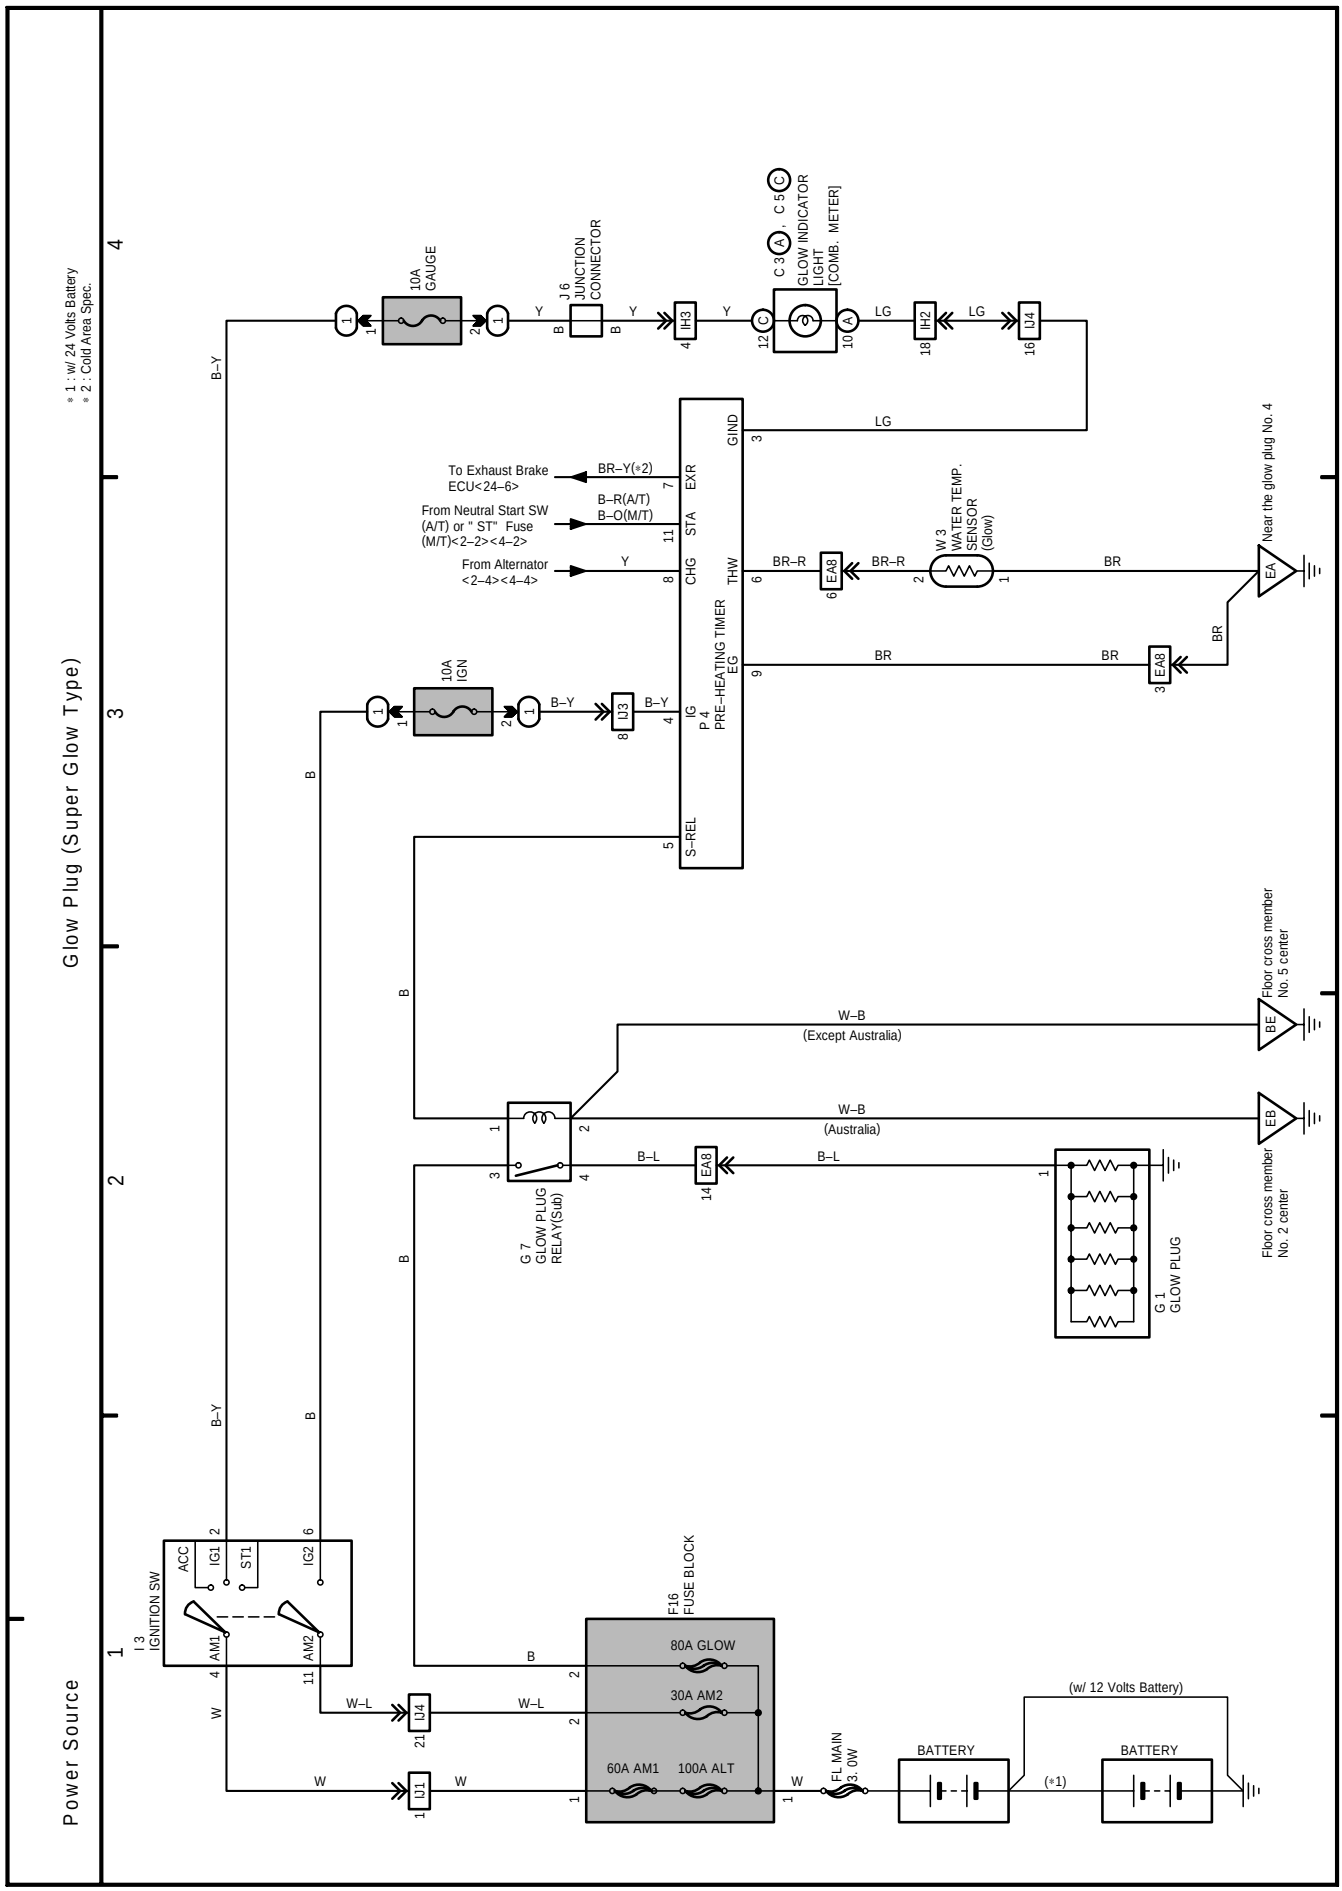

Power Source
Glow Plug (Super Glow Type)
* 1 : w/ 24 Volts Battery
* 2 : Cold Area Spec.
10A GAUGE
J 6 JUNCTION CONNECTOR
C 3 (A), C 5 (C) GLOW INDICATOR LIGHT [COMB. METER]
10A IGN
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
80A GLOW
30A AM2
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
(w/ 12 Volts Battery)
(*1)
G 7 GLOW PLUG RELAY(Sub)
G 1 GLOW PLUG
W 3 WATER TEMP. SENSOR (Glow)
Near the glow plug No. 4
Floor cross member No. 5 center
Floor cross member No. 2 center
(Except Australia)
(Australia)
To Exhaust Brake ECU<24–6>
From Neutral Start SW (A/T) or " ST" Fuse (M/T)<2–2><4–2>
From Alternator <2–4><4–4>
PRE–HEATING TIMER
GIND
EXR
STA
CHG
THW
IG
EG
S–REL
IJ1
IJ2
IJ3
IJ4
IH2
IH3
EA8
EA
BE
EB