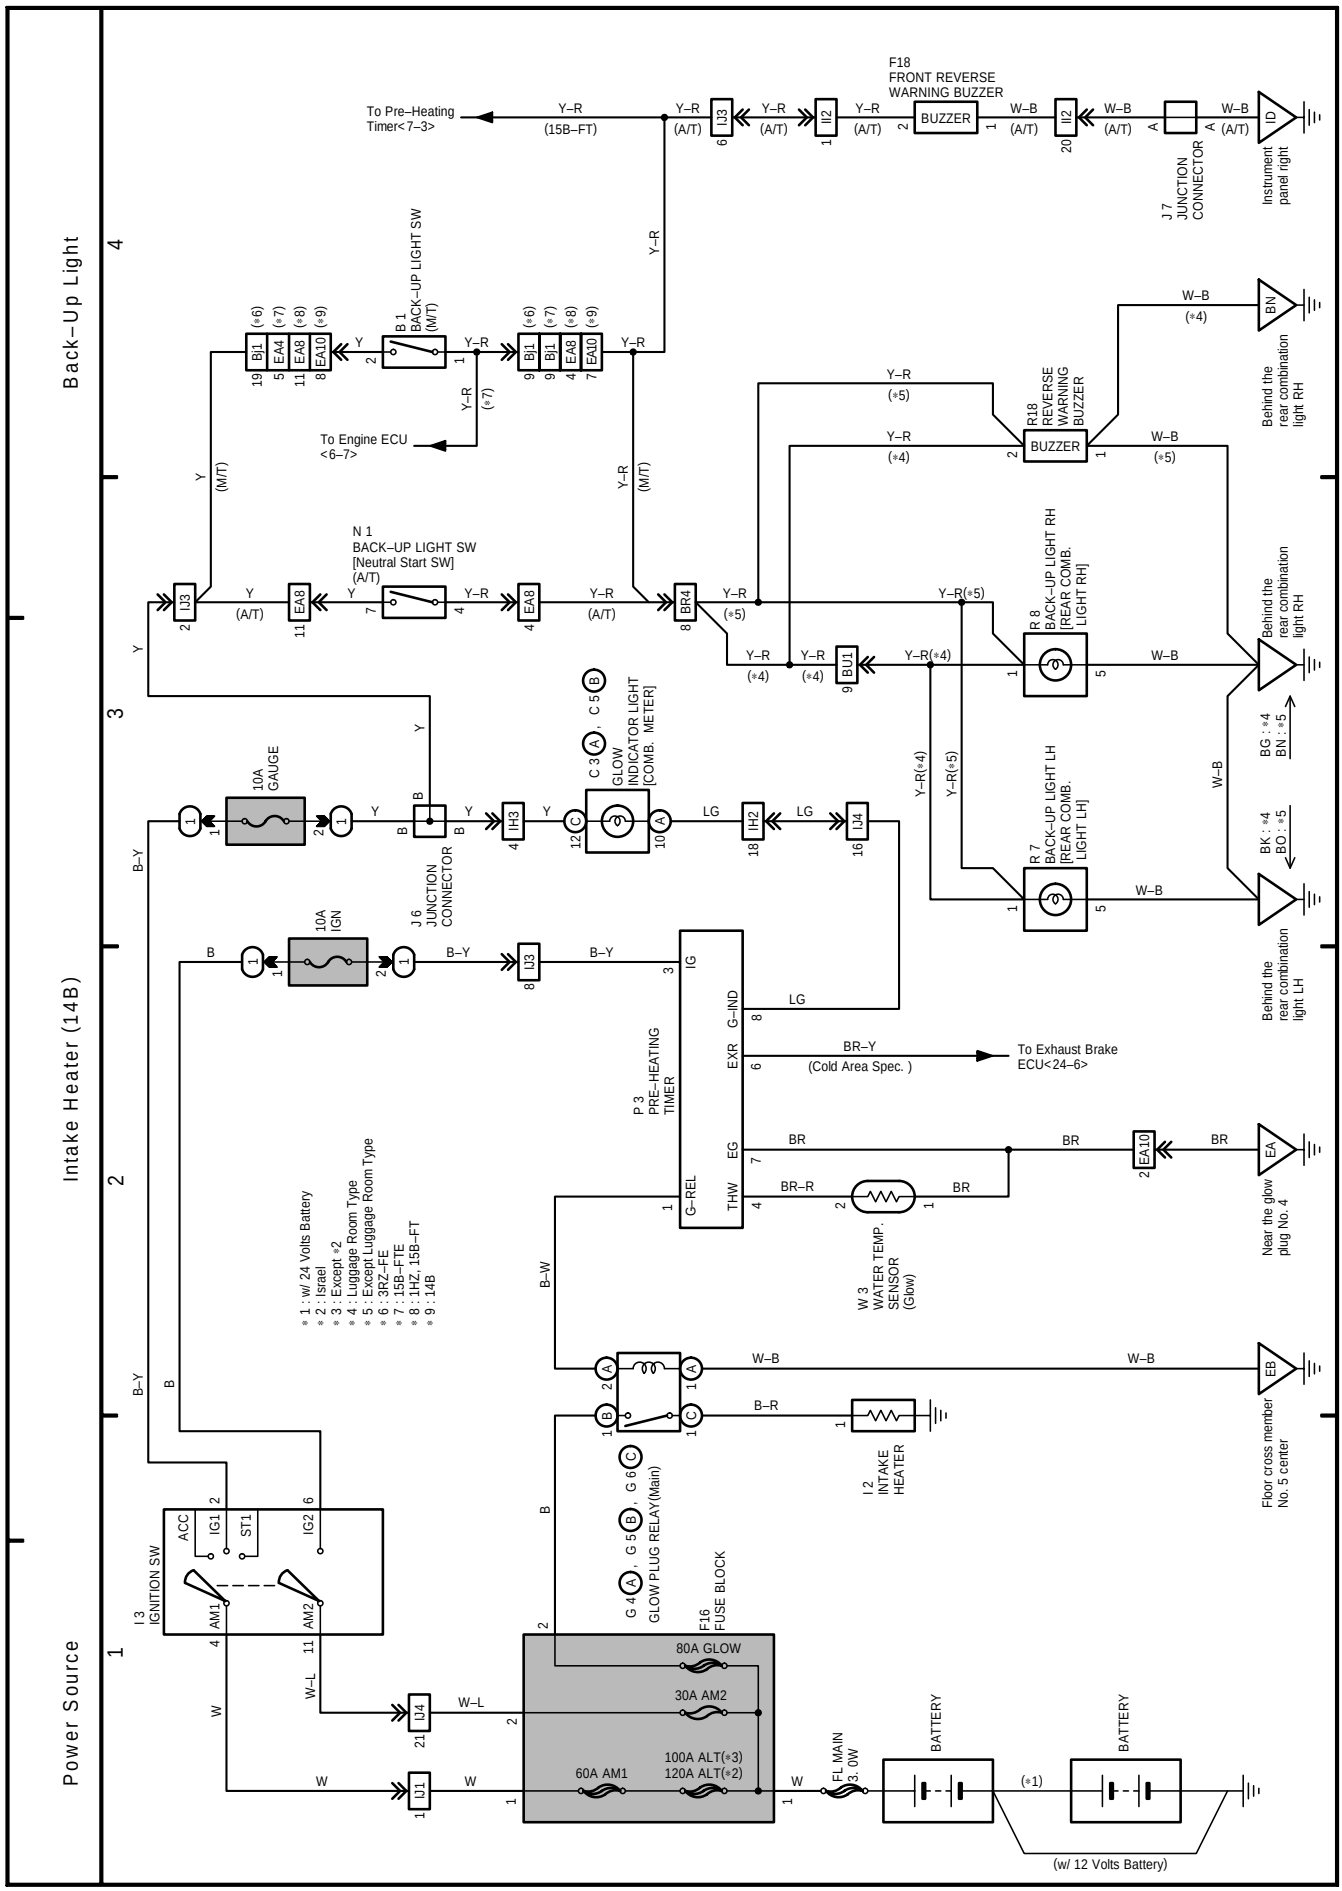

Power Source
Intake Heater (14B)
Back–Up Light
1
2
3
4
F18
FRONT REVERSE
WARNING BUZZER
BUZZER
To Pre–Heating
Timer<7–3>
Y–R
(15B–FT)
(A/T)
(M/T)
J 7
JUNCTION
CONNECTOR
Instrument
panel right
B 1
BACK–UP LIGHT SW
(M/T)
To Engine ECU
<6–7>
N 1
BACK–UP LIGHT SW
[Neutral Start SW]
(A/T)
R18
REVERSE
WARNING
BUZZER
Behind the
rear combination
light RH
R 8
BACK–UP LIGHT RH
[REAR COMB.
LIGHT RH]
R 7
BACK–UP LIGHT LH
[REAR COMB.
LIGHT LH]
Behind the
rear combination
light LH
10A
GAUGE
10A
IGN
J 6
JUNCTION
CONNECTOR
C 3 , C 5
GLOW
INDICATOR LIGHT
[COMB. METER]
P 3
PRE–HEATING
TIMER
To Exhaust Brake
ECU<24–6>
(Cold Area Spec.)
W 3
WATER TEMP.
SENSOR
(Glow)
Near the glow
plug No. 4
I 2
INTAKE
HEATER
Floor cross member
No. 5 center
I 3
IGNITION SW
G 4 , G 5 , G 6
GLOW PLUG RELAY(Main)
F16
FUSE BLOCK
80A GLOW
30A AM2
60A AM1
100A ALT(*3)
120A ALT(*2)
FL MAIN
3. 0W
BATTERY
BATTERY
(*1)
(w/ 12 Volts Battery)
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except *2
* 4 : Luggage Room Type
* 5 : Except Luggage Room Type
* 6 : 3RZ–FE
* 7 : 15B–FTE
* 8 : 1HZ, 15B–FT
* 9 : 14B