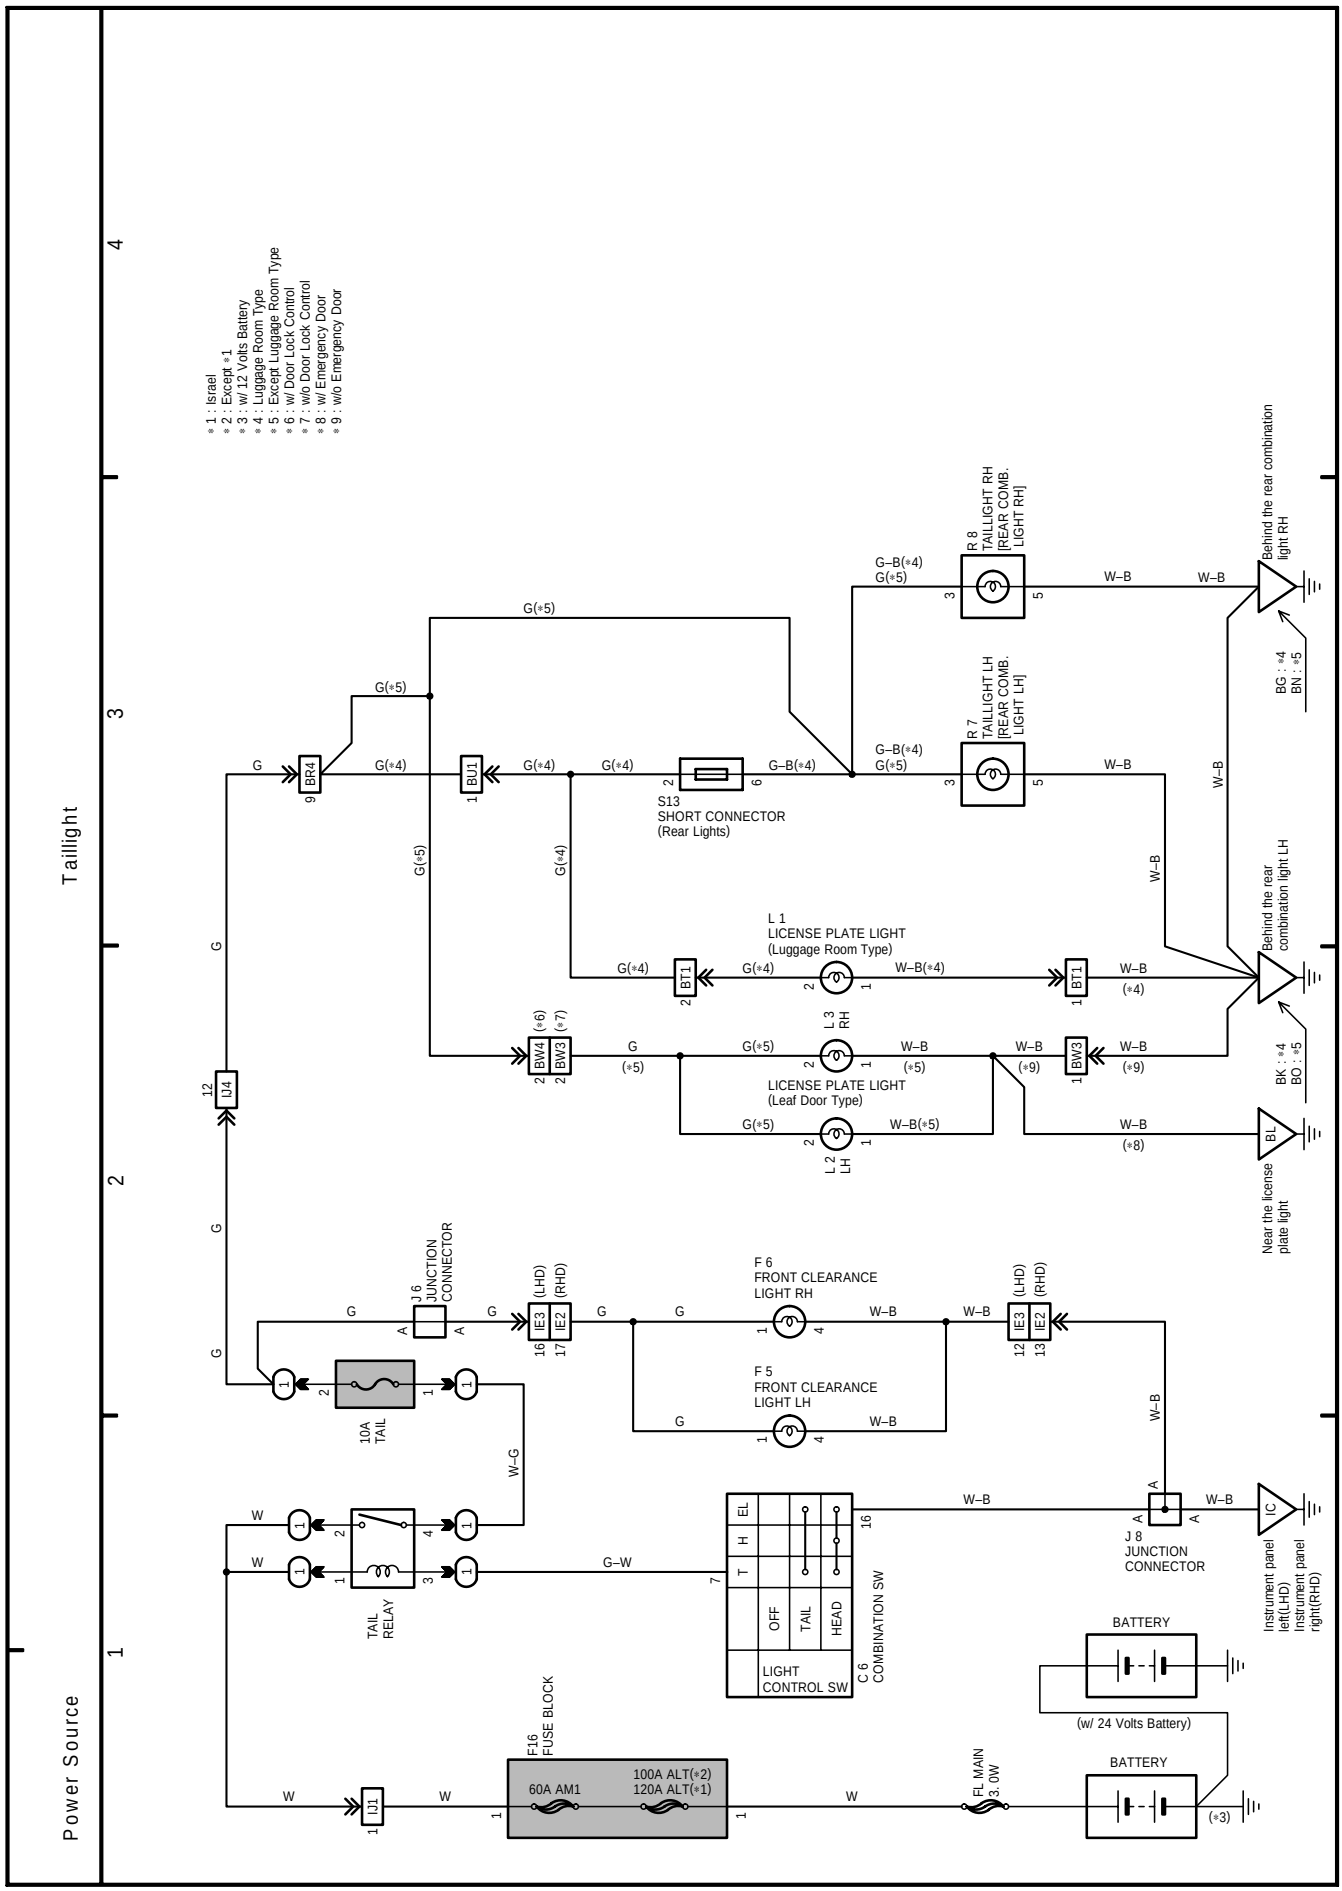

Power Source
Taillight
1
2
3
4
*1 : Israel
*2 : Except *1
*3 : w/ 12 Volts Battery
*4 : Luggage Room Type
*5 : Except Luggage Room Type
*6 : w/ Door Lock Control
*7 : w/o Door Lock Control
*8 : w/ Emergency Door
*9 : w/o Emergency Door
R 8 TAILLIGHT RH [REAR COMB. LIGHT RH]
R 7 TAILLIGHT LH [REAR COMB. LIGHT LH]
Behind the rear combination light RH
Behind the rear combination light LH
BG : *4 BN : *5
BK : *4 BO : *5
S13 SHORT CONNECTOR (Rear Lights)
L 1 LICENSE PLATE LIGHT (Luggage Room Type)
L 3 RH
LICENSE PLATE LIGHT (Leaf Door Type)
L 2 LH
Near the license plate light
J 6 JUNCTION CONNECTOR
F 6 FRONT CLEARANCE LIGHT RH
F 5 FRONT CLEARANCE LIGHT LH
10A TAIL
TAIL RELAY
LIGHT CONTROL SW
C 6 COMBINATION SW
J 8 JUNCTION CONNECTOR
Instrument panel left(LHD) Instrument panel right(RHD)
F16 FUSE BLOCK
60A AM1
100A ALT(*2) 120A ALT(*1)
FL MAIN 3.0W
BATTERY
(w/ 24 Volts Battery)
BATTERY
(*3)