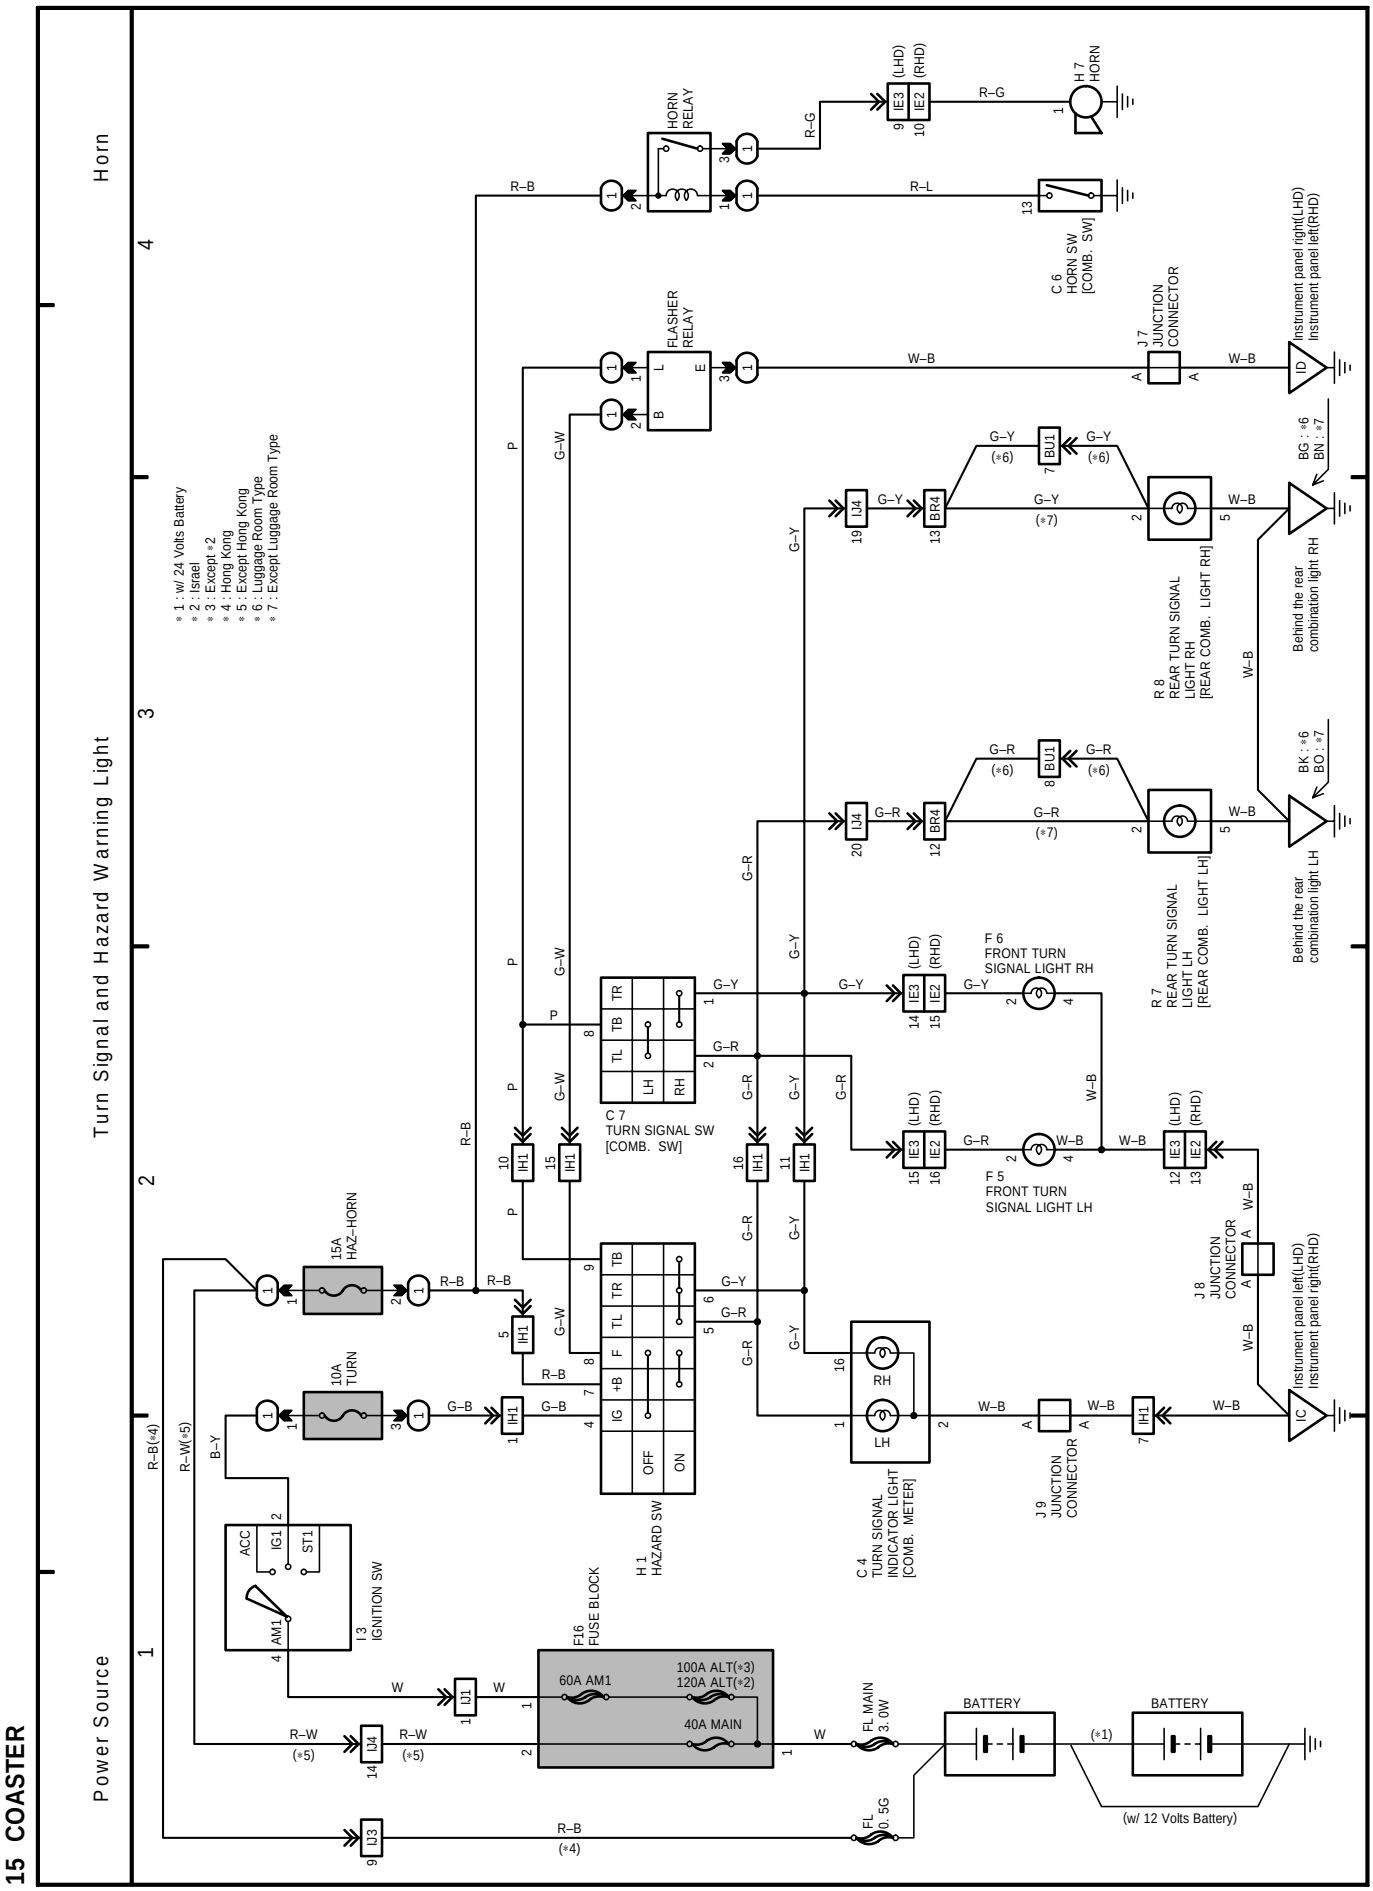

15 COASTER
Power Source
Turn Signal and Hazard Warning Light
Horn
1
2
3
4
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except *2
* 4 : Hong Kong
* 5 : Except Hong Kong
* 6 : Luggage Room Type
* 7 : Except Luggage Room Type
BATTERY
(*1)
(w/ 12 Volts Battery)
FL MAIN 3.0W
FL 0.5G
F16 FUSE BLOCK
60A AM1
100A ALT(*3) 120A ALT(*2)
40A MAIN
I 3 IGNITION SW
ACC
IG1
ST1
AM1
H 1 HAZARD SW
C 7 TURN SIGNAL SW [COMB. SW]
C 4 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
15A HAZ–HORN
10A TURN
HORN RELAY
FLASHER RELAY
H 7 HORN
C 6 HORN SW [COMB. SW]
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J 9 JUNCTION CONNECTOR
R 8 REAR TURN SIGNAL LIGHT RH [REAR COMB. LIGHT RH]
R 7 REAR TURN SIGNAL LIGHT LH [REAR COMB. LIGHT LH]
F 6 FRONT TURN SIGNAL LIGHT RH
F 5 FRONT TURN SIGNAL LIGHT LH
Behind the rear combination light RH
Behind the rear combination light LH
Instrument panel right(LHD) Instrument panel left(RHD)
Instrument panel left(LHD) Instrument panel right(RHD)
BG : *6 BN : *7
BK : *6 BO : *7
R–B(*4)
R–W(*5)
B–Y
R–B
R–G
R–L
G–W
G–Y
G–R
G–B
W–B
R–W
W
P
(LHD)
(RHD)