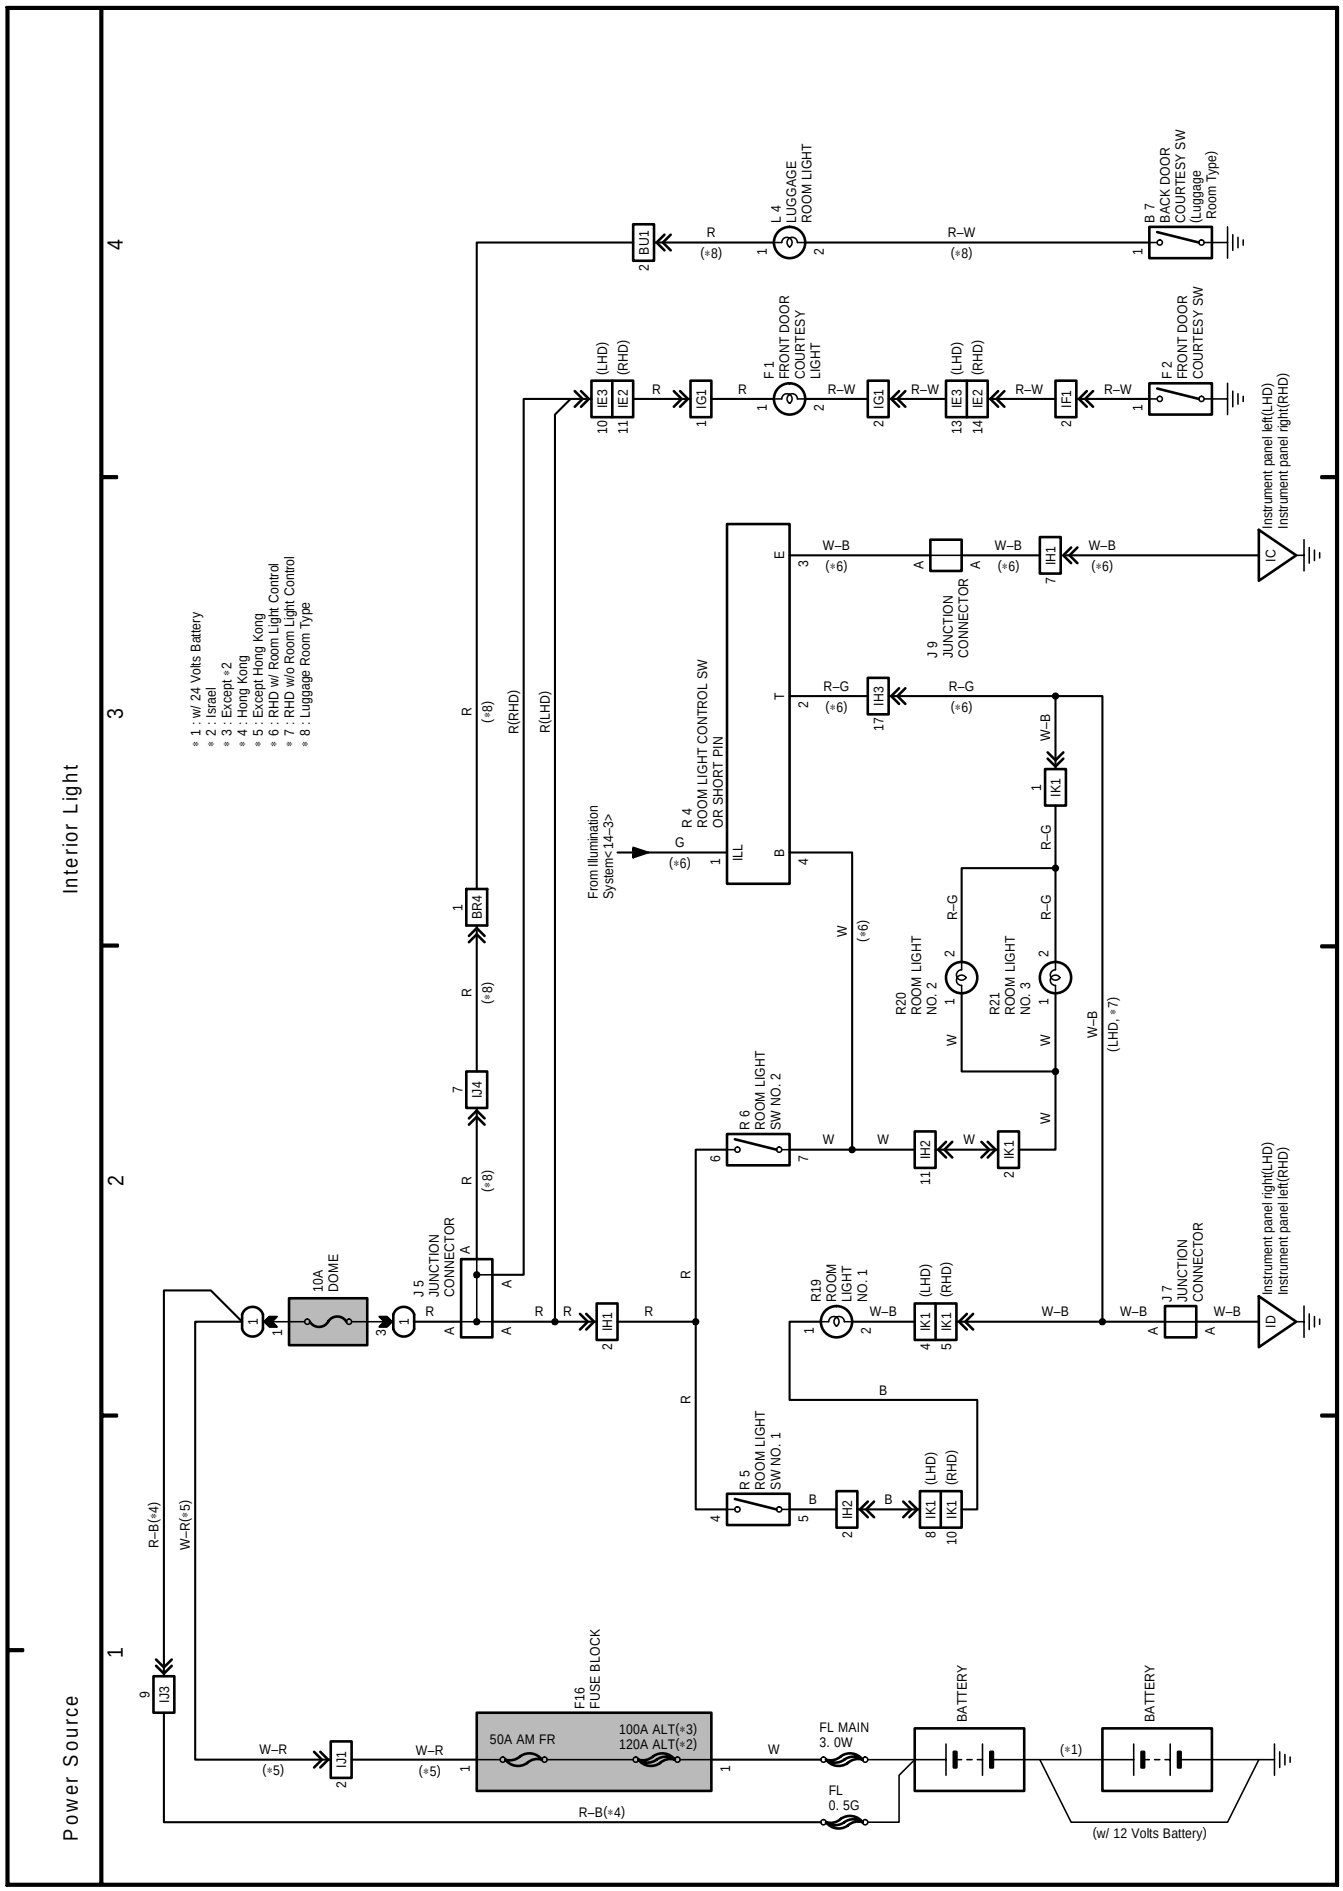

Power Source
Interior Light
1
2
3
4
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except *2
* 4 : Hong Kong
* 5 : Except Hong Kong
* 6 : RHD w/ Room Light Contrd
* 7 : RHD w/o Room Light Control
* 8 : Luggage Room Type
10A DOME
J 5 JUNCTION CONNECTOR
R 4 ROOM LIGHT CONTROL SW OR SHORT PIN
From Illumination System<14-3>
R 6 ROOM LIGHT SW NO. 2
R 5 ROOM LIGHT SW NO. 1
R19 ROOM LIGHT NO. 1
R20 ROOM LIGHT NO. 2
R21 ROOM LIGHT NO. 3
J 9 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
L 4 LUGGAGE ROOM LIGHT
B 7 BACK DOOR COURTESY SW (Luggage Room Type)
F 1 FRONT DOOR COURTESY LIGHT
F 2 FRONT DOOR COURTESY SW
Instrument panel left(LHD) Instrument panel right(RHD)
Instrument panel right(LHD) Instrument panel left(RHD)
F16 FUSE BLOCK
50A AM FR
100A ALT(*3) 120A ALT(*2)
FL MAIN 3. 0W
FL 0. 5G
BATTERY
(w/ 12 Volts Battery)
R(RHD)
R(LHD)
R–B(*4)
W–R(*5)
W–B (LHD, *7)