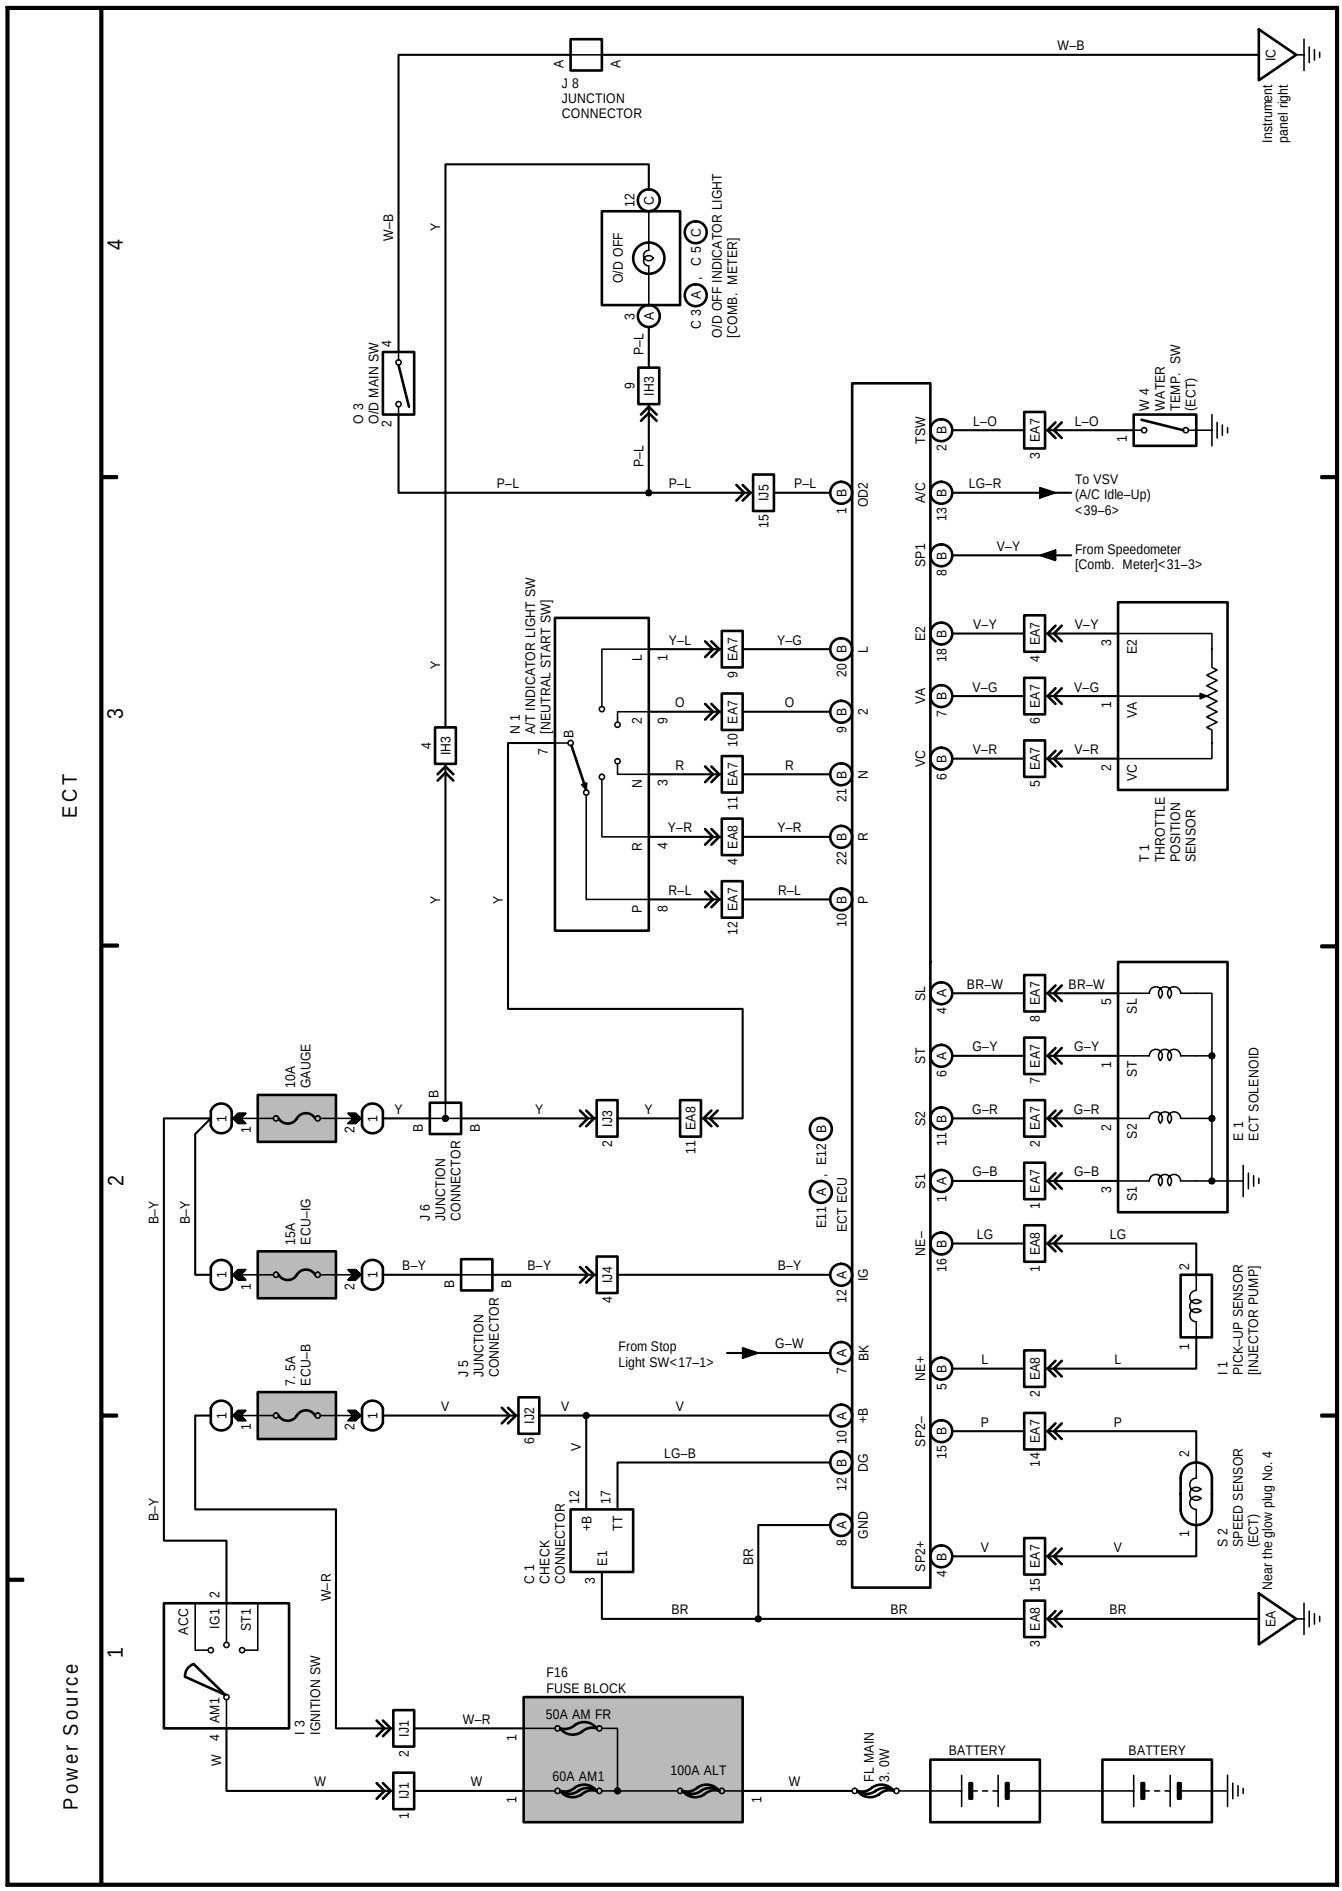

ECT
Power Source
J 8 JUNCTION CONNECTOR
Instrument panel right
O/D OFF
O/D OFF INDICATOR LIGHT [COMB. METER]
O 3 O/D MAIN SW
W 4 WATER TEMP. SW (ECT)
To VSV (A/C Idle–Up) <39–6>
From Speedometer [Comb. Meter]<31–3>
N 1 A/T INDICATOR LIGHT SW [NEUTRAL START SW]
T 1 THROTTLE POSITION SENSOR
E 1 ECT SOLENOID
I 1 PICK–UP SENSOR [INJECTOR PUMP]
S 2 SPEED SENSOR (ECT) Near the glow plug No. 4
J 6 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
E11, E12 ECT ECU
From Stop Light SW<17–1>
C 1 CHECK CONNECTOR
I 3 IGNITION SW
F16 FUSE BLOCK
50A AM FR
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY
10A GAUGE
15A ECU–IG
7. 5A ECU–B