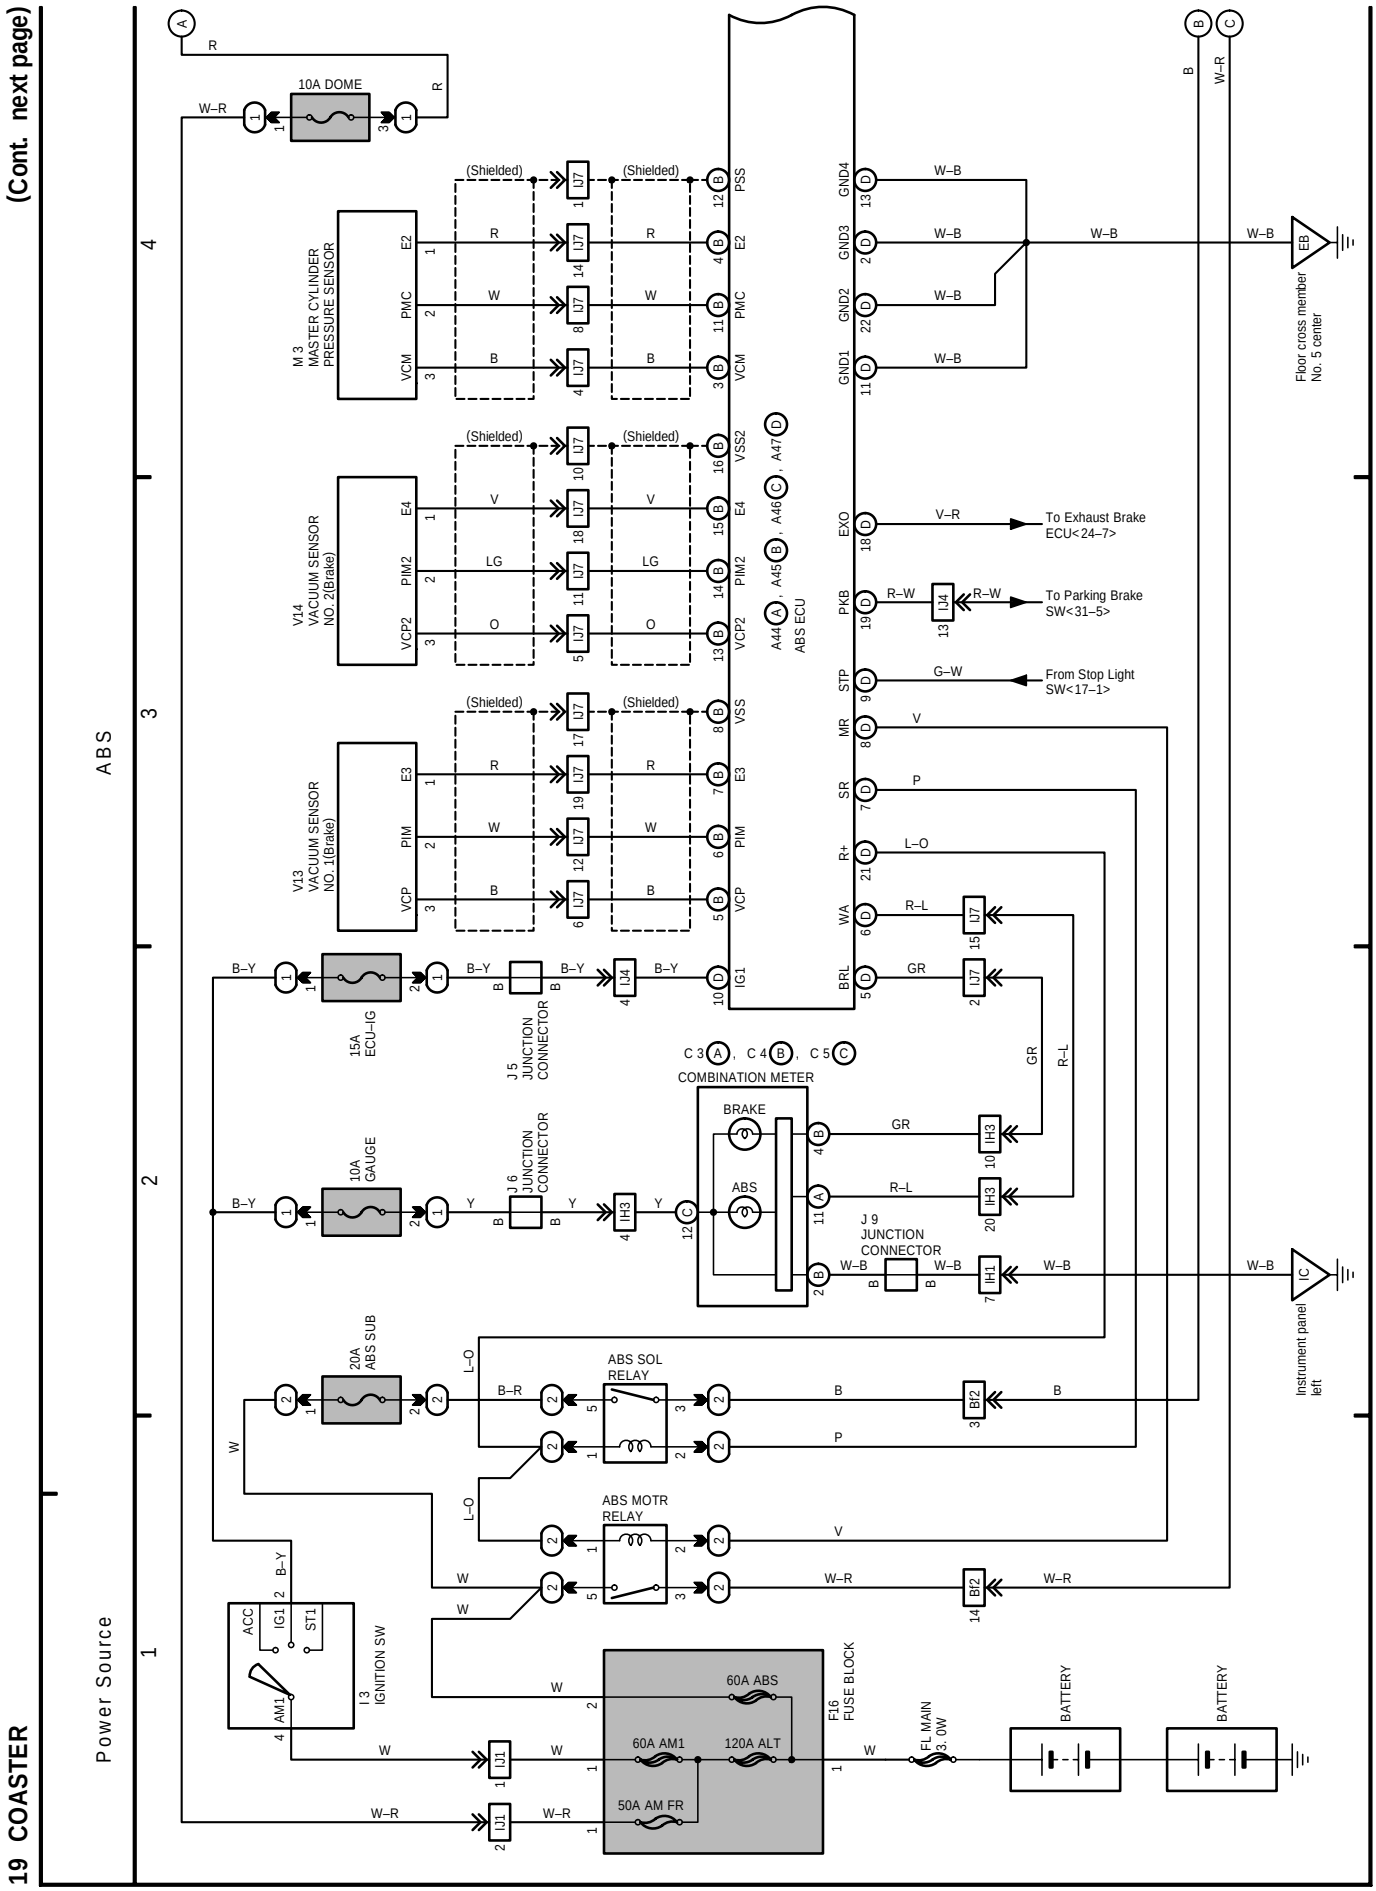
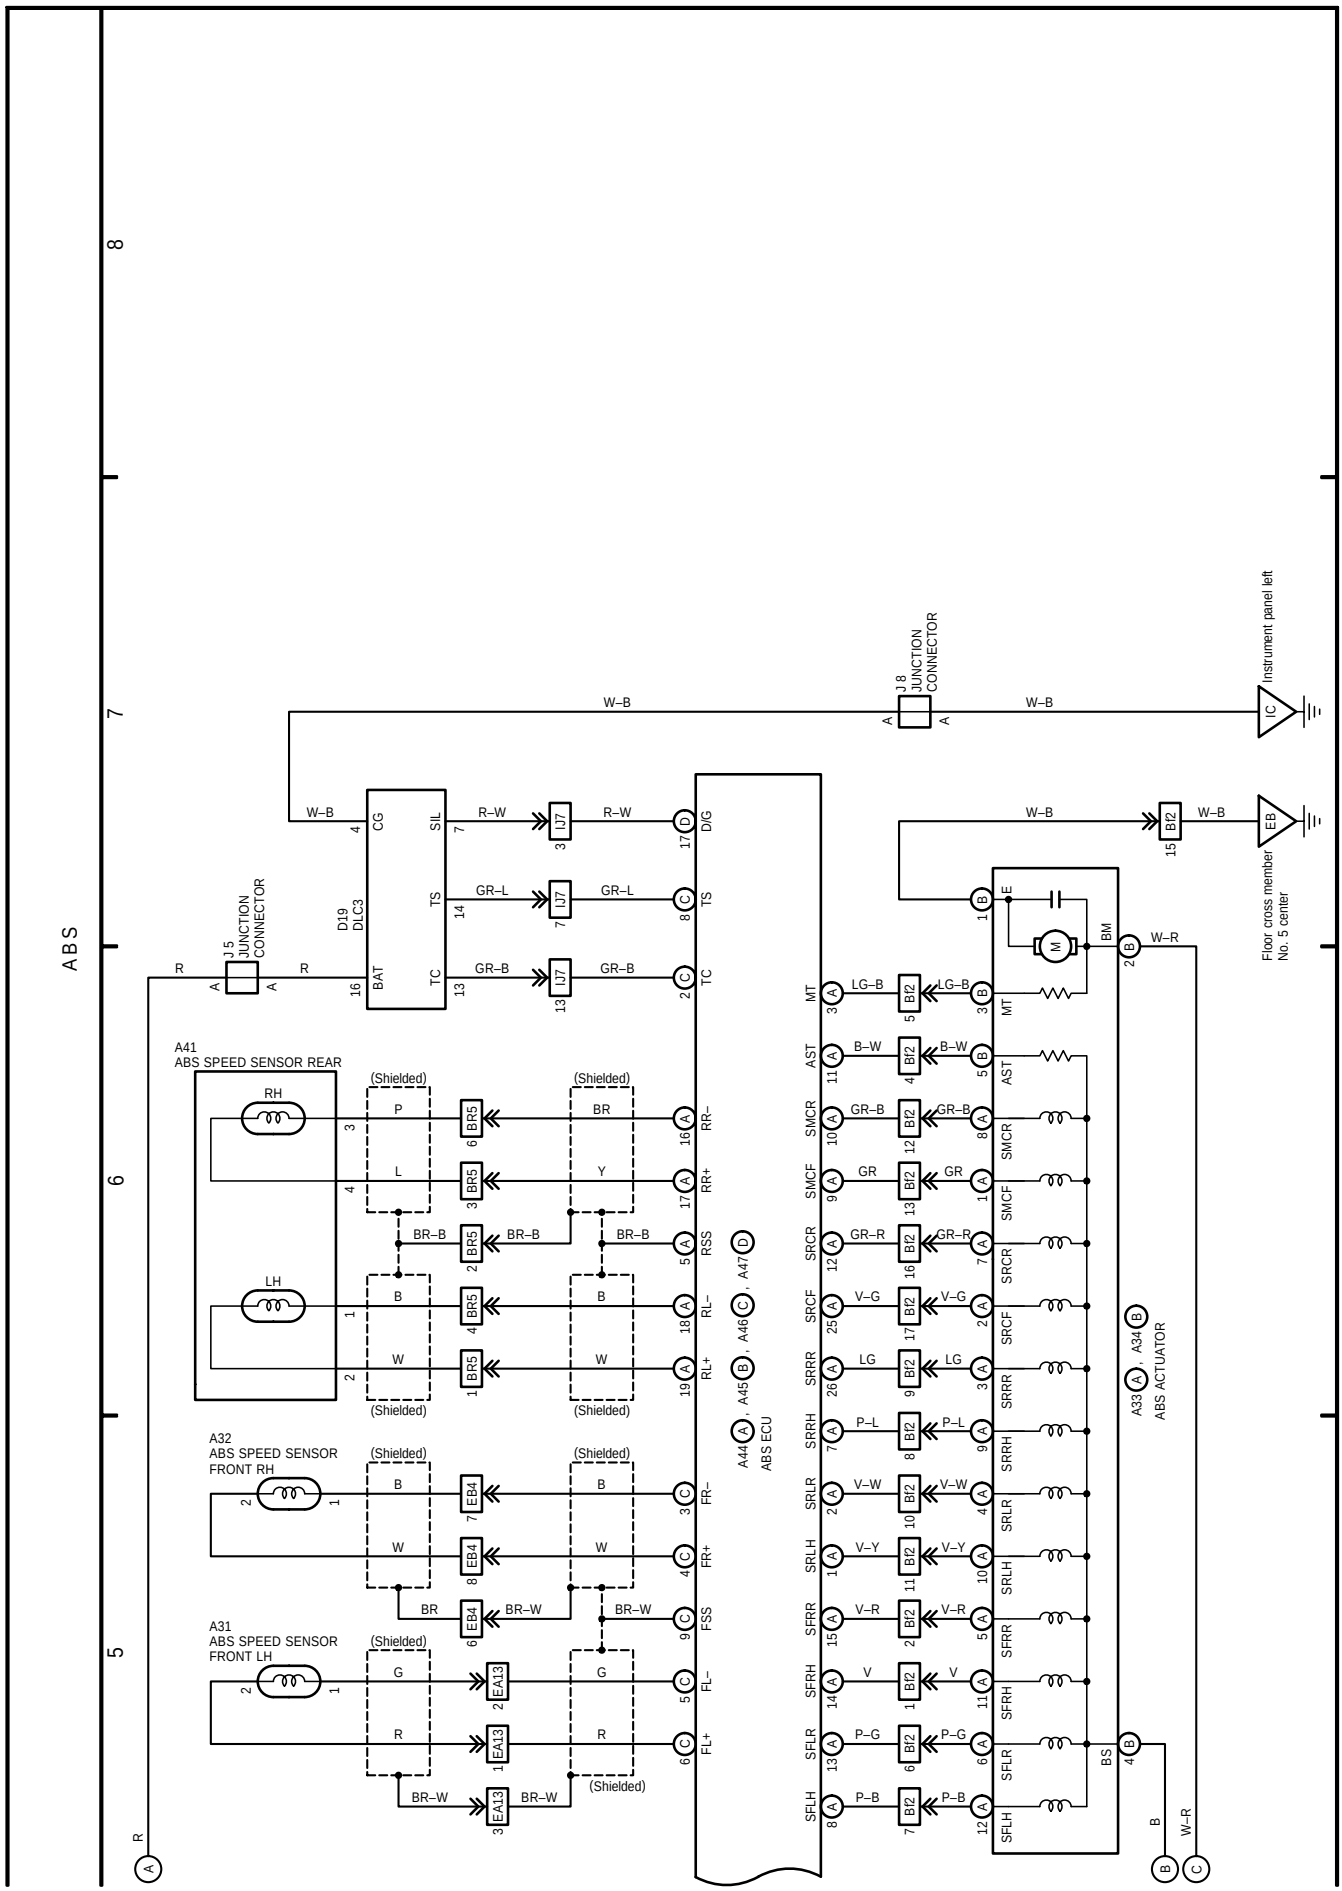

(Cont. next page)
19 COASTER
ABS
Power Source
10A DOME
M 3 MASTER CYLINDER PRESSURE SENSOR
V14 VACUUM SENSOR NO. 2(Brake)
V13 VACUUM SENSOR NO. 1(Brake)
(Shielded)
A44 A45 A46 A47 ABS ECU
To Exhaust Brake ECU<24–7>
To Parking Brake SW<31–5>
From Stop Light SW<17–1>
Floor cross member No. 5 center
Instrument panel left
15A ECU–IG
10A GAUGE
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 9 JUNCTION CONNECTOR
C 3 C 4 C 5 COMBINATION METER
BRAKE
ABS
20A ABS SUB
ABS SOL RELAY
ABS MOTR RELAY
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A ABS
60A AM1
120A ALT
50A AM FR
FL MAIN 3. 0W
BATTERY
BATTERY


ABS
5
6
7
8
A41
ABS SPEED SENSOR REAR
RH
LH
A32
ABS SPEED SENSOR
FRONT RH
A31
ABS SPEED SENSOR
FRONT LH
(Shielded)
D19
DLC3
J5
JUNCTION
CONNECTOR
J8
JUNCTION
CONNECTOR
A44 (A), A45 (B), A46 (C), A47 (D)
ABS ECU
A33 (A), A34 (B)
ABS ACTUATOR
M
BM
BS
MT
AST
SMCR
SMCF
SRCR
SRCF
SRRR
SRRH
SRLR
SRLH
SFRR
SFRH
SFLR
SFLH
RR–
RR+
RSS
RL–
RL+
FR–
FR+
FSS
FL–
FL+
D/G
TS
TC
CG
SIL
BAT
Instrument panel left
Floor cross member
No. 5 center
IC
EB
W–B
R–W
GR–L
GR–B
LG–B
B–W
GR–B
GR
GR–R
V–G
LG
P–L
V–W
V–Y
V–R
V
P–G
P–B
W–R
BR–B
BR–W
BR