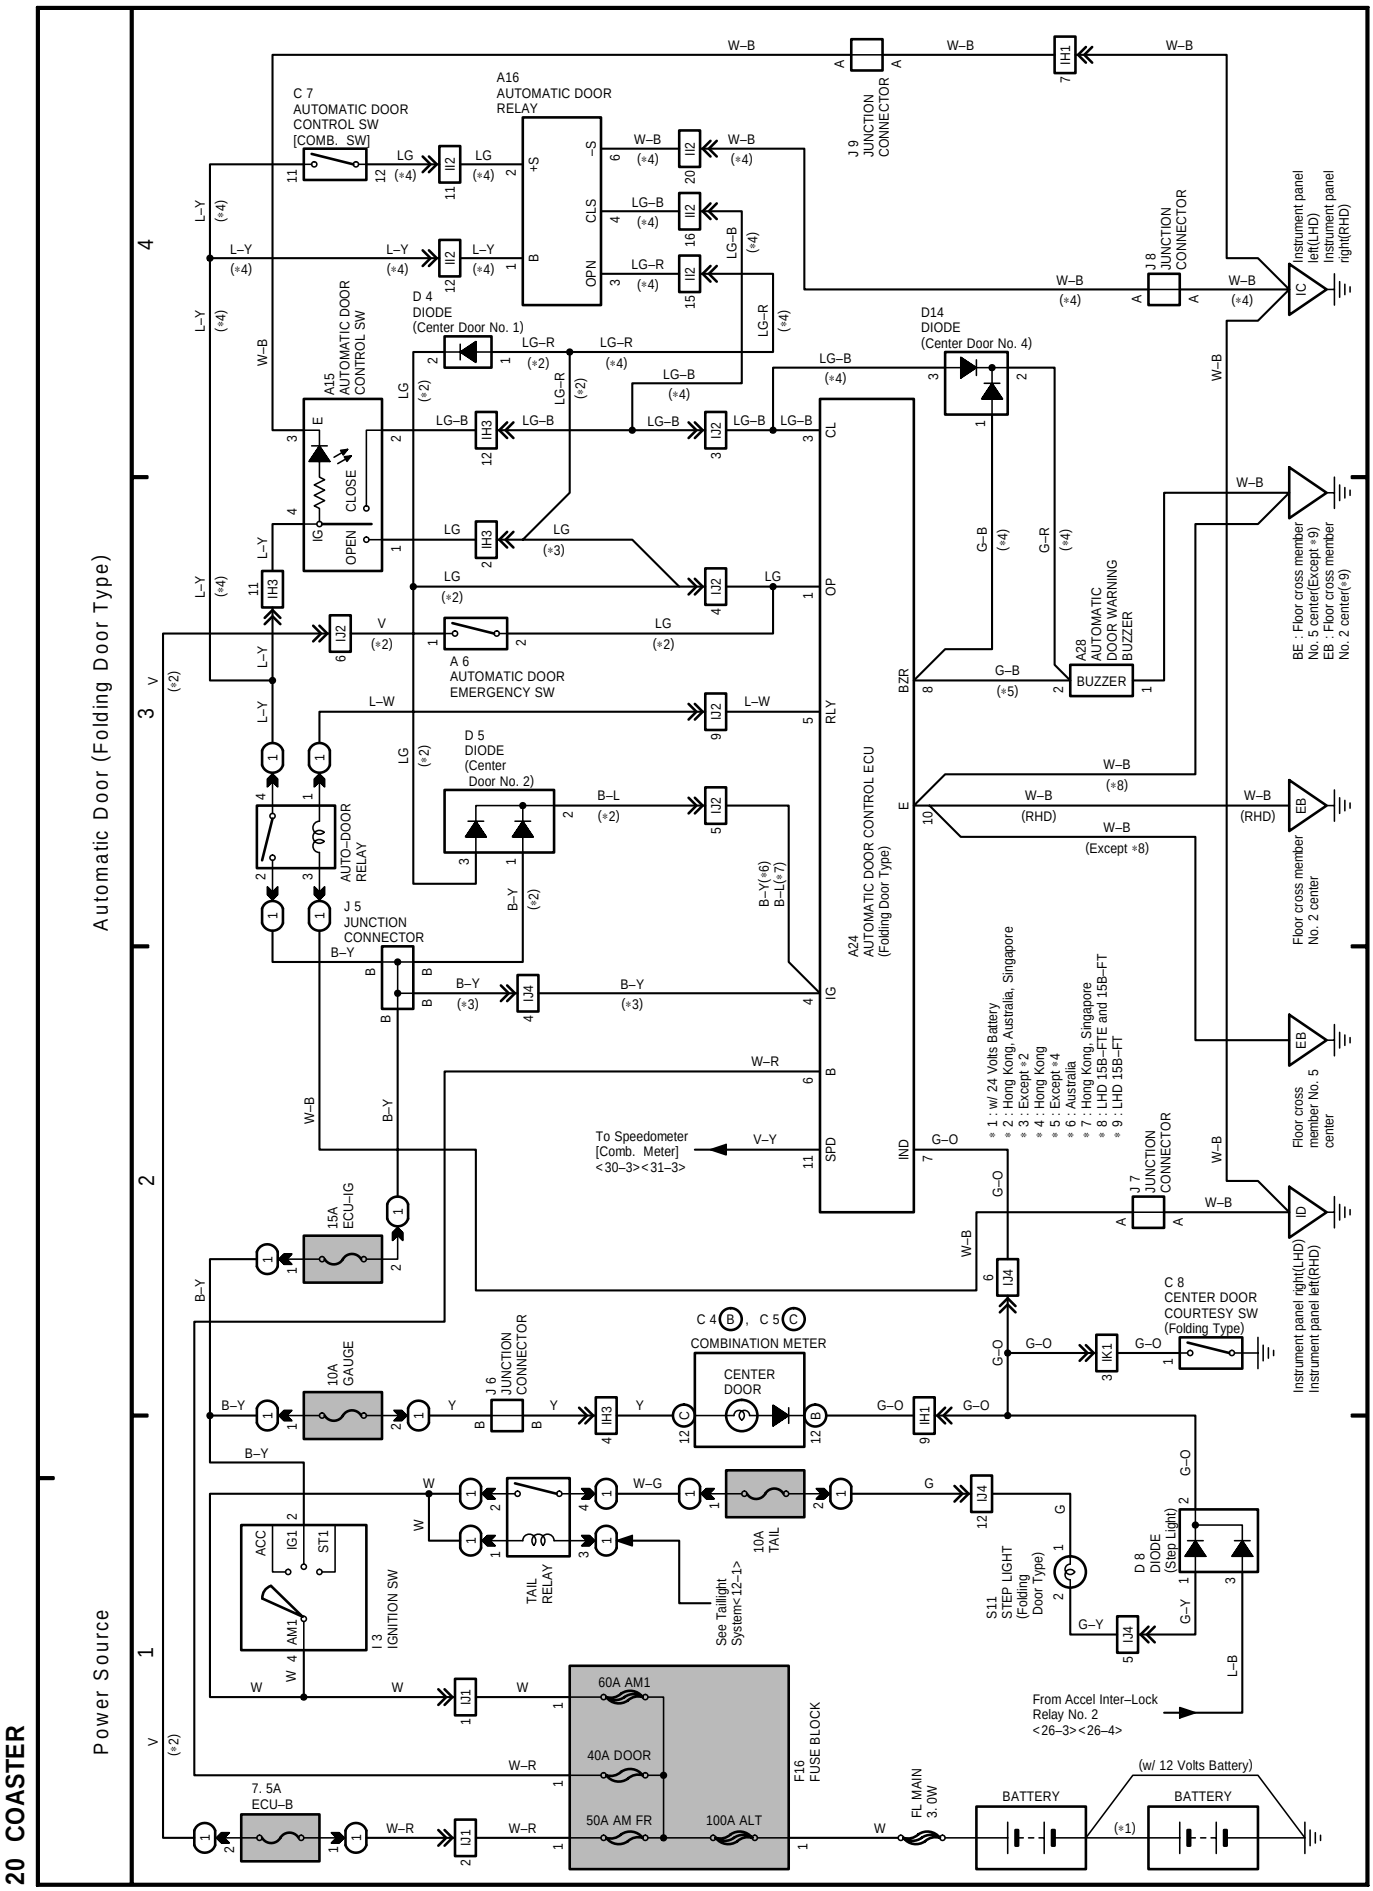

Automatic Door (Folding Door Type)
Power Source
20 COASTER
C 7 AUTOMATIC DOOR CONTROL SW [COMB. SW]
A16 AUTOMATIC DOOR RELAY
J 9 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Instrument panel left(LHD) Instrument panel right(RHD)
D 4 DIODE (Center Door No. 1)
D14 DIODE (Center Door No. 4)
A15 AUTOMATIC DOOR CONTROL SW
A 6 AUTOMATIC DOOR EMERGENCY SW
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
BE : Floor cross member No. 5 center(Except *9)
EB : Floor cross member No. 2 center(*9)
D 5 DIODE (Center Door No. 2)
AUTO–DOOR RELAY
J 5 JUNCTION CONNECTOR
A24 AUTOMATIC DOOR CONTROL ECU (Folding Door Type)
Floor cross member No. 2 center
Floor cross member No. 5 center
*1 : w/ 24 Volts Battery
*2 : Hong Kong, Australia, Singapore
*3 : Except *2
*4 : Hong Kong
*5 : Except *4
*6 : Australia
*7 : Hong Kong, Singapore
*8 : LHD 15B–FTE and 15B–FT
*9 : LHD 15B–FT
To Speedometer [Comb. Meter] <30–3><31–3>
J 7 JUNCTION CONNECTOR
Instrument panel right(LHD) Instrument panel left(RHD)
15A ECU–IG
C 8 CENTER DOOR COURTESY SW (Folding Type)
C 4 (B), C 5 (C) COMBINATION METER
CENTER DOOR
10A GAUGE
J 6 JUNCTION CONNECTOR
10A TAIL
TAIL RELAY
See Taillight System<12–1>
I 3 IGNITION SW
ACC
IG1
ST1
AM1
S11 STEP LIGHT (Folding Door Type)
D 8 DIODE (Step Light)
From Accel Inter–Lock Relay No. 2 <26–3><26–4>
60A AM1
40A DOOR
50A AM FR
100A ALT
F16 FUSE BLOCK
FL MAIN 3. 0W
7. 5A ECU–B
BATTERY
(w/ 12 Volts Battery)
BATTERY