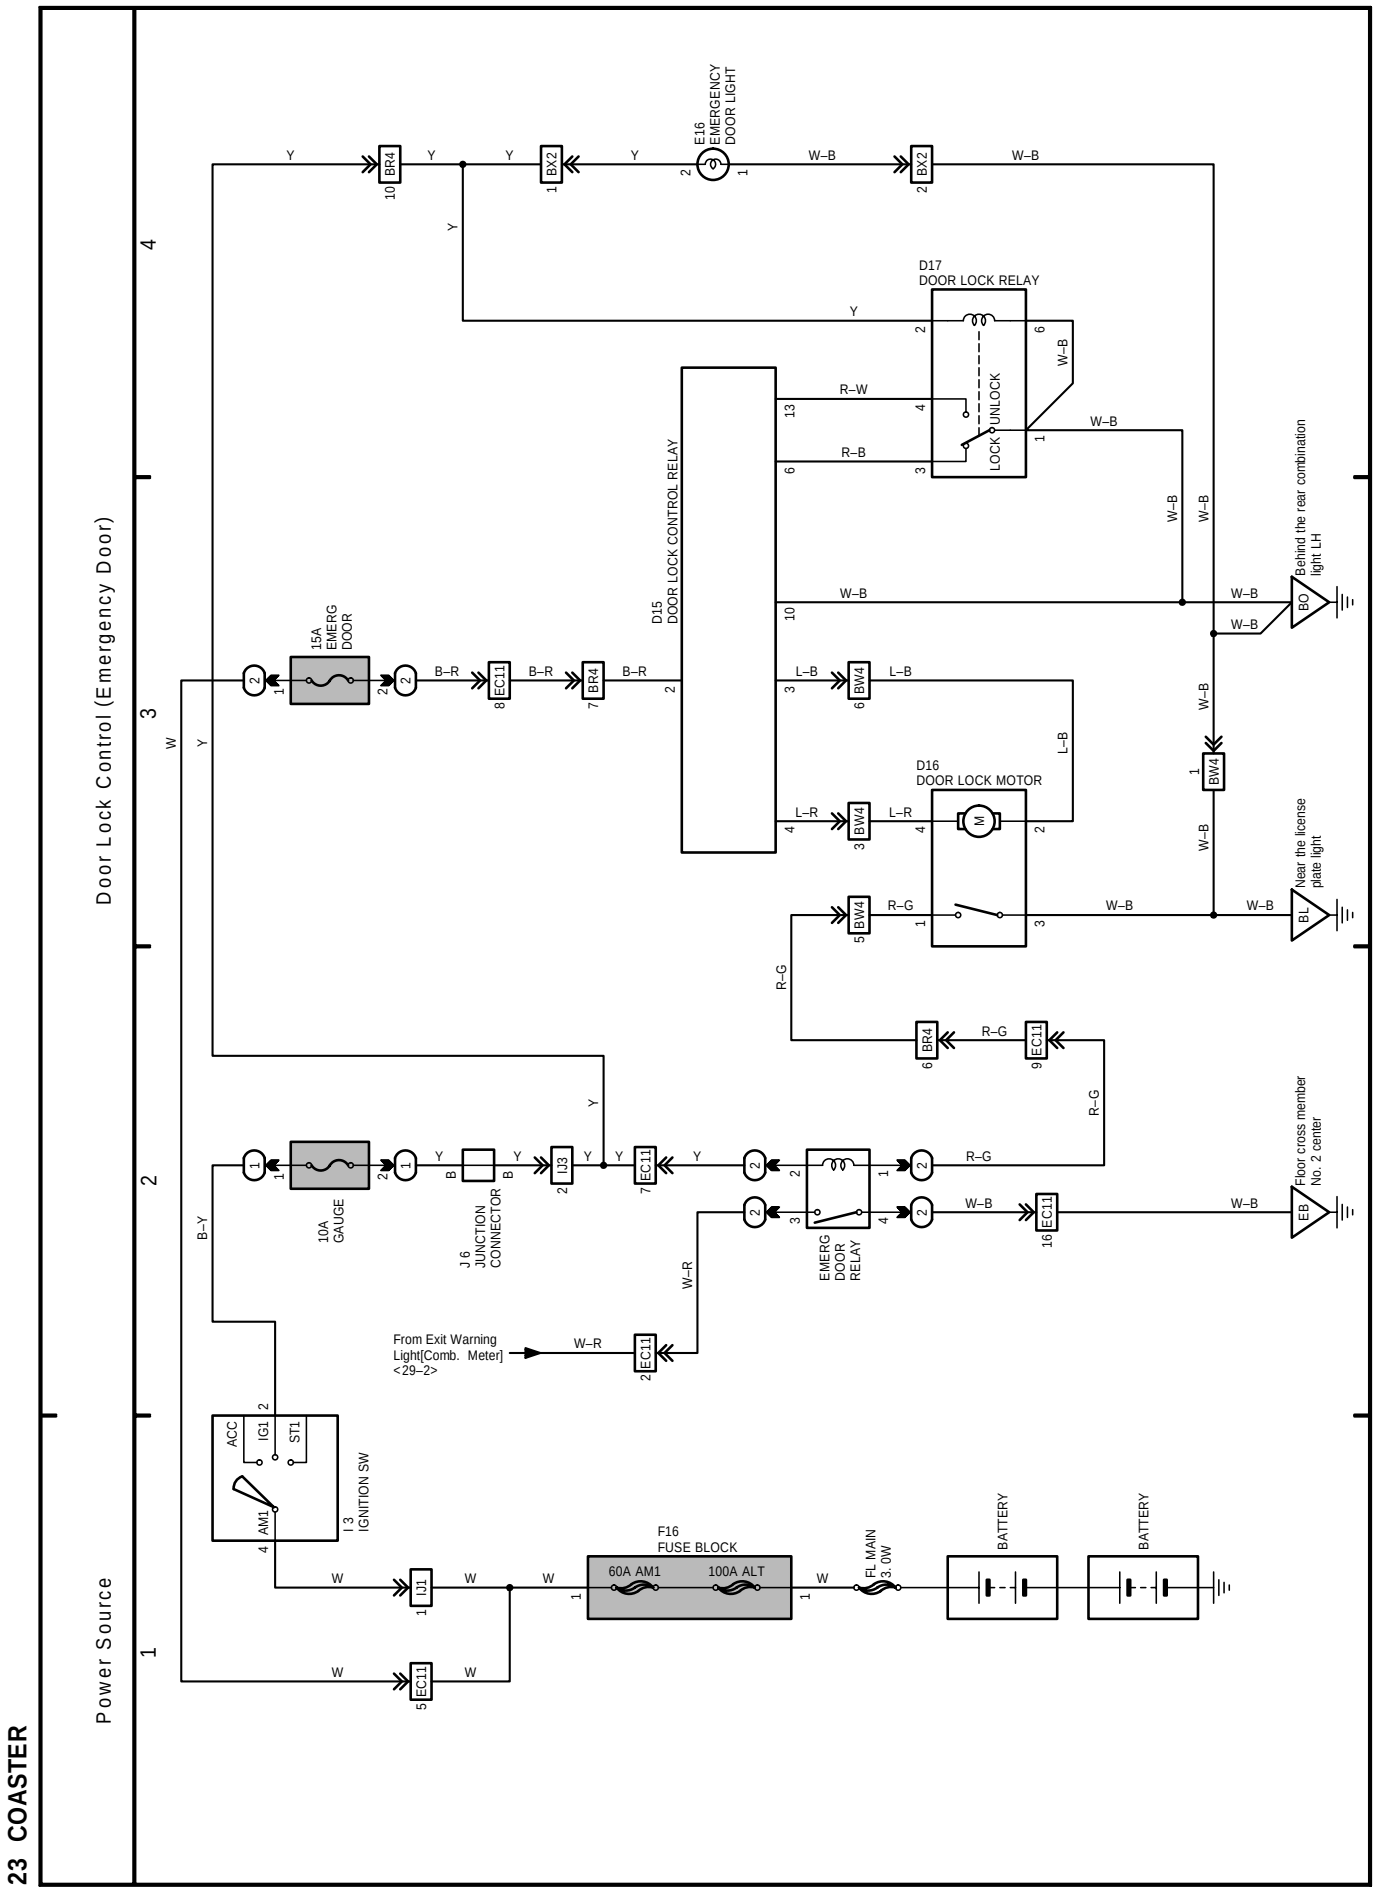

Door Lock Control (Emergency Door)
Power Source
E16 EMERGENCY DOOR LIGHT
D17 DOOR LOCK RELAY
LOCK UNLOCK
D15 DOOR LOCK CONTROL RELAY
D16 DOOR LOCK MOTOR
15A EMERG DOOR
10A GAUGE
J6 JUNCTION CONNECTOR
EMERG DOOR RELAY
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY
Behind the rear combination light LH
Near the license plate light
Floor cross member No. 2 center
From Exit Warning Light[Comb. Meter] <29–2>
BR4
BX2
BW4
EC11
IJ3
IJ1
BO
BL
EB
Y
W–B
R–W
R–B
L–B
L–R
B–R
R–G
B–Y
W–R
B