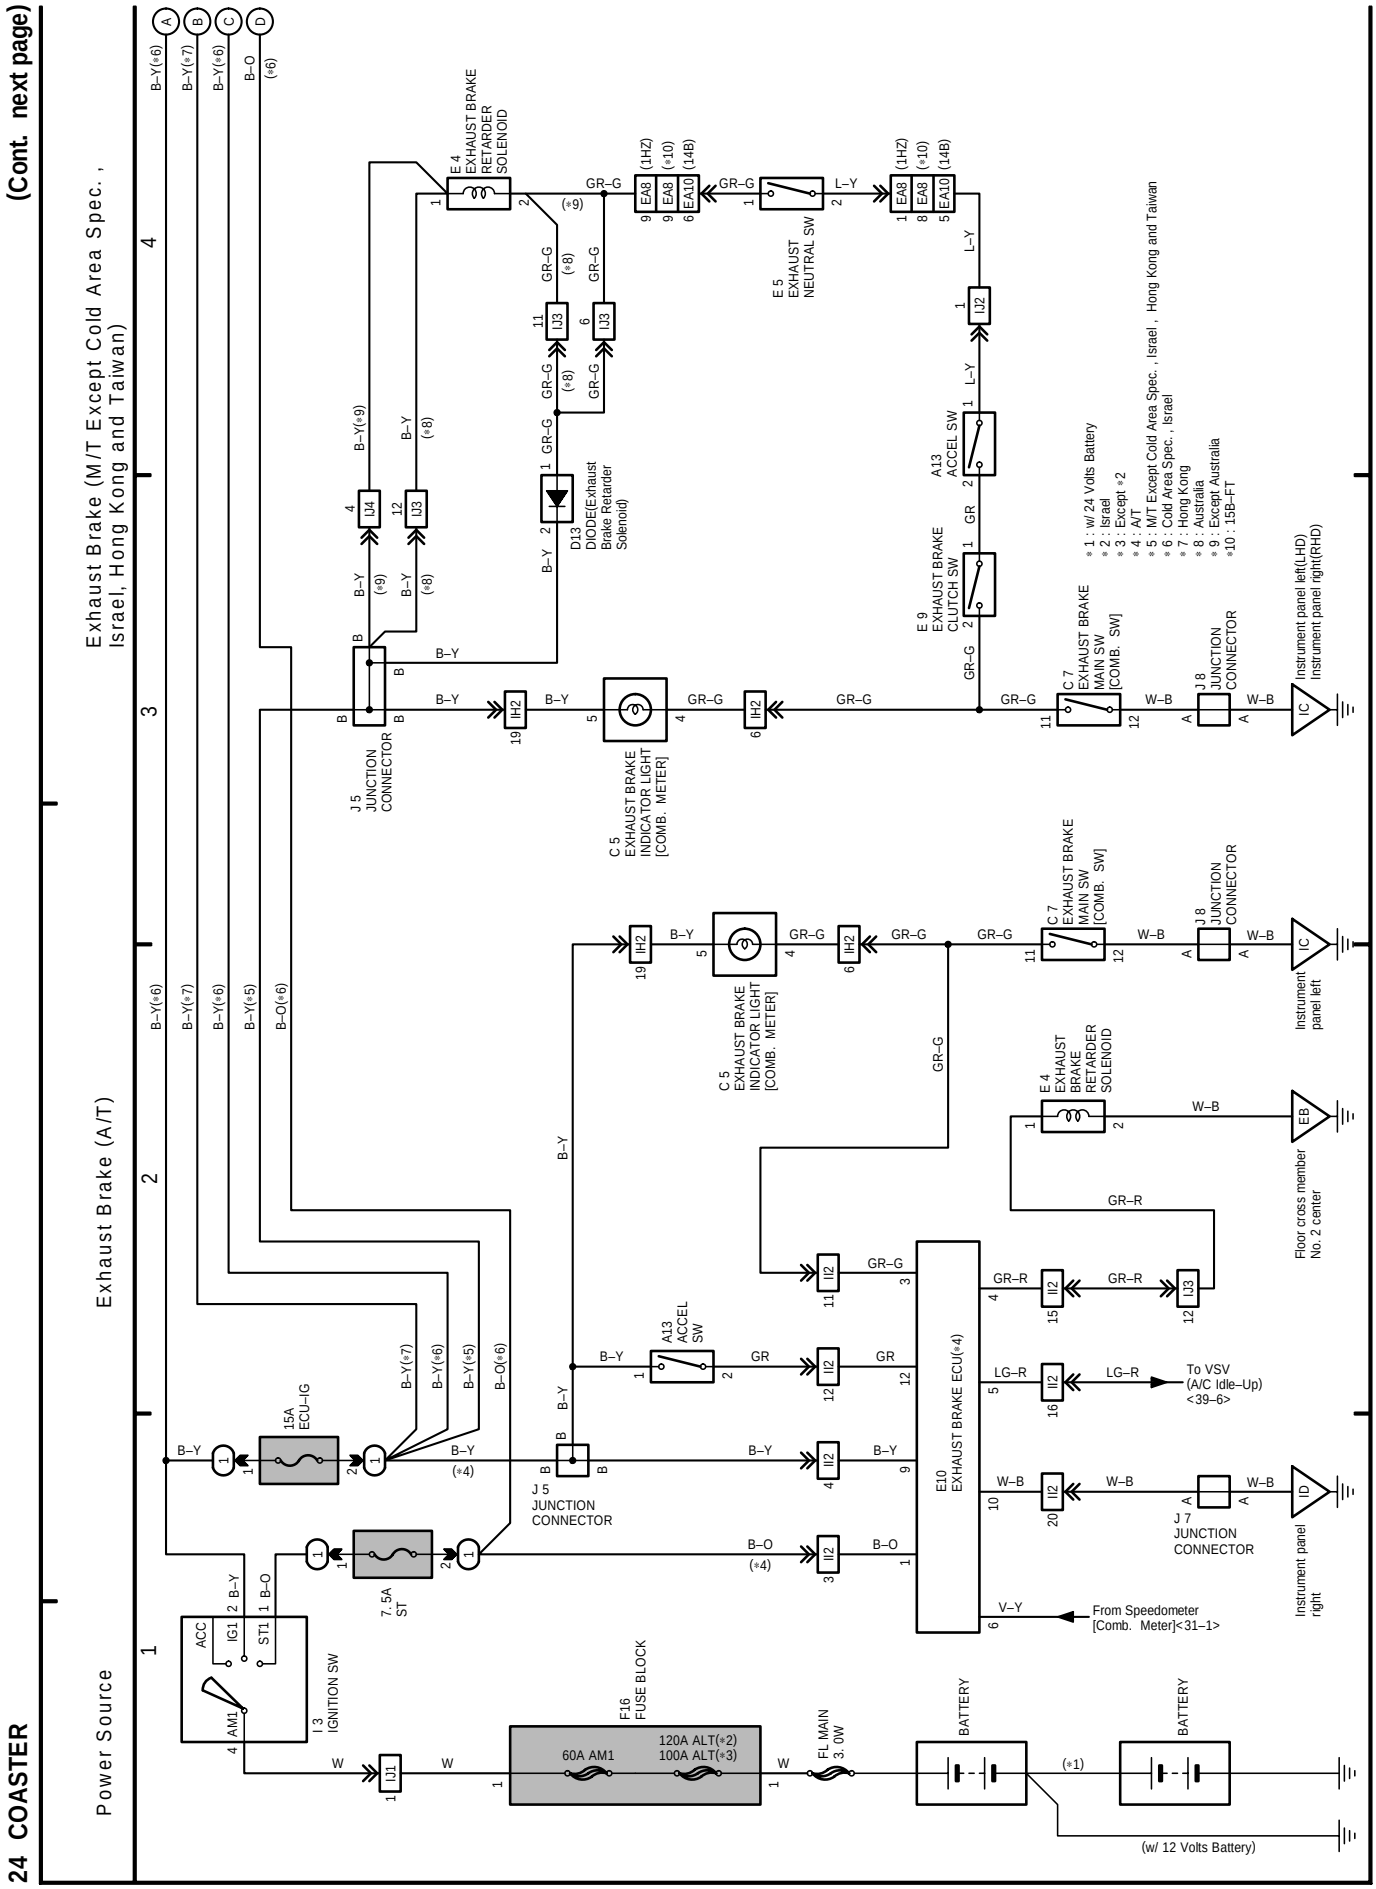
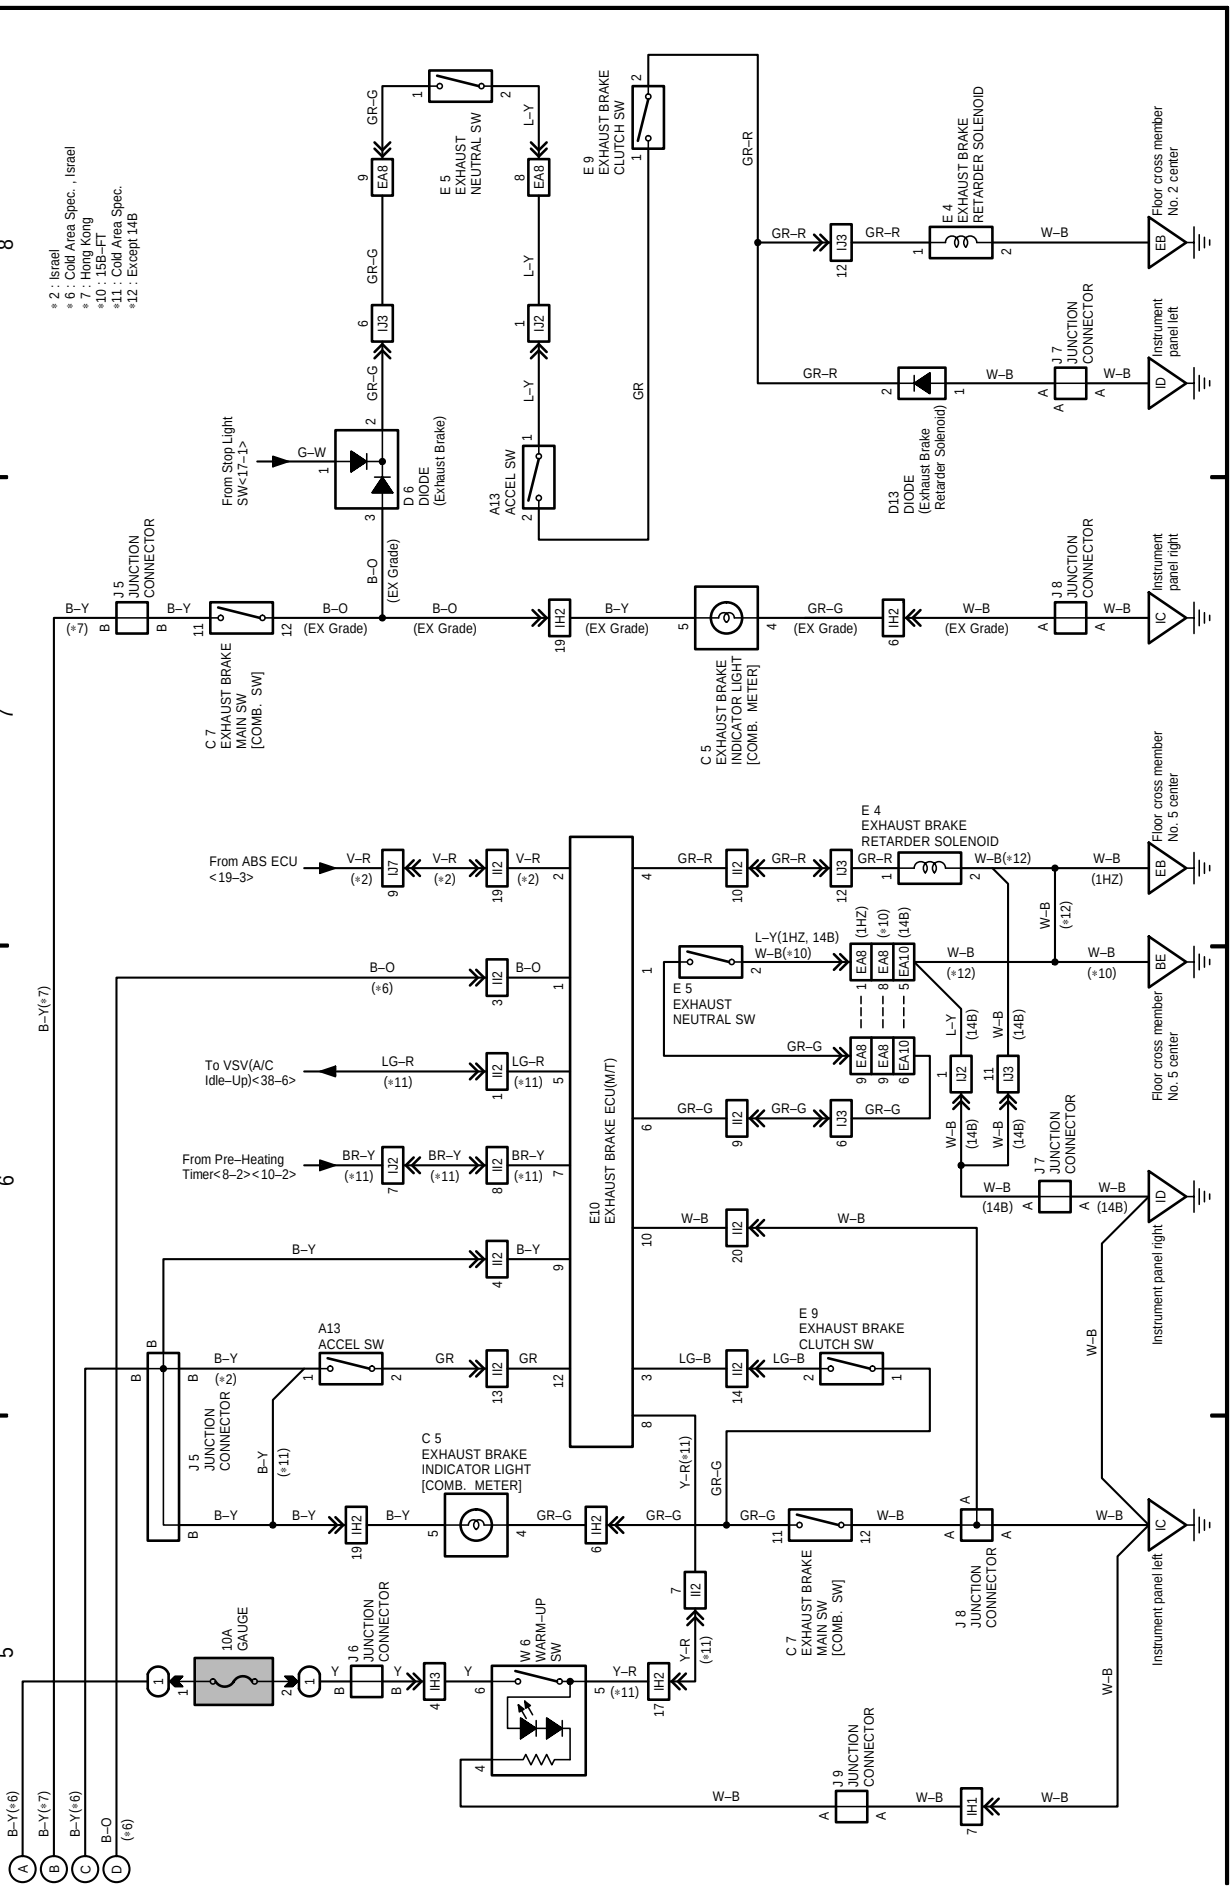

(Cont. next page)
24 COASTER
Power Source
Exhaust Brake (A/T)
Exhaust Brake (M/T Except Cold Area Spec., Israel, Hong Kong and Taiwan)
E 4 EXHAUST BRAKE RETARDER SOLENOID
E 5 EXHAUST NEUTRAL SW
A13 ACCEL SW
E 9 EXHAUST BRAKE CLUTCH SW
D13 DIODE(Exhaust Brake Retarder Solenoid)
C 7 EXHAUST BRAKE MAIN SW [COMB. SW]
C 5 EXHAUST BRAKE INDICATOR LIGHT [COMB. METER]
J 5 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
E10 EXHAUST BRAKE ECU(*4)
I 3 IGNITION SW
F16 FUSE BLOCK
15A ECU–IG
7.5A ST
60A AM1
120A ALT(*2)
100A ALT(*3)
FL MAIN 3.0W
BATTERY
To VSV (A/C Idle–Up) <39–6>
From Speedometer [Comb. Meter]<31–1>
Instrument panel left(LHD)
Instrument panel right(RHD)
Instrument panel left
Instrument panel right
Floor cross member No. 2 center
(w/ 12 Volts Battery)
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except * 2
* 4 : A/T
* 5 : M/T Except Cold Area Spec. , Israel , Hong Kong and Taiwan
* 6 : Cold Area Spec. , Israel
* 7 : Hong Kong
* 8 : Australia
* 9 : Except Australia
*10 : 15B–FT


Exhaust Brake (Hong Kong)
Exhaust Brake (Cold Area Spec. , Israel)
*2 : Israel
*6 : Cold Area Spec. , Israel
*7 : Hong Kong
*10 : 15B–FT
*11 : Cold Area Spec.
*12 : Except 14B
From Stop Light SW<17–1>
D 6 DIODE (Exhaust Brake)
A13 ACCEL SW
E 5 EXHAUST NEUTRAL SW
E 9 EXHAUST BRAKE CLUTCH SW
E 4 EXHAUST BRAKE RETARDER SOLENOID
D13 DIODE (Exhaust Brake Retarder Solenoid)
J 5 JUNCTION CONNECTOR
C 7 EXHAUST BRAKE MAIN SW [COMB. SW]
C 5 EXHAUST BRAKE INDICATOR LIGHT [COMB. METER]
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
Instrument panel right
Instrument panel left
Floor cross member No. 2 center
Floor cross member No. 5 center
From ABS ECU <19–3>
To VSV(A/C Idle–Up)<38–6>
From Pre–Heating Timer<8–2><10–2>
E10 EXHAUST BRAKE ECU(M/T)
J 6 JUNCTION CONNECTOR
10A GAUGE
W 6 WARM–UP SW
J 9 JUNCTION CONNECTOR