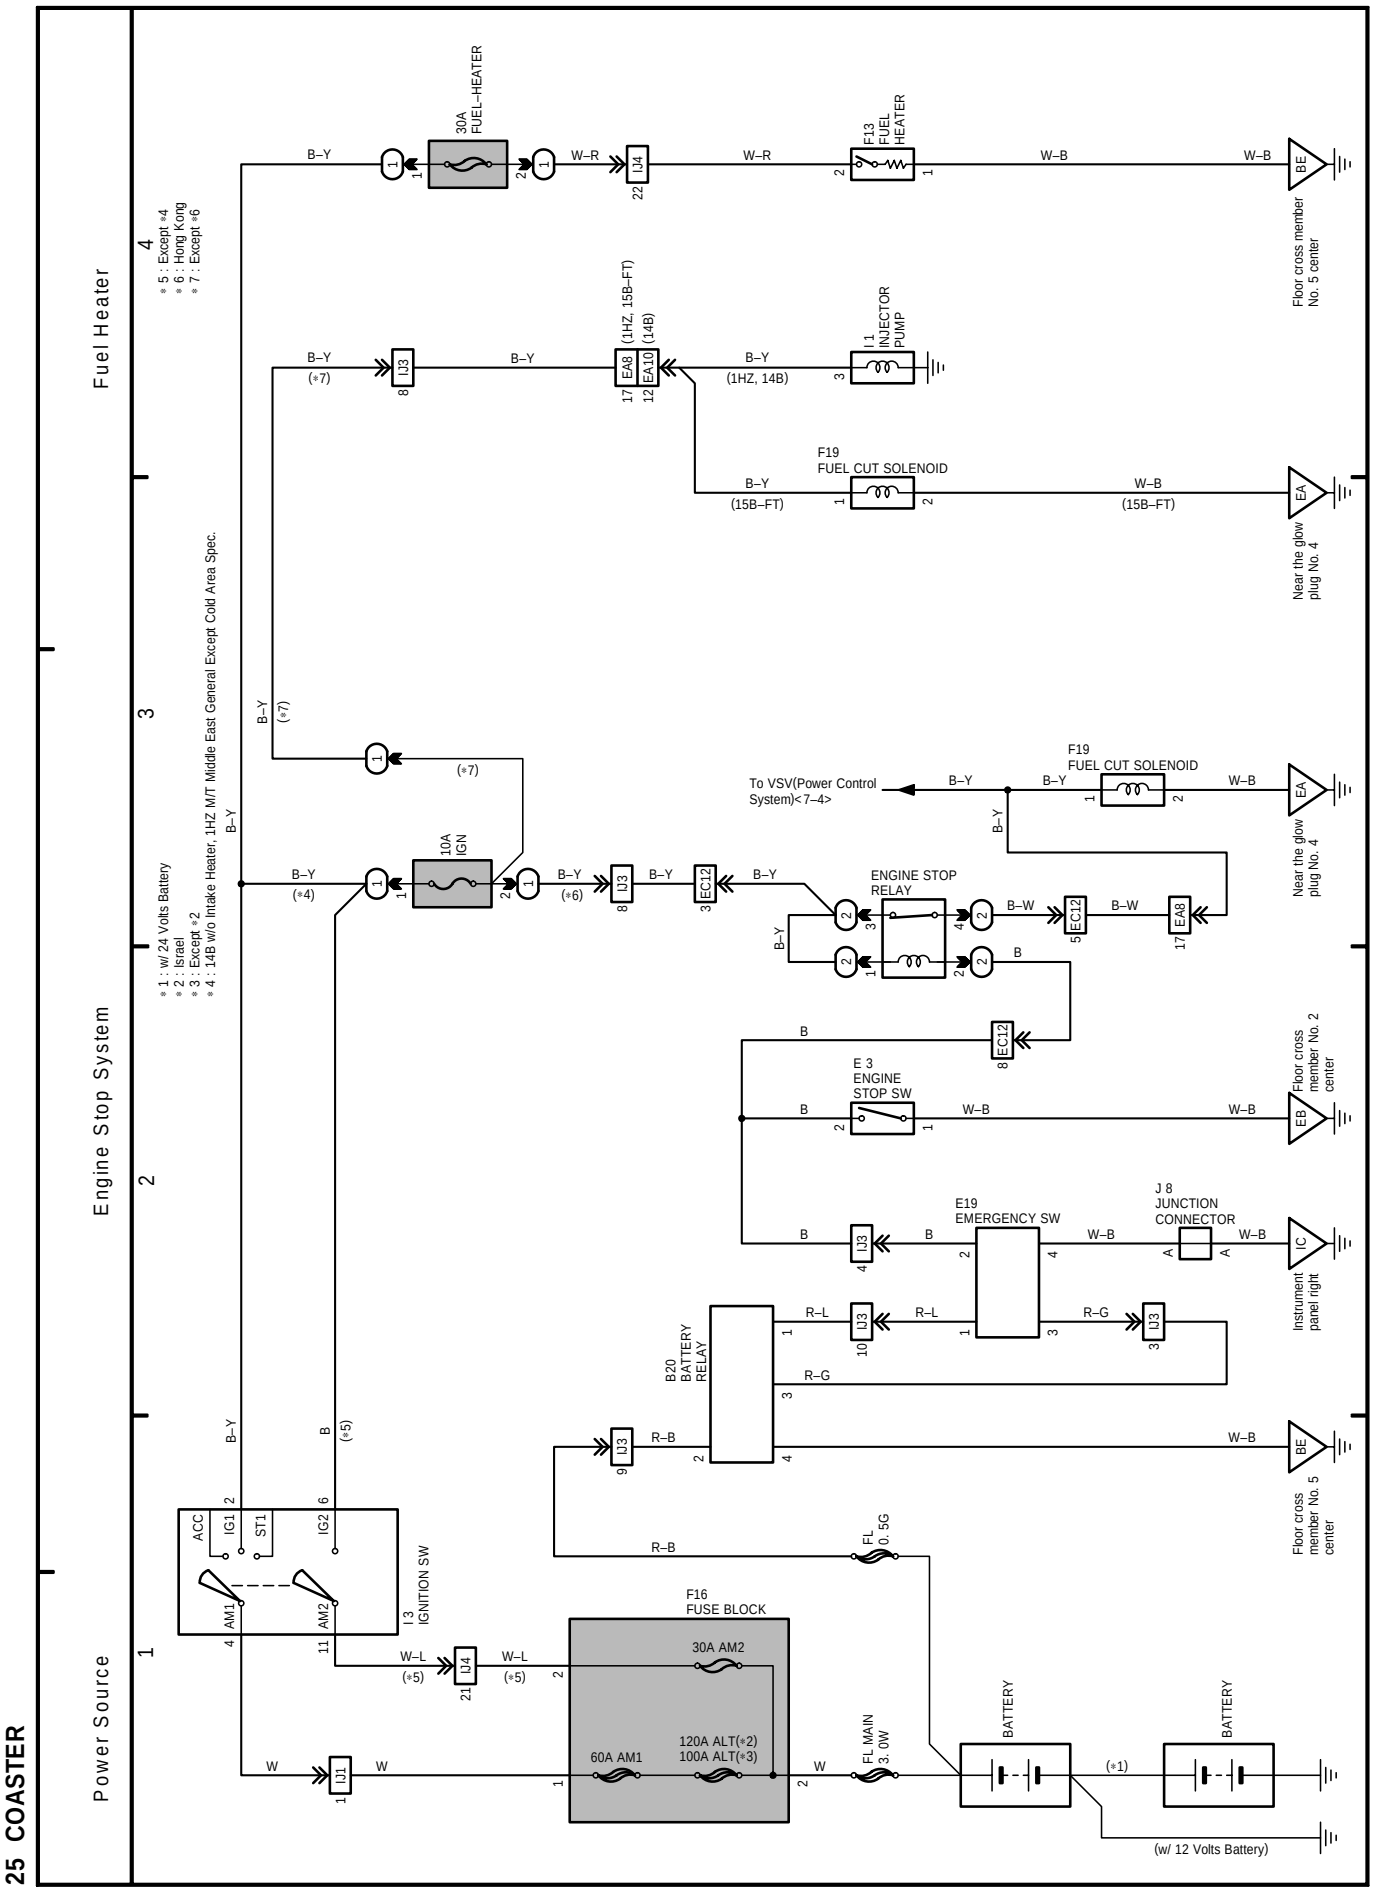

Fuel Heater
Engine Stop System
Power Source
25 COASTER
30A FUEL–HEATER
F13 FUEL HEATER
Floor cross member No. 5 center
I1 INJECTOR PUMP
(1HZ, 15B–FT)
(14B)
F19 FUEL CUT SOLENOID
Near the glow plug No. 4
To VSV(Power Control System)<7–4>
10A IGN
ENGINE STOP RELAY
E 3 ENGINE STOP SW
Floor cross member No. 2 center
E19 EMERGENCY SW
J 8 JUNCTION CONNECTOR
Instrument panel right
B20 BATTERY RELAY
Floor cross member No. 5 center
I3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
30A AM2
60A AM1
120A ALT(*2)
100A ALT(*3)
FL MAIN 3. 0W
FL 0. 5G
BATTERY
(w/ 12 Volts Battery)
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except *2
* 4 : 14B w/o Intake Heater, 1HZ M/T Middle East General Except Cold Area Spec.
* 5 : Except *4
* 6 : Hong Kong
* 7 : Except *6