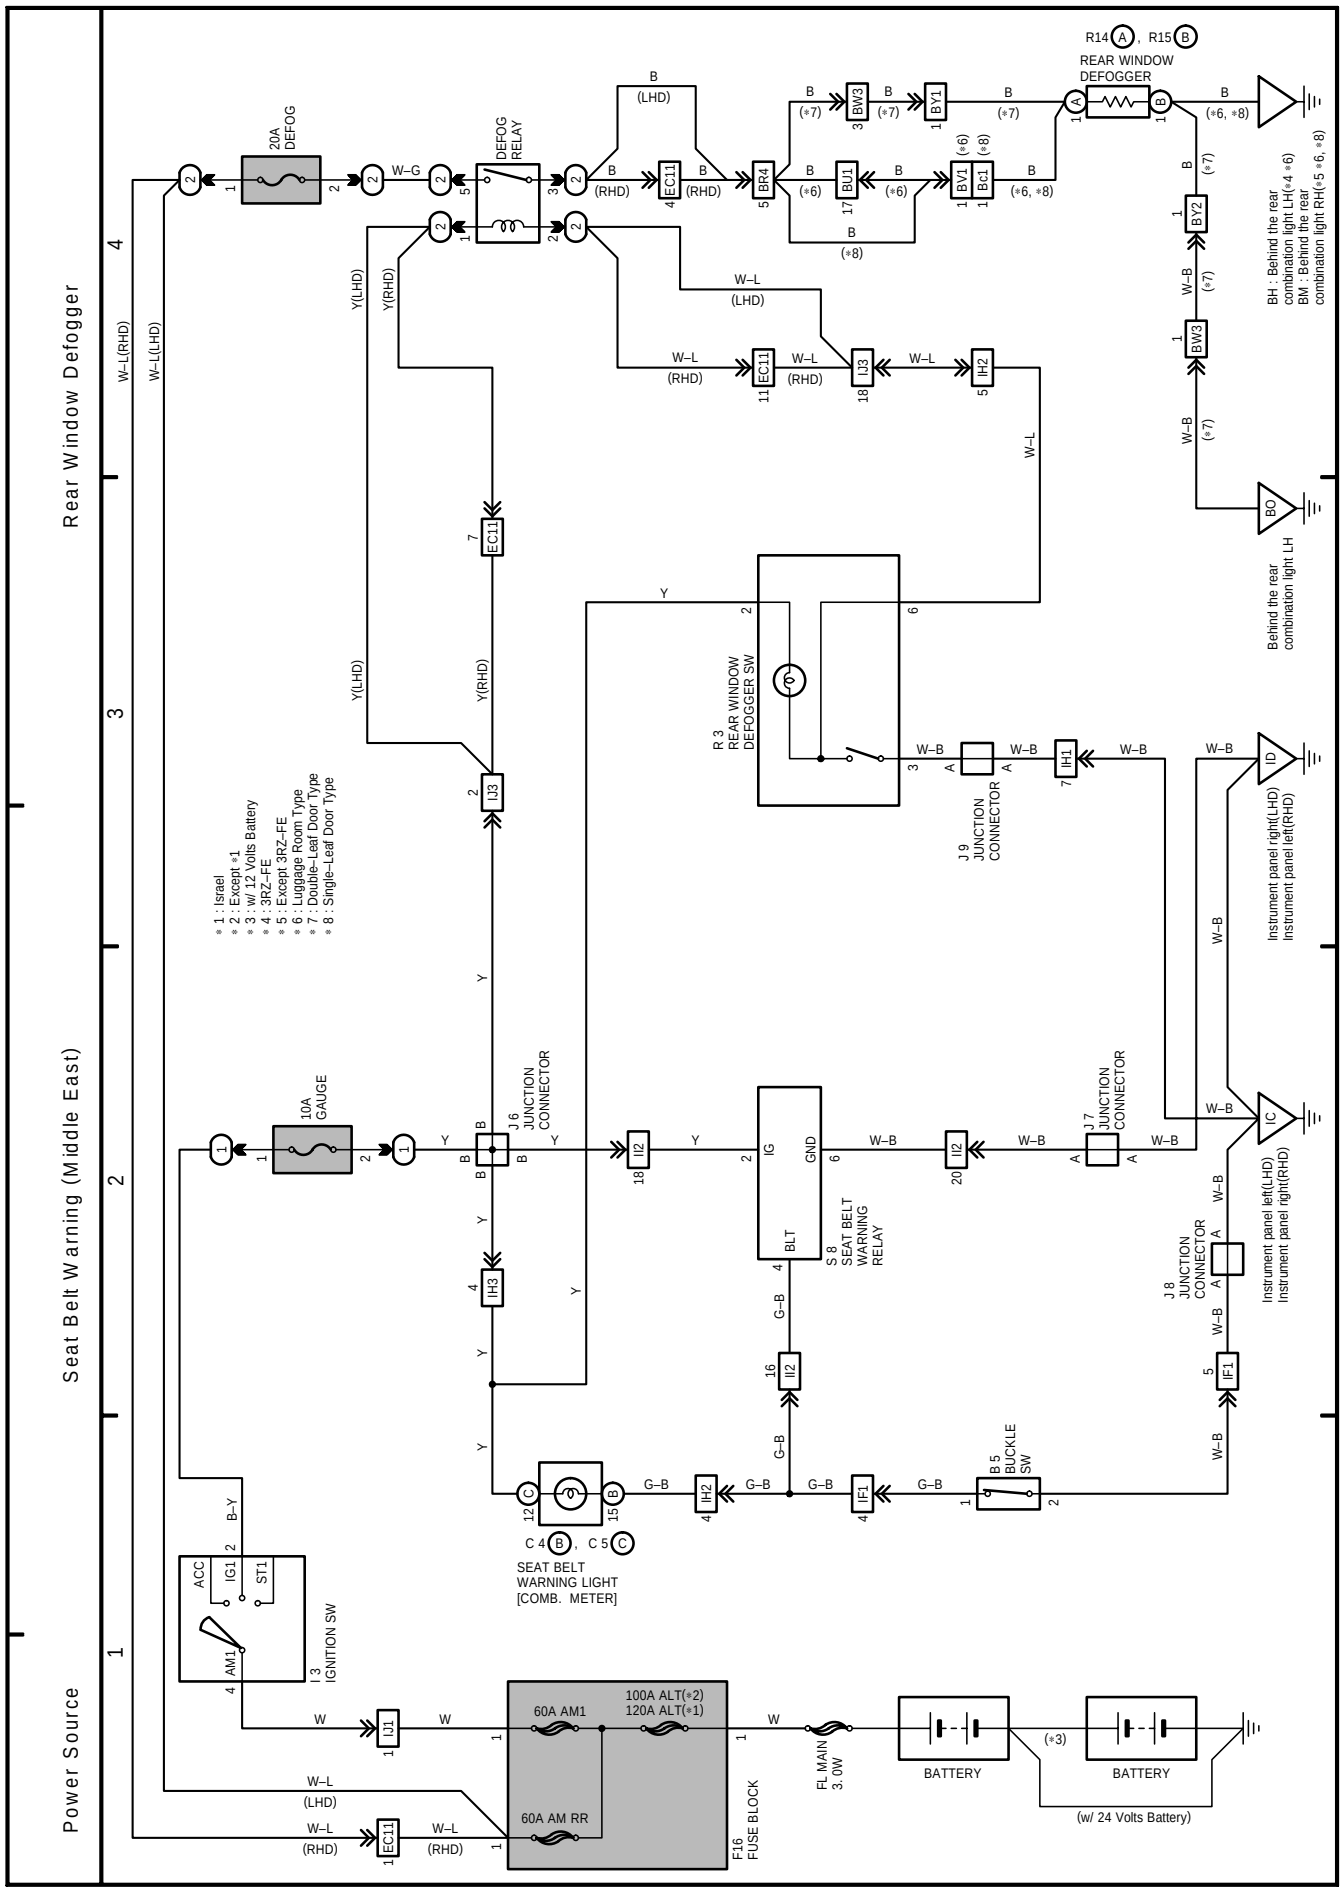

Power Source
Seat Belt Warning (Middle East)
Rear Window Defogger
1
2
3
4
20A DEFOG
DEFOG RELAY
10A GAUGE
REAR WINDOW DEFOGGER
R14 A , R15 B
REAR WINDOW DEFOGGER SW
R 3
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J 9 JUNCTION CONNECTOR
S 8 SEAT BELT WARNING RELAY
B 5 BUCKLE SW
I 3 IGNITION SW
ACC
IG1
ST1
AM1
SEAT BELT WARNING LIGHT [COMB. METER]
C 4 B , C 5 C
60A AM1
100A ALT(*2)
120A ALT(*1)
60A AM RR
F16 FUSE BLOCK
FL MAIN 3.0W
BATTERY
BATTERY
(w/ 24 Volts Battery)
(*3)
BH : Behind the rear combination light LH(*4 *6)
BM : Behind the rear combination light RH(*5 *6, *8)
BO
Behind the rear combination light LH
ID
Instrument panel right(LHD)
Instrument panel left(RHD)
IC
Instrument panel left(LHD)
Instrument panel right(RHD)
* 1 : Israel
* 2 : Except *1
* 3 : w/ 12 Volts Battery
* 4 : 3RZ–FE
* 5 : Except 3RZ–FE
* 6 : Luggage Room Type
* 7 : Double–Leaf Door Type
* 8 : Single–Leaf Door Type