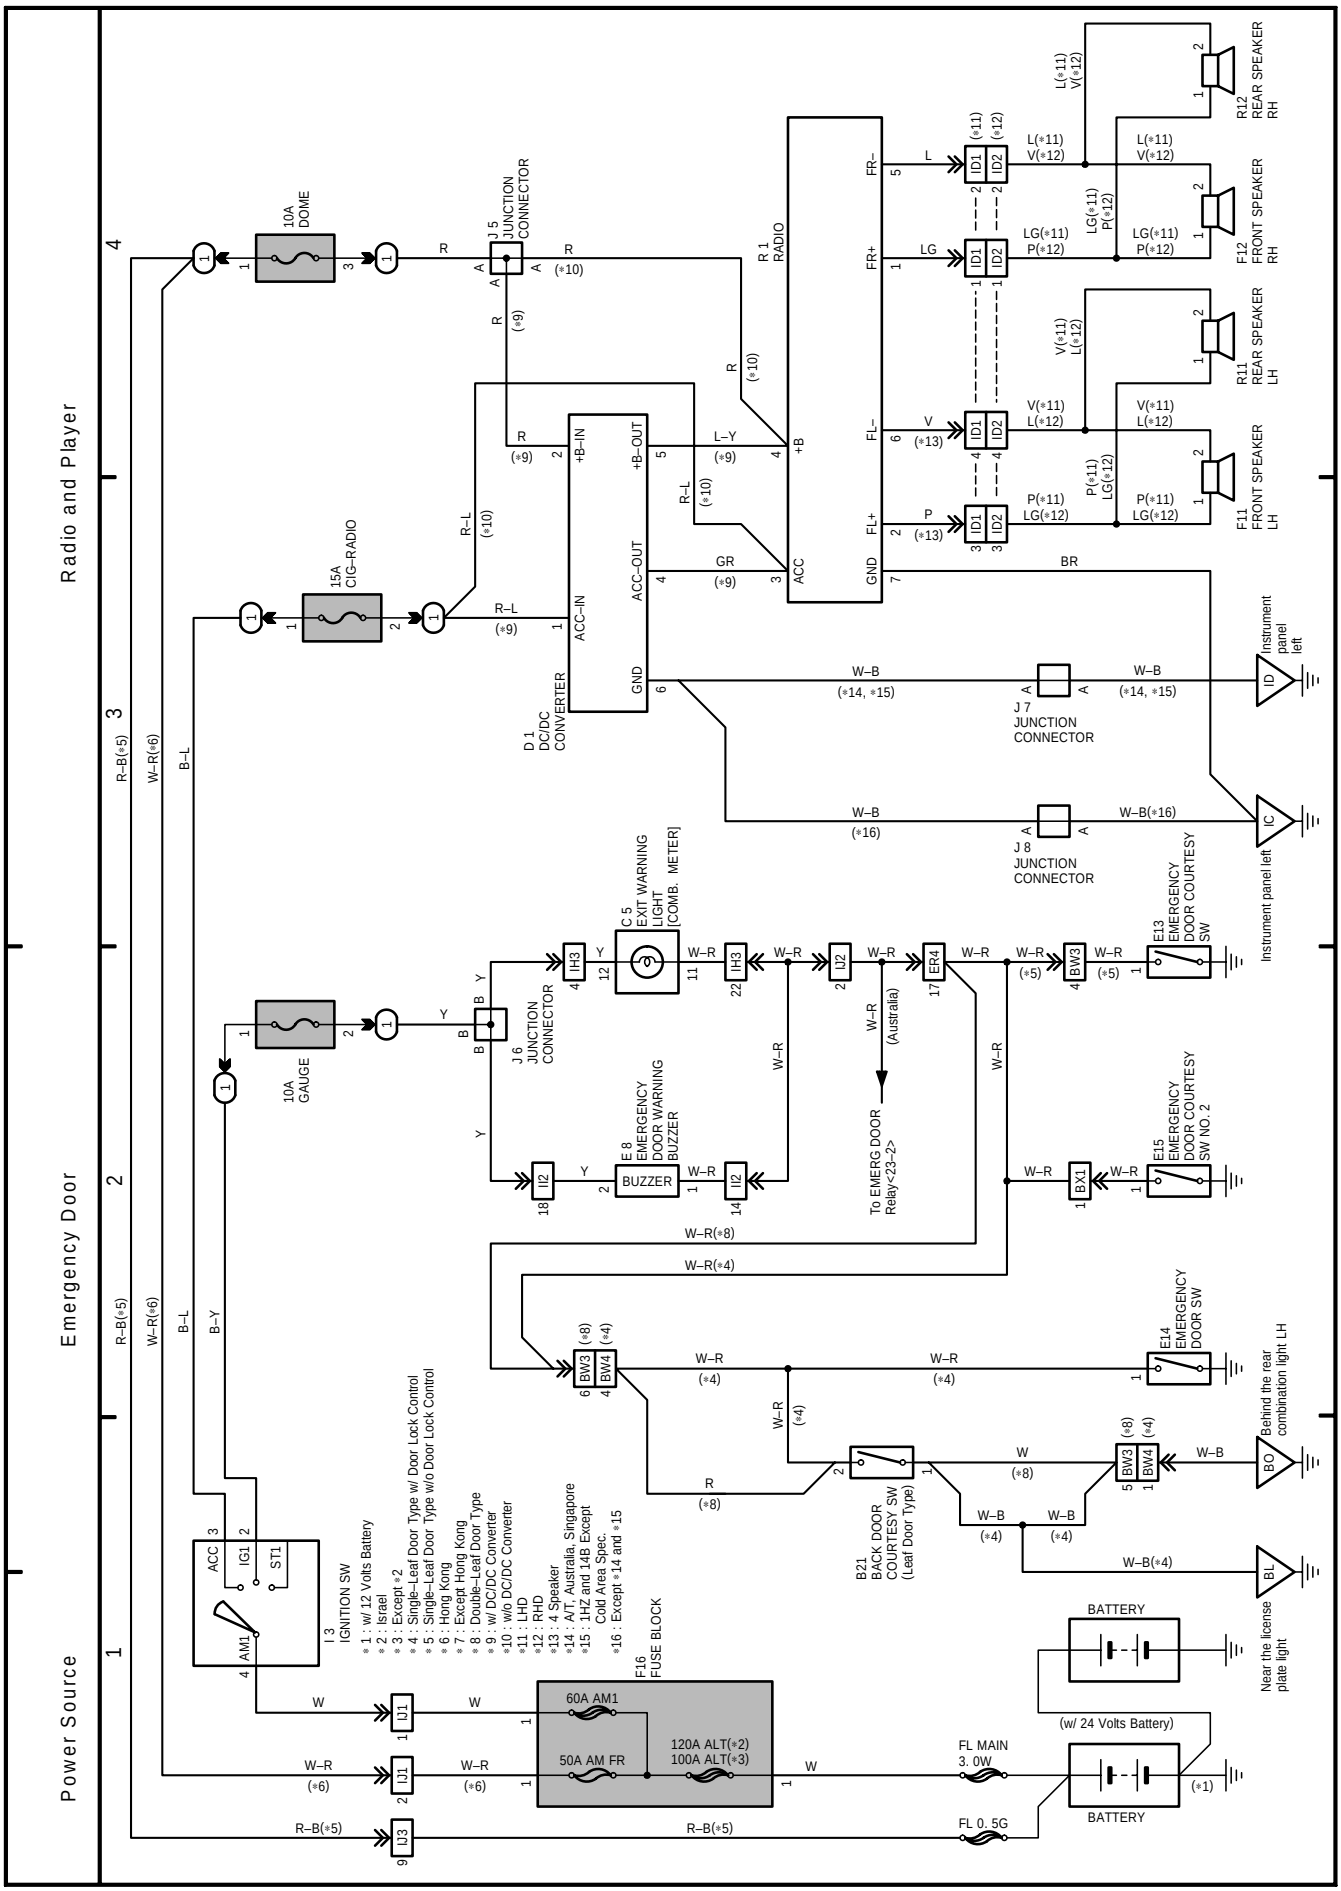

Power Source
Emergency Door
Radio and Player
10A DOME
15A CIG–RADIO
10A GAUGE
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
D 1 DC/DC CONVERTER
R 1 RADIO
C 5 EXIT WARNING LIGHT [COMB. METER]
E 8 EMERGENCY DOOR WARNING BUZZER
BUZZER
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
50A AM FR
120A ALT(*2)
100A ALT(*3)
FL MAIN 3. 0W
FL 0. 5G
BATTERY
(w/ 24 Volts Battery)
B21 BACK DOOR COURTESY SW (Leaf Door Type)
To EMERG DOOR Relay<23–2>
(Australia)
E13 EMERGENCY DOOR COURTESY SW
E14 EMERGENCY DOOR SW
E15 EMERGENCY DOOR COURTESY SW NO. 2
F11 FRONT SPEAKER LH
F12 FRONT SPEAKER RH
R11 REAR SPEAKER LH
R12 REAR SPEAKER RH
Instrument panel left
Behind the rear combination light LH
Near the license plate light
*1 : w/ 12 Volts Battery
*2 : Israel
*3 : Except *2
*4 : Single–Leaf Door Type w/ Door Lock Control
*5 : Single–Leaf Door Type w/o Door Lock Control
*6 : Hong Kong
*7 : Except Hong Kong
*8 : Double–Leaf Door Type
*9 : w/ DC/DC Converter
*10 : w/o DC/DC Converter
*11 : LHD
*12 : RHD
*13 : 4 Speaker
*14 : A/T, Australia, Singapore
*15 : 1HZ and 14B Except Cold Area Spec.
*16 : Except *14 and *15