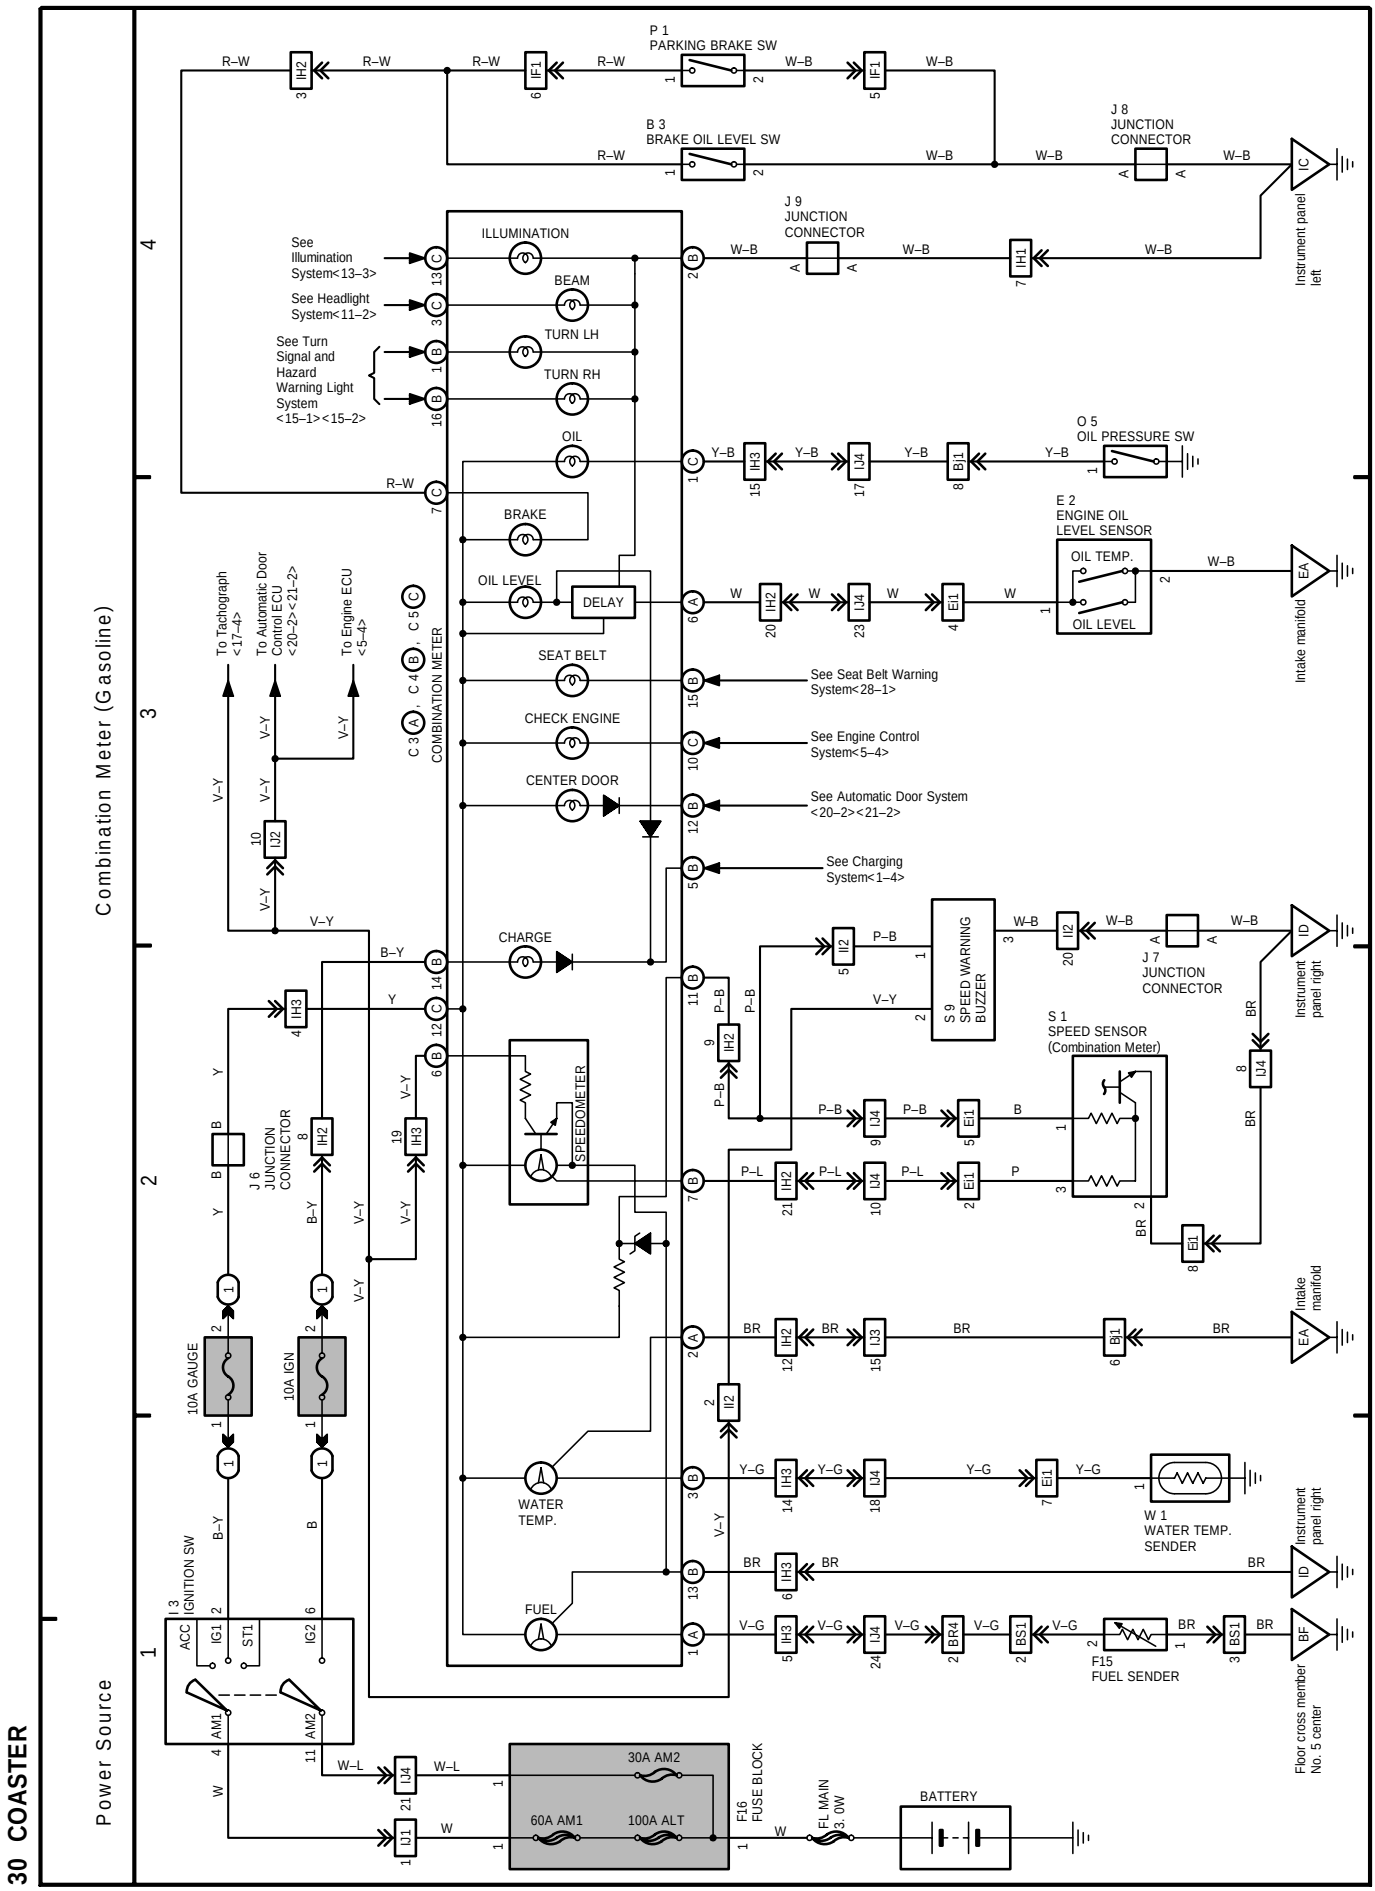

30 COASTER
Power Source
Combination Meter (Gasoline)
P 1
PARKING BRAKE SW
B 3
BRAKE OIL LEVEL SW
J 8
JUNCTION
CONNECTOR
J 9
JUNCTION
CONNECTOR
Instrument panel left
See Illumination System<13–3>
See Headlight System<11–2>
See Turn Signal and Hazard Warning Light System <15–1><15–2>
ILLUMINATION
BEAM
TURN LH
TURN RH
OIL
BRAKE
OIL LEVEL
DELAY
O 5
OIL PRESSURE SW
E 2
ENGINE OIL
LEVEL SENSOR
OIL TEMP.
OIL LEVEL
Intake manifold
To Tachograph <17–4>
To Automatic Door Control ECU <20–2><21–2>
To Engine ECU <5–4>
C 3 (A), C 4 (B), C 5 (C)
COMBINATION METER
SEAT BELT
See Seat Belt Warning System<28–1>
CHECK ENGINE
See Engine Control System<5–4>
CENTER DOOR
See Automatic Door System <20–2><21–2>
See Charging System<1–4>
CHARGE
S 9
SPEED WARNING
BUZZER
J 7
JUNCTION
CONNECTOR
Instrument panel right
S 1
SPEED SENSOR
(Combination Meter)
SPEEDOMETER
J 6
JUNCTION
CONNECTOR
10A GAUGE
10A IGN
I 3
IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
WATER
TEMP.
W 1
WATER TEMP.
SENDER
FUEL
F15
FUEL SENDER
Floor cross member No. 5 center
30A AM2
60A AM1
100A ALT
F16
FUSE BLOCK
FL MAIN
2. 0W
BATTERY