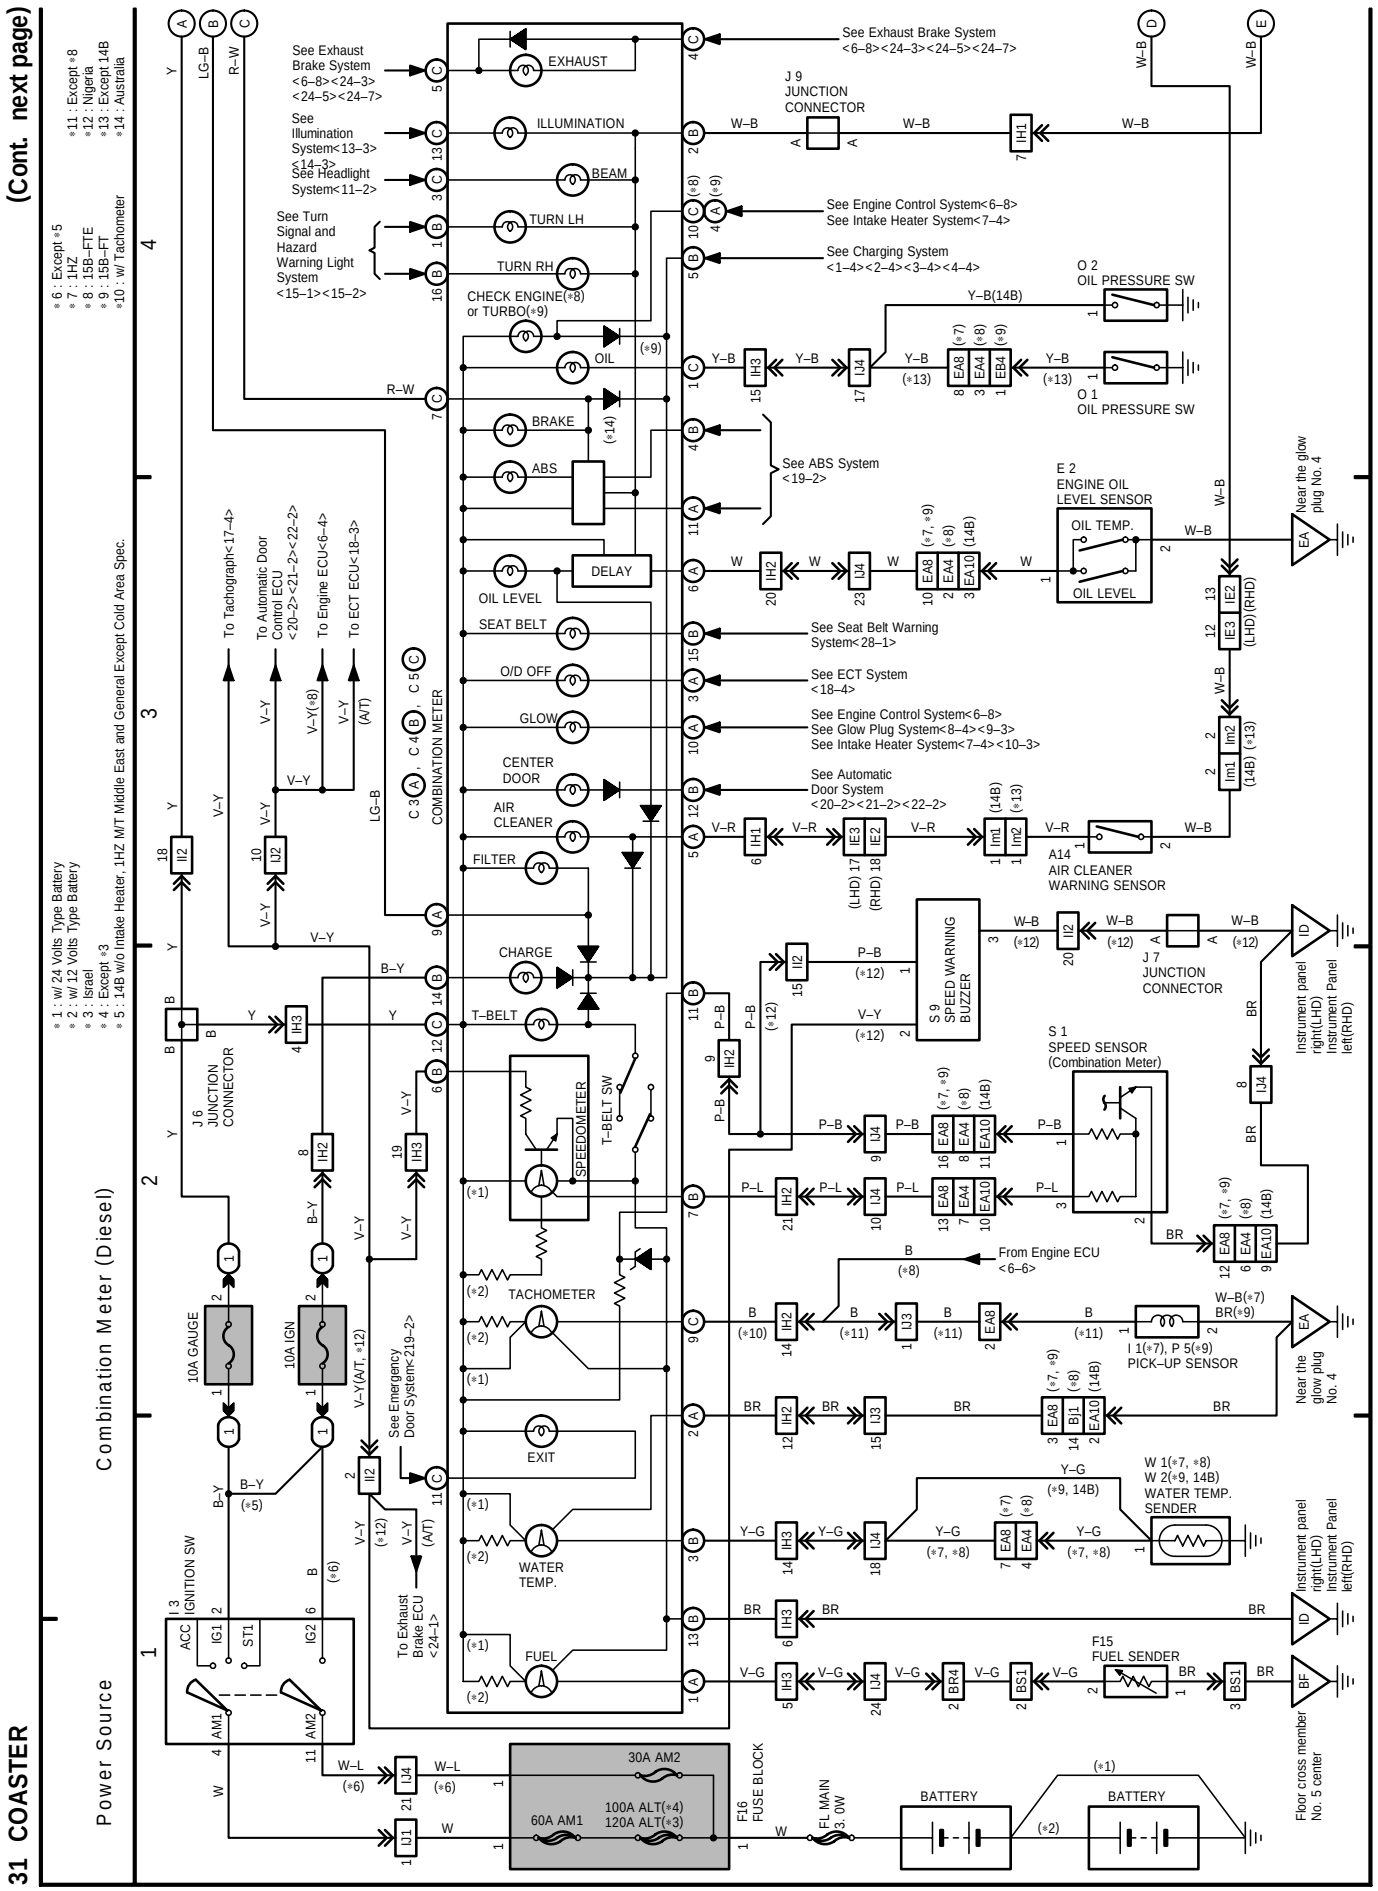
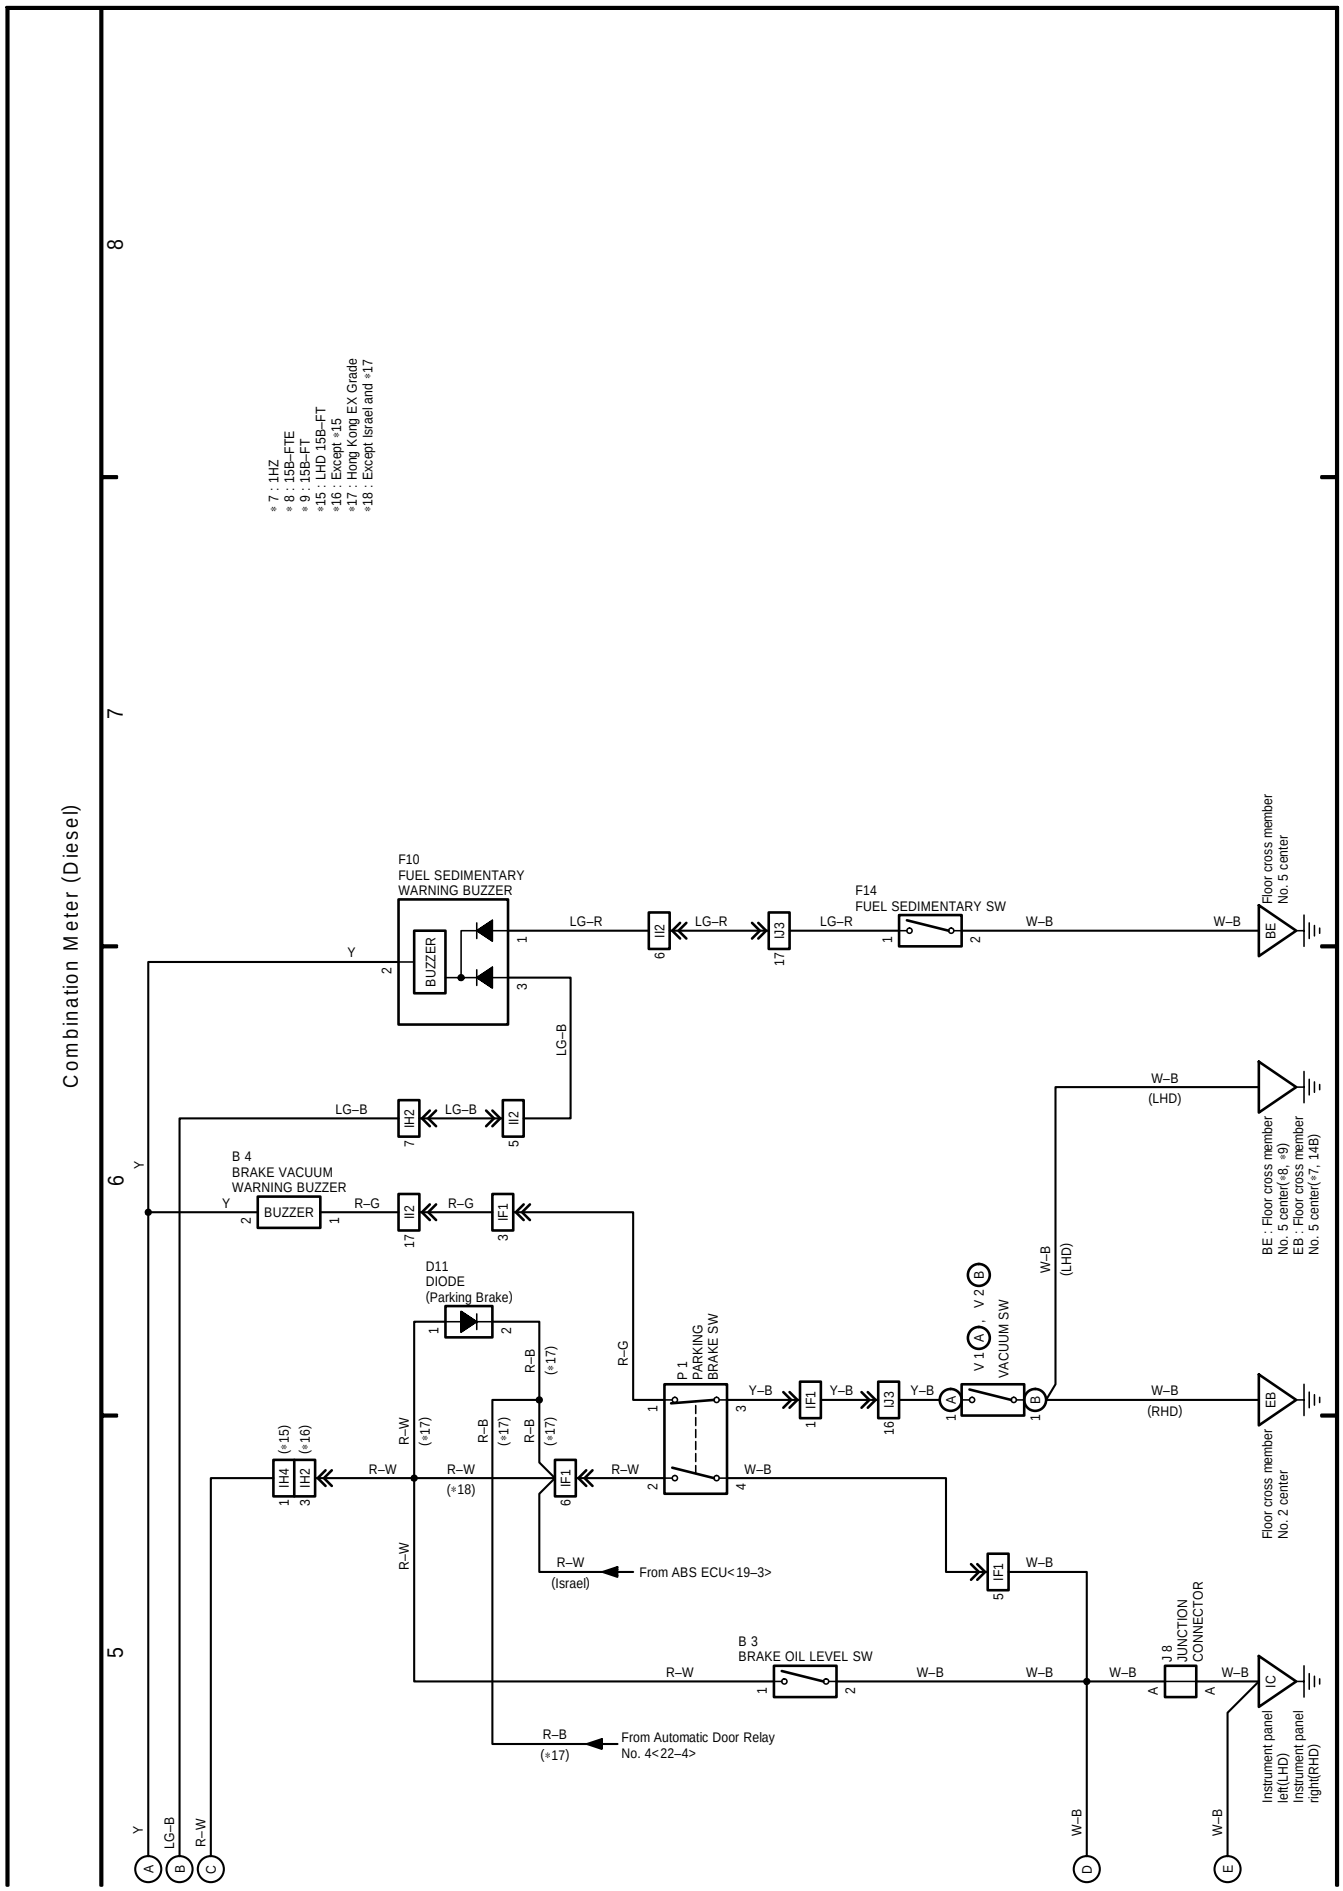

(Cont. next page)
31 COASTER
Power Source
Combination Meter (Diesel)
* 1 : w/ 24 Volts Type Battery
* 2 : w/ 12 Volts Type Battery
* 3 : Israel
* 4 : Except *3
* 5 : 14B w/o Intake Heater, 1HZ M/T Middle East and General Except Cold Area Spec.
* 6 : Except *5
* 7 : 1HZ
* 8 : 15B–FTE
* 9 : 15B–FT
*10 : w/ Tachometer
*11 : Except *8
*12 : Nigeria
*13 : Except 14B
*14 : Australia
See Exhaust Brake System <6–8><24–3><24–5><24–7>
See Illumination System<13–3><14–3>
See Headlight System<11–2>
See Turn Signal and Hazard Warning Light System <15–1><15–2>
EXHAUST
ILLUMINATION
BEAM
TURN LH
TURN RH
CHECK ENGINE(*8) or TURBO(*9)
OIL
BRAKE
ABS
DELAY
OIL LEVEL
SEAT BELT
O/D OFF
GLOW
CENTER DOOR
AIR CLEANER
FILTER
CHARGE
T–BELT
EXIT
WATER TEMP.
FUEL
SPEEDOMETER
TACHOMETER
T–BELT SW
C 3 (A), C 4 (B), C 5 (C) COMBINATION METER
To Tachograph<17–4>
To Automatic Door Control ECU <20–2><21–2><22–2>
To Engine ECU<6–4>
To ECT ECU<18–3>
To Exhaust Brake ECU <24–1>
See Emergency Door System<219–2>
J 9 JUNCTION CONNECTOR
See Exhaust Brake System <6–8><24–3><24–5><24–7>
See Engine Control System<6–8>
See Intake Heater System<7–4>
See Charging System <1–4><2–4><3–4><4–4>
O 2 OIL PRESSURE SW
O 1 OIL PRESSURE SW
See ABS System <19–2>
E 2 ENGINE OIL LEVEL SENSOR
OIL TEMP.
OIL LEVEL
Near the glow plug No. 4
(LHD)(RHD)
See Seat Belt Warning System<28–1>
See ECT System <18–4>
See Engine Control System<6–8>
See Glow Plug System<8–4><9–3>
See Intake Heater System<7–4><10–3>
See Automatic Door System <20–2><21–2><22–2>
A14 AIR CLEANER WARNING SENSOR
S 9 SPEED WARNING BUZZER
J 7 JUNCTION CONNECTOR
Instrument Panel right(LHD) Instrument Panel left(RHD)
S 1 SPEED SENSOR (Combination Meter)
From Engine ECU <6–6>
I 1(*7), P 5(*9) PICK–UP SENSOR
W 1(*7, *8) W 2(*9, 14B) WATER TEMP. SENDER
F15 FUEL SENDER
Floor cross member No. 5 center
J 6 JUNCTION CONNECTOR
10A GAUGE
10A IGN
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
100A ALT(*4) 120A ALT(*3)
60A AM1
F16 FUSE BLOCK
FL MAIN 3, 0W
BATTERY
BATTERY


Combination Meter (Diesel)
∗7 : 1HZ
∗8 : 15B–FTE
∗9 : 15B–FT
∗15 : LHD 15B–FT
∗16 : Except ∗15
∗17 : Hong Kong EX Grade
∗18 : Except Israel and ∗17
F10
FUEL SEDIMENTARY
WARNING BUZZER
BUZZER
F14
FUEL SEDIMENTARY SW
Floor cross member
No. 5 center
B 4
BRAKE VACUUM
WARNING BUZZER
D11
DIODE
(Parking Brake)
P 1
PARKING
BRAKE SW
V 1 (A) , V 2 (B)
VACUUM SW
BE : Floor cross member
No. 5 center(∗8, ∗9)
EB : Floor cross member
No. 5 center(∗7, 14B)
Floor cross member
No. 2 center
B 3
BRAKE OIL LEVEL SW
From ABS ECU<19–3>
From Automatic Door Relay
No. 4<22–4>
J 8
JUNCTION
CONNECTOR
Instrument panel
left(LHD)
Instrument panel
right(RHD)