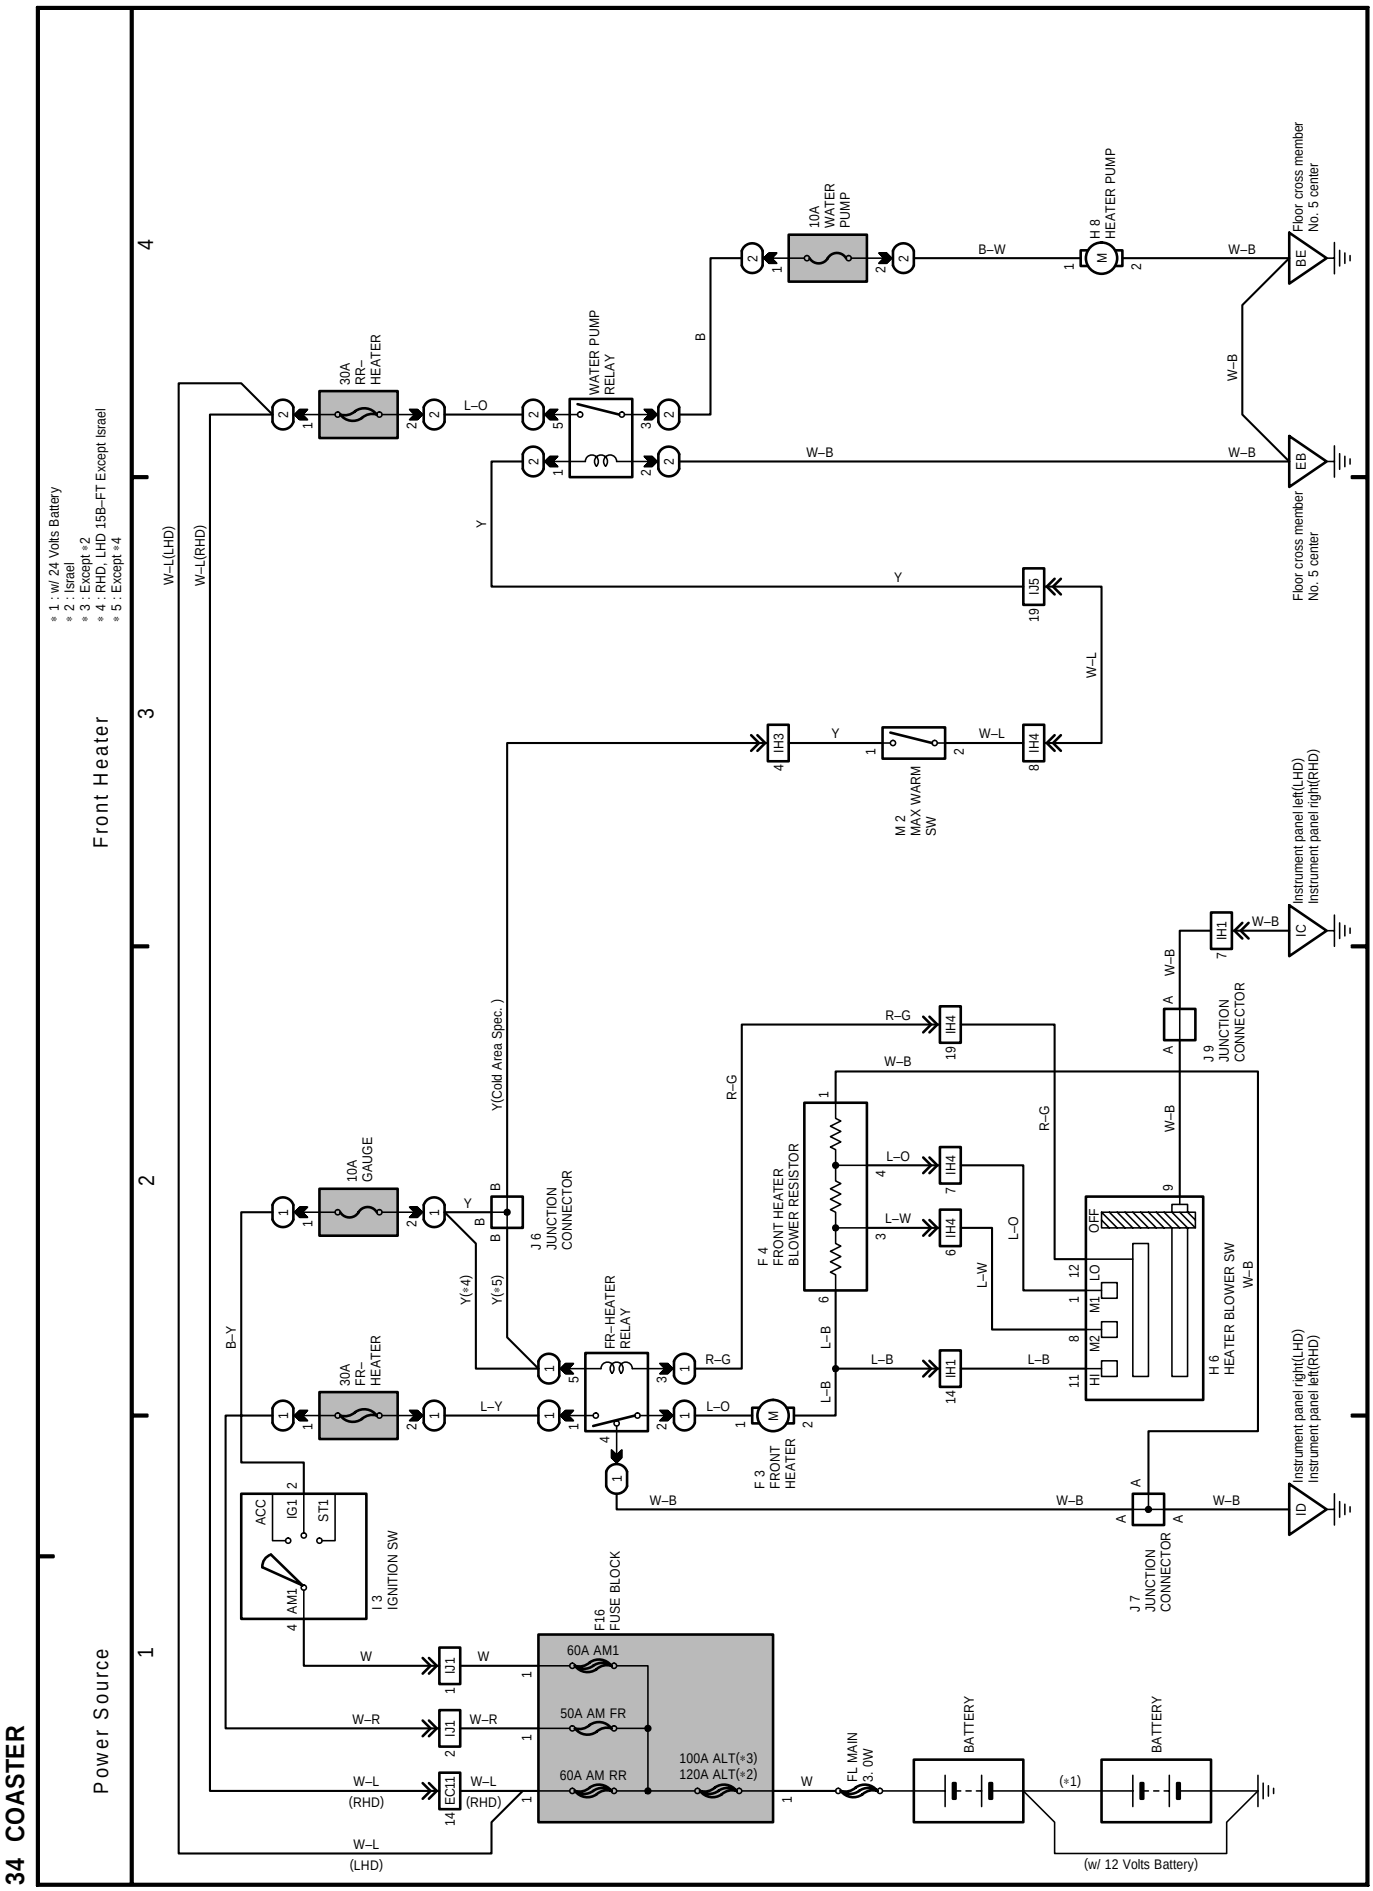

34 COASTER
Power Source
Front Heater
1
2
3
4
∗1 : w/ 24 Volts Battery
∗2 : Israel
∗3 : Except ∗2
∗4 : RHD, LHD 15B–FT Except Israel
∗5 : Except ∗4
30A RR– HEATER
WATER PUMP RELAY
10A WATER PUMP
H 8 HEATER PUMP
Floor cross member No. 5 center
Floor cross member No. 5 center
M 2 MAX WARM SW
10A GAUGE
J 6 JUNCTION CONNECTOR
30A FR– HEATER
FR–HEATER RELAY
F 4 FRONT HEATER BLOWER RESISTOR
F 3 FRONT HEATER
H 6 HEATER BLOWER SW
J 9 JUNCTION CONNECTOR
Instrument panel left(LHD)
Instrument panel right(RHD)
Instrument panel right(LHD)
Instrument panel left(RHD)
J 7 JUNCTION CONNECTOR
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
50A AM FR
60A AM RR
100A ALT(∗3)
120A ALT(∗2)
FL MAIN
3. 0W
BATTERY
BATTERY
(∗1)
(w/ 12 Volts Battery)
W–L (LHD)
W–L (RHD)
Y(Cold Area Spec. )
B–Y
B–W
W–B
L–O
L–Y
L–W
L–B
R–G
Y
B
W
W–R
W–L
OFF
LO
M1
M2
HI