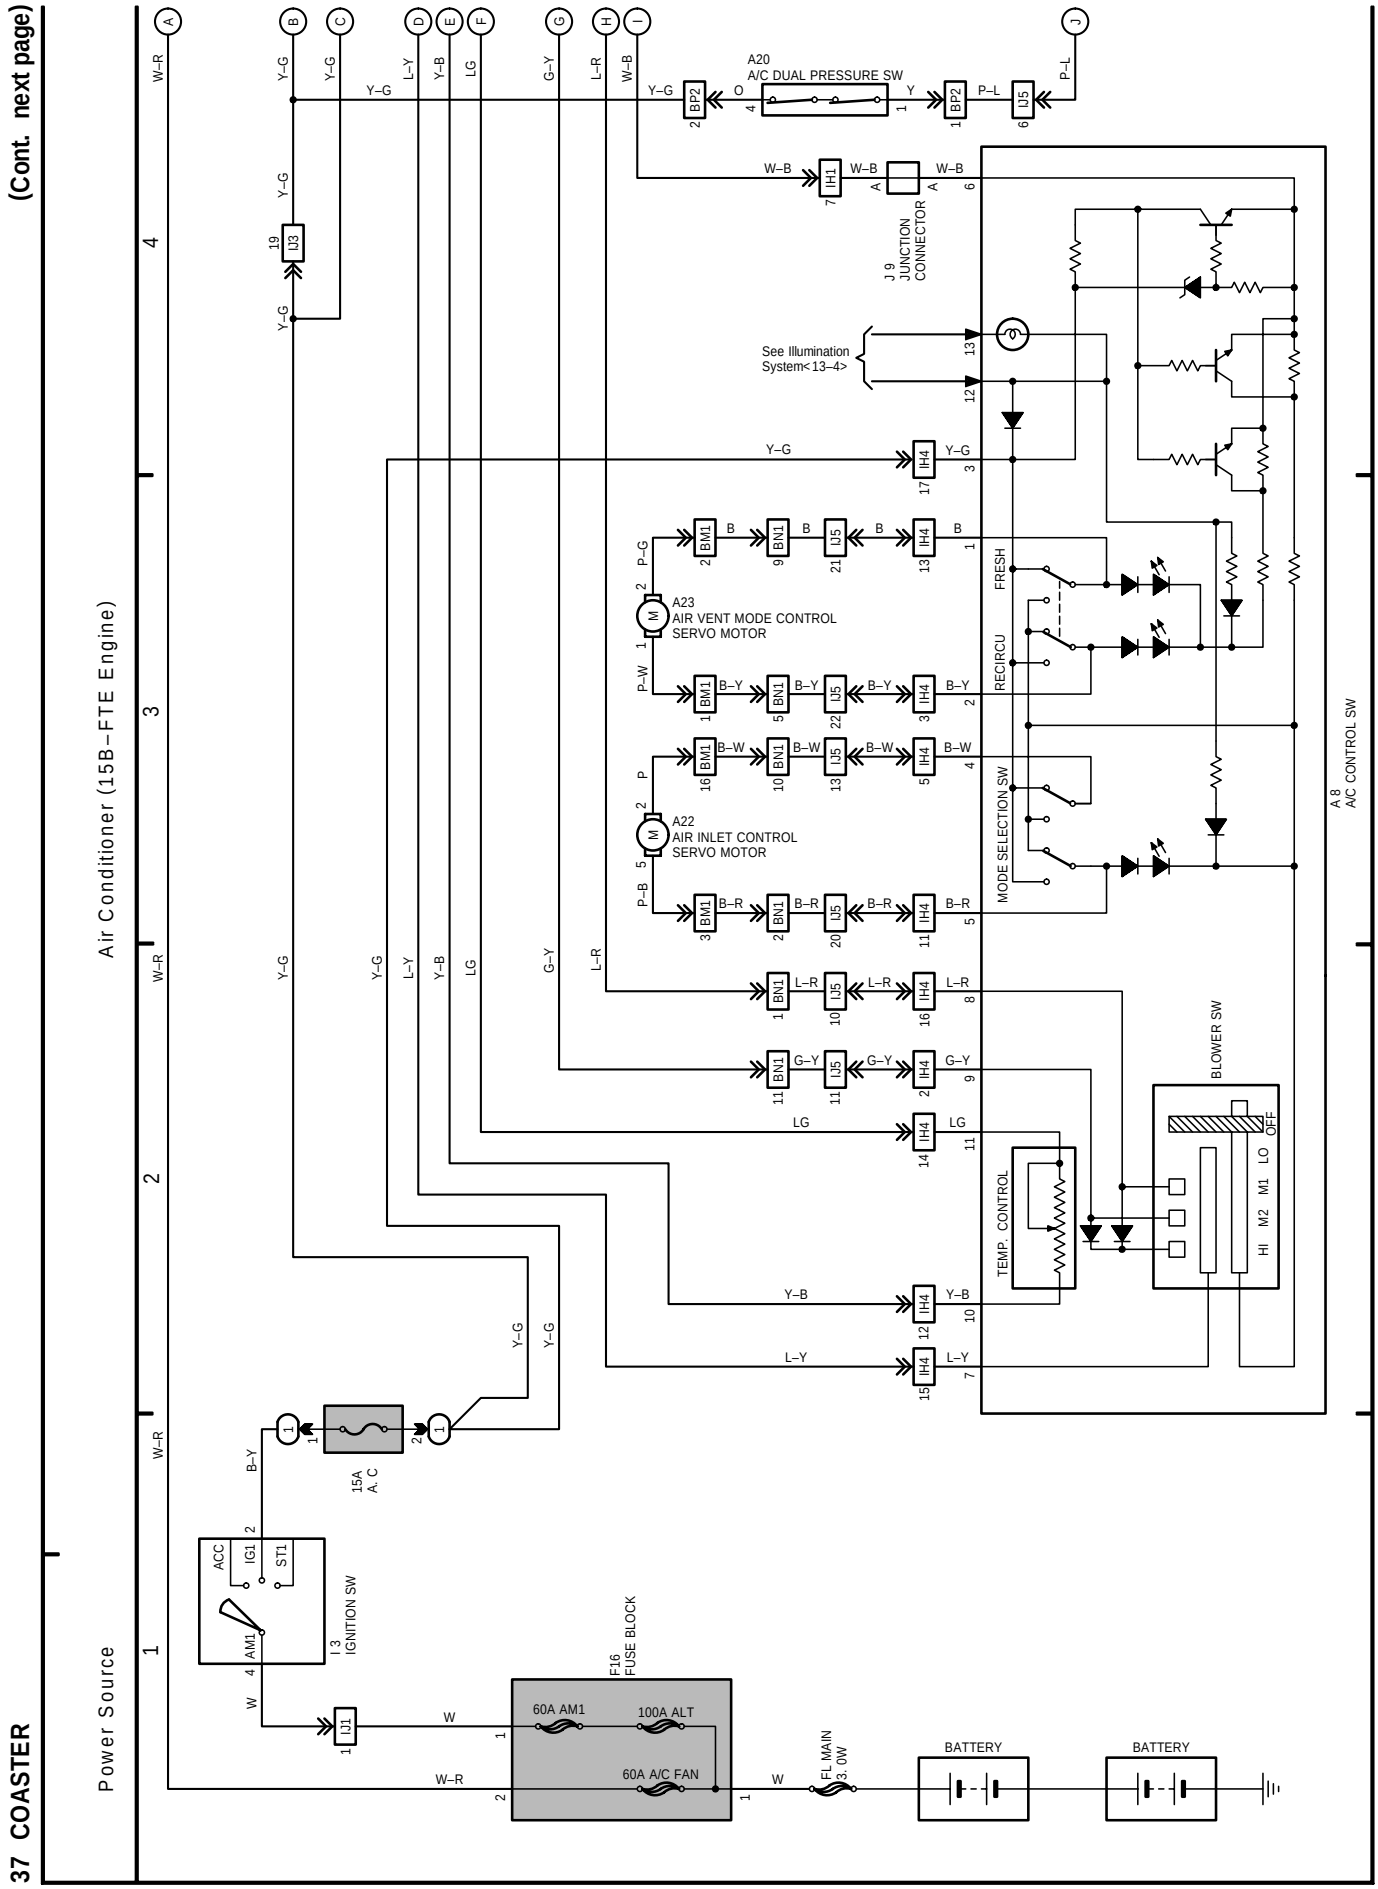
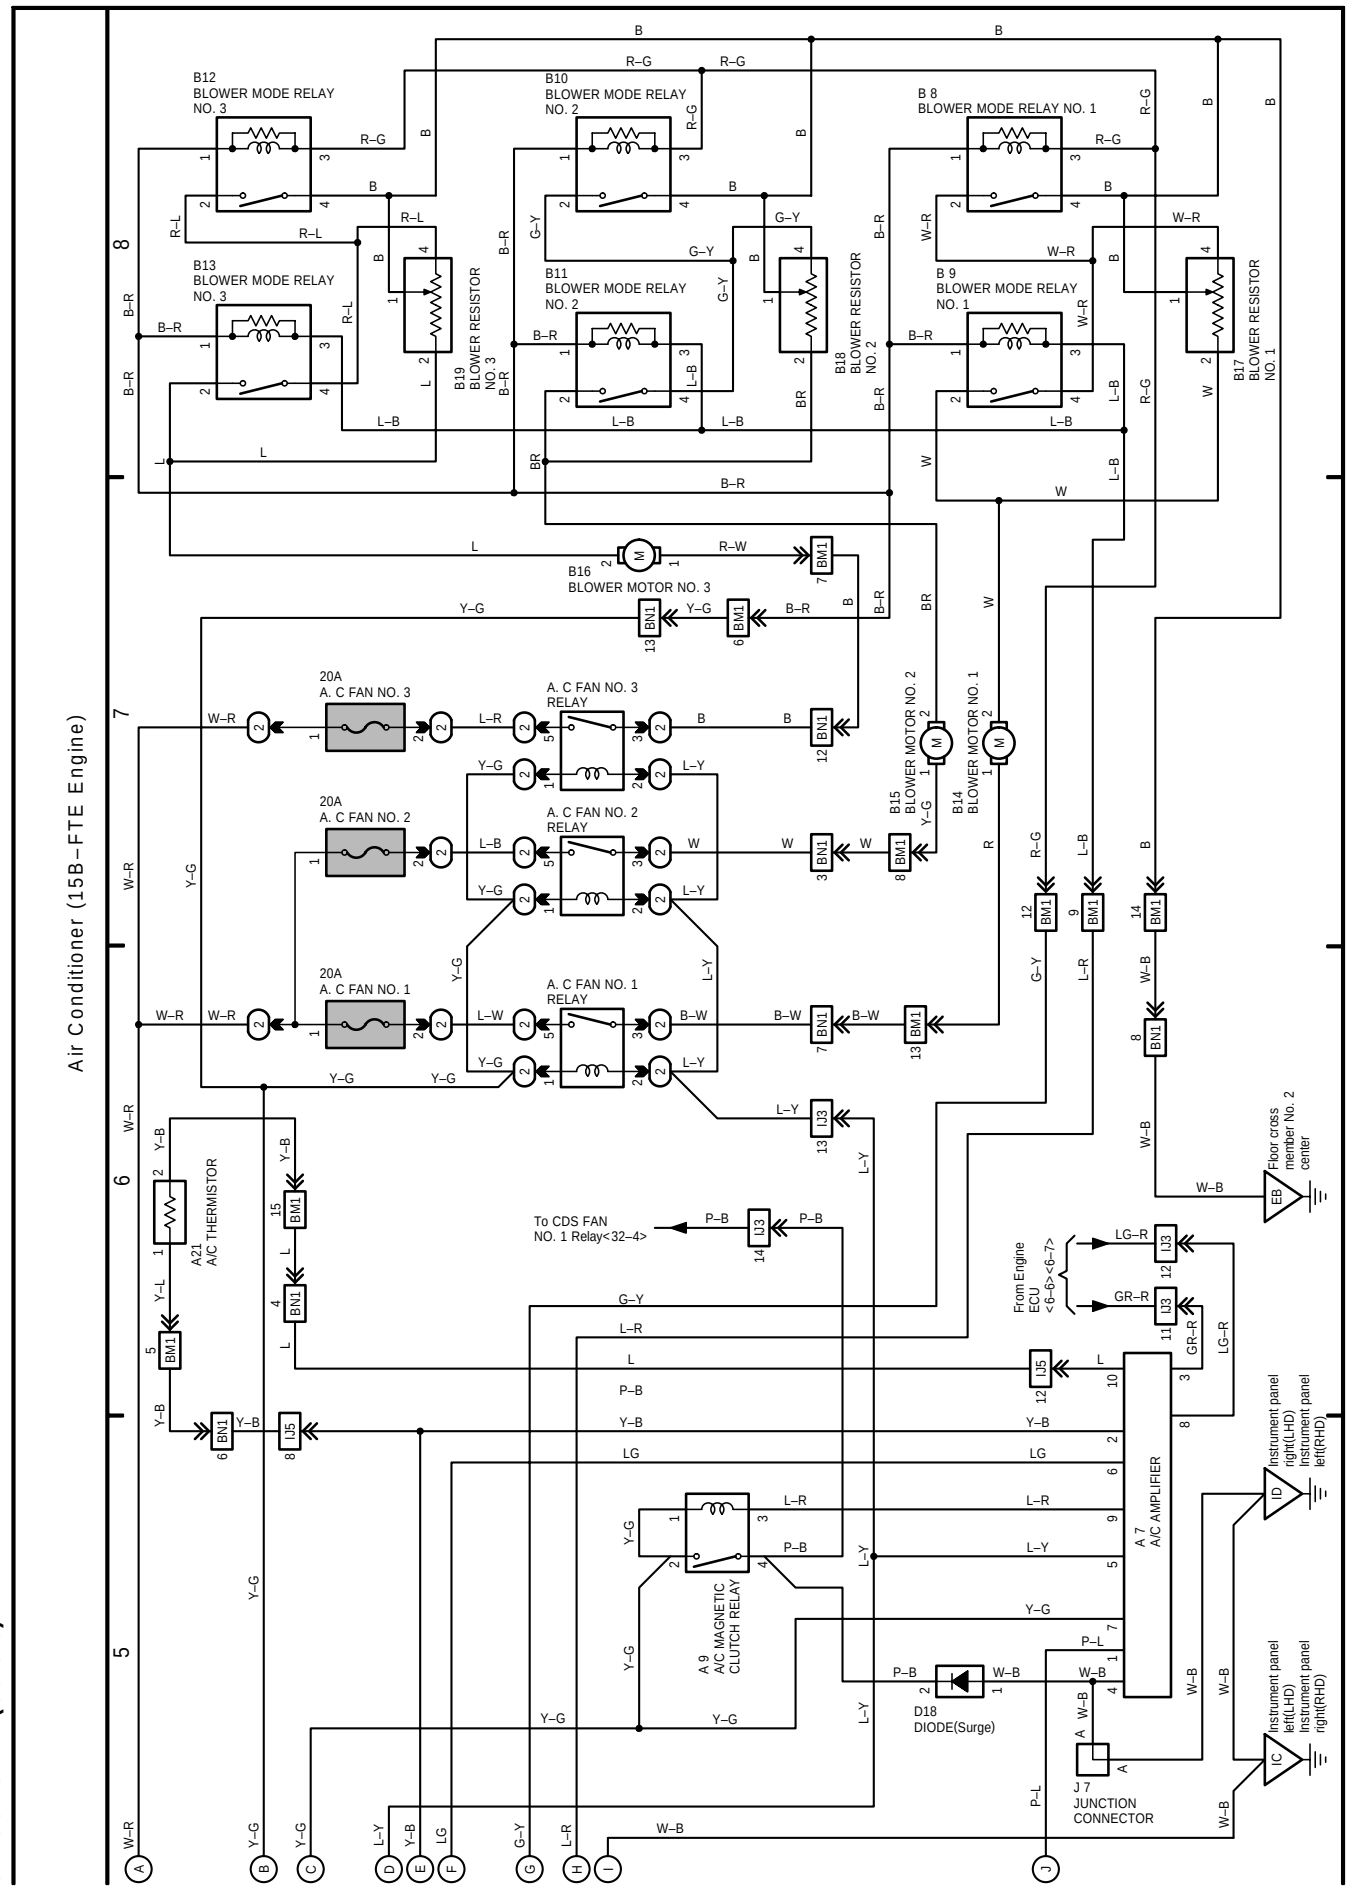

(Cont. next page)
Air Conditioner (15B–FTE Engine)
Power Source
37 COASTER
A20
A/C DUAL PRESSURE SW
J 9
JUNCTION
CONNECTOR
See Illumination
System<13–4>
A23
AIR VENT MODE CONTROL
SERVO MOTOR
A22
AIR INLET CONTROL
SERVO MOTOR
FRESH
RECIRCU
MODE SELECTION SW
A 8
A/C CONTROL SW
BLOWER SW
OFF
LO
M1
M2
HI
TEMP. CONTROL
15A
A. C
I 3
IGNITION SW
ACC
IG1
ST1
AM1
F16
FUSE BLOCK
60A AM1
100A ALT
60A A/C FAN
FL MAIN
3. 0W
BATTERY
BATTERY


Air Conditioner (15B–FTE Engine)
B12 BLOWER MODE RELAY NO. 3
B10 BLOWER MODE RELAY NO. 2
B 8 BLOWER MODE RELAY NO. 1
B13 BLOWER MODE RELAY NO. 3
B11 BLOWER MODE RELAY NO. 2
B 9 BLOWER MODE RELAY NO. 1
B19 BLOWER RESISTOR NO. 3
B18 BLOWER RESISTOR NO. 2
B17 BLOWER RESISTOR NO. 1
B16 BLOWER MOTOR NO. 3
B15 BLOWER MOTOR NO. 2
B14 BLOWER MOTOR NO. 1
20A A. C FAN NO. 3
A. C FAN NO. 3 RELAY
20A A. C FAN NO. 2
A. C FAN NO. 2 RELAY
20A A. C FAN NO. 1
A. C FAN NO. 1 RELAY
A21 A/C THERMISTOR
To CDS FAN NO. 1 Relay<32–4>
From Engine ECU <6–6><6–7>
A 9 A/C MAGNETIC CLUTCH RELAY
D18 DIODE(Surge)
J 7 JUNCTION CONNECTOR
A 7 A/C AMPLIFIER
Floor cross member No. 2 center
Instrument panel left(LHD) Instrument panel right(RHD)
Instrument panel right(LHD) Instrument panel left(RHD)