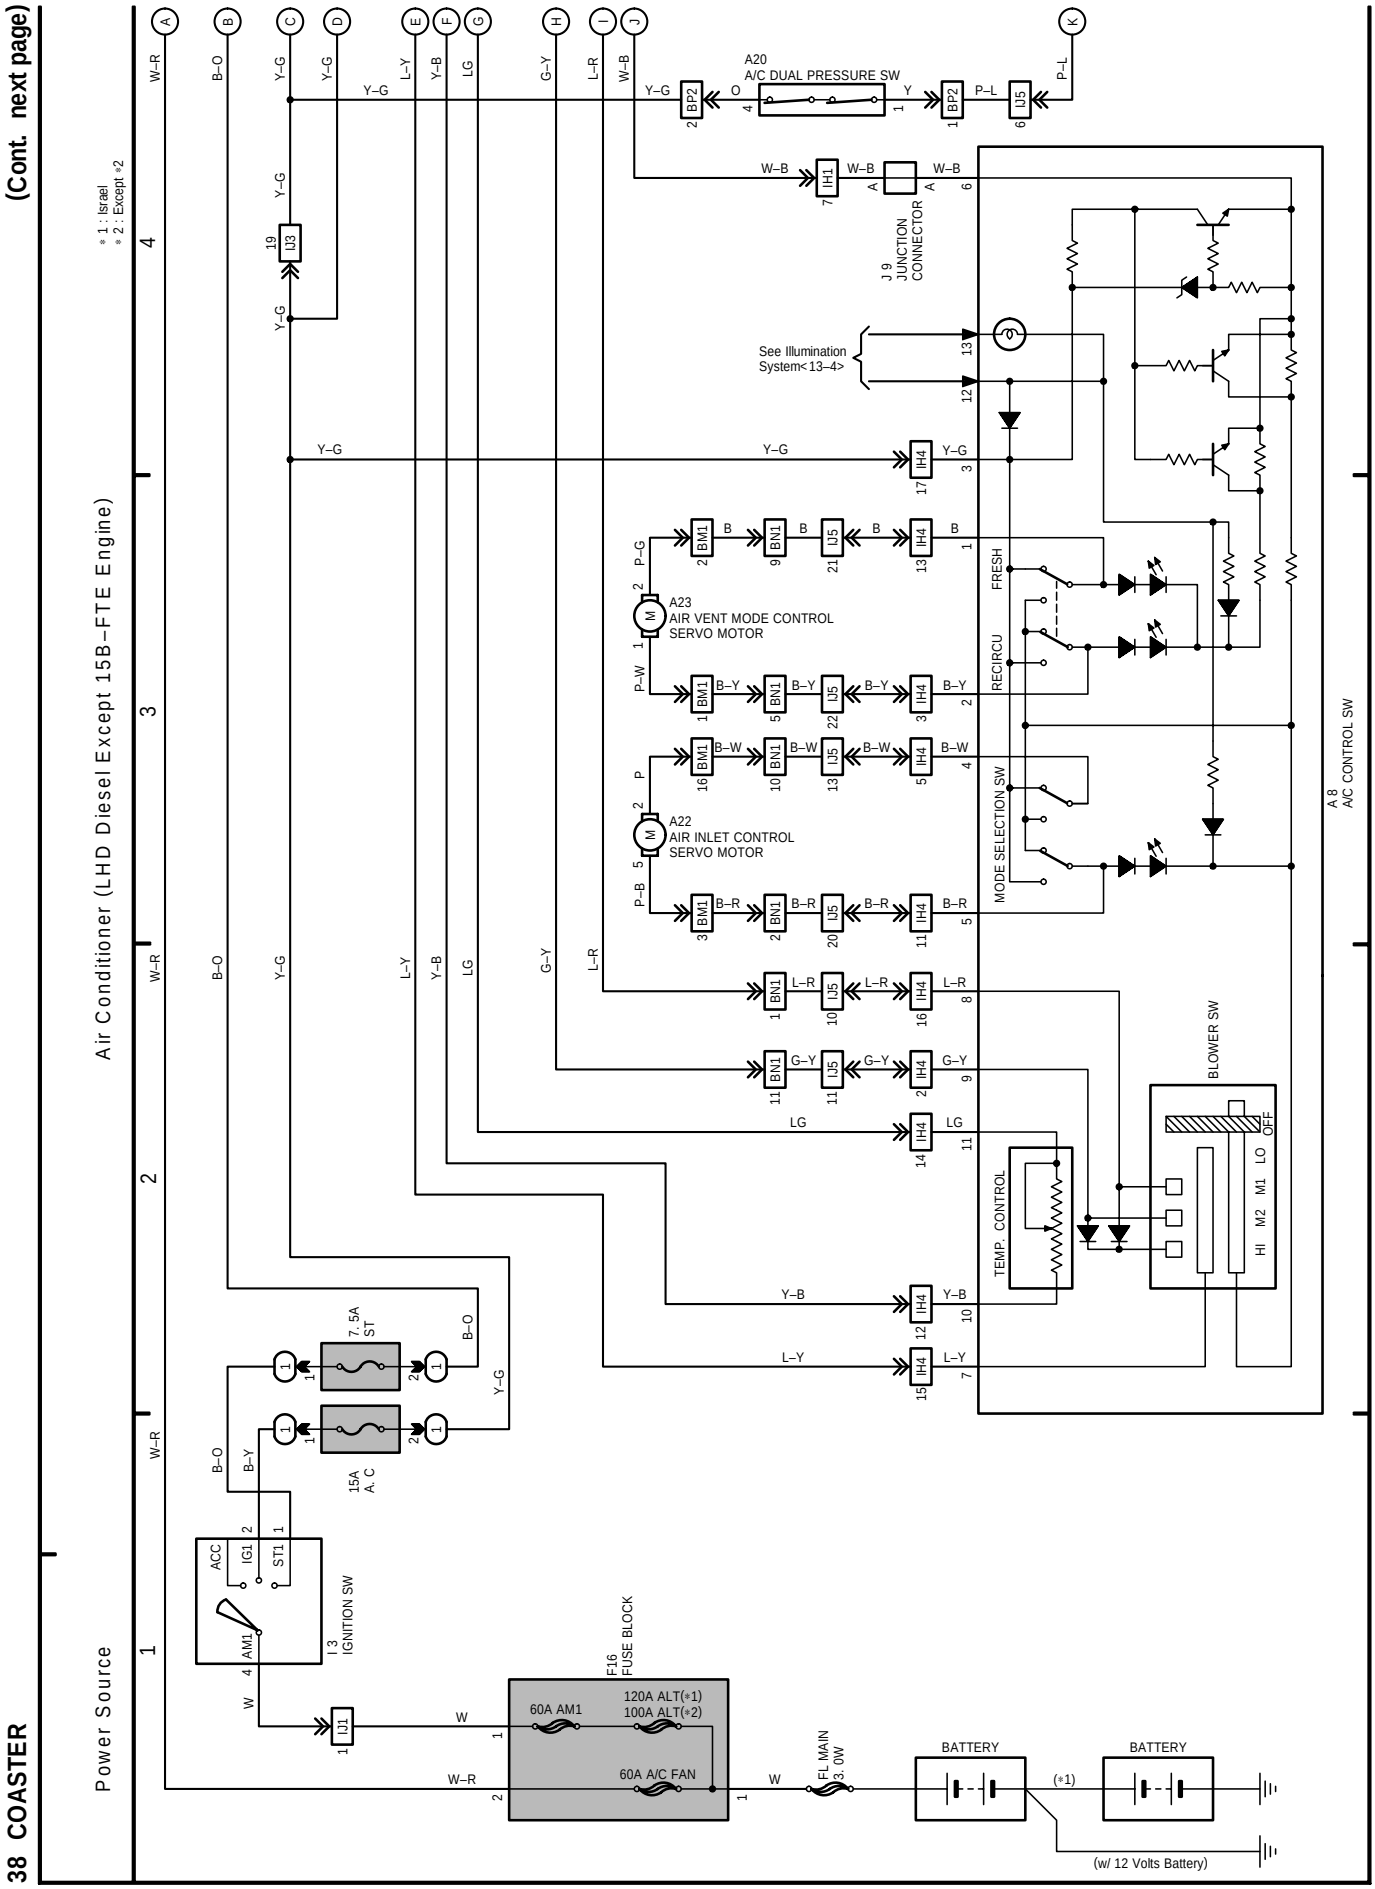
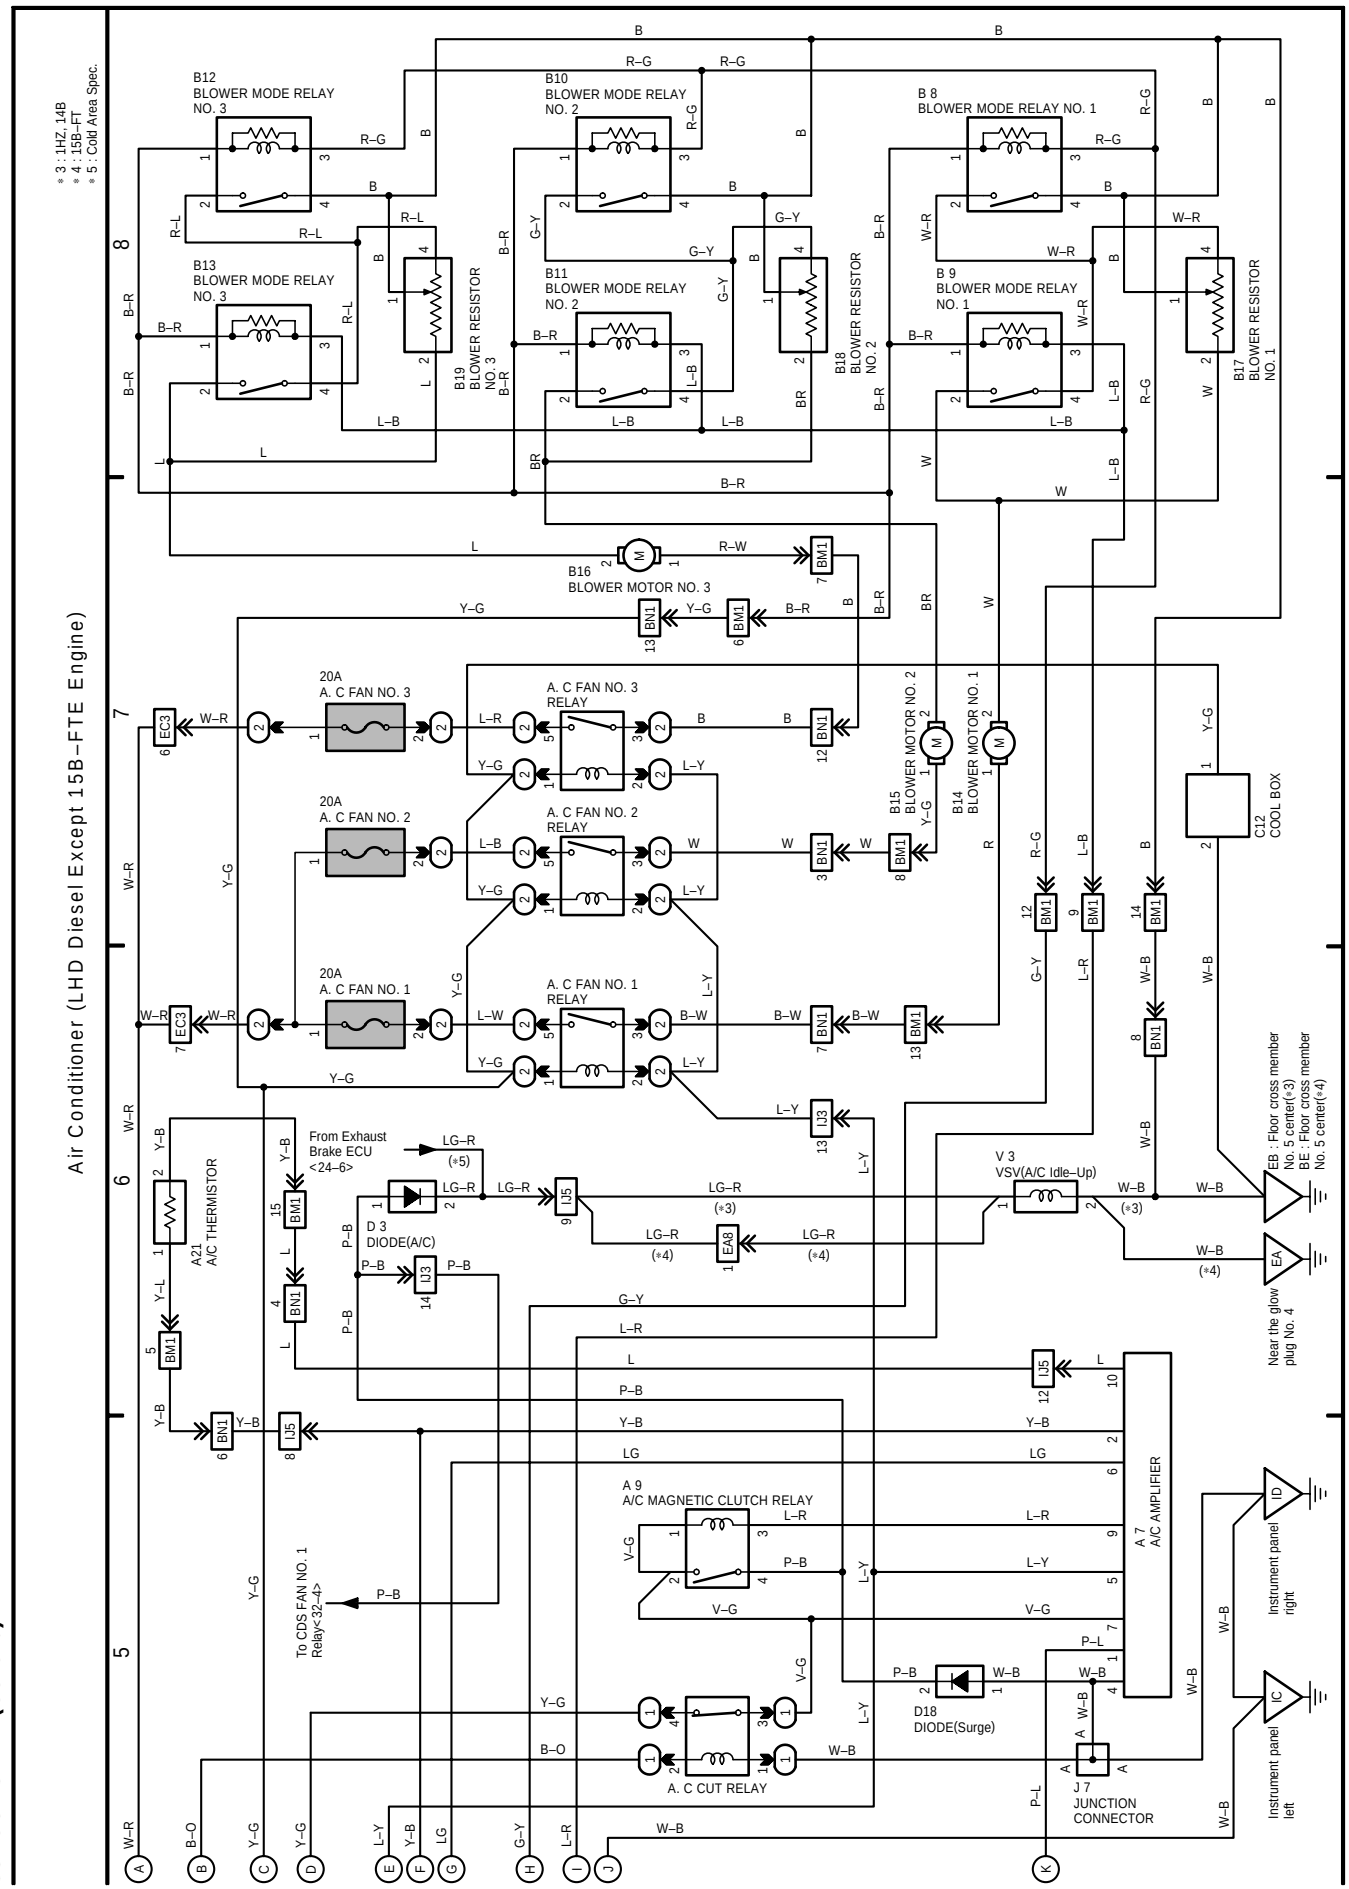

(Cont. next page)
38 COASTER
Power Source
Air Conditioner (LHD Diesel Except 15B–FTE Engine)
* 1 : Israel
* 2 : Except *2
A20
A/C DUAL PRESSURE SW
J 9
JUNCTION
CONNECTOR
See Illumination
System<13–4>
A23
AIR VENT MODE CONTROL
SERVO MOTOR
A22
AIR INLET CONTROL
SERVO MOTOR
FRESH
RECIRCU
MODE SELECTION SW
A 8
A/C CONTROL SW
BLOWER SW
OFF
LO
M1
M2
HI
TEMP. CONTROL
7. 5A
ST
15A
A. C
ACC
IG1
ST1
AM1
I 3
IGNITION SW
F16
FUSE BLOCK
60A AM1
120A ALT(*1)
100A ALT(*2)
60A A/C FAN
FL MAIN
3. 0W
BATTERY
BATTERY
(*1)
(w/ 12 Volts Battery)


Air Conditioner (LHD Diesel Except 15B–FTE Engine)
* 3 : 1HZ, 14B
* 4 : 15B–FT
* 5 : Cold Area Spec.
B12 BLOWER MODE RELAY NO. 3
B10 BLOWER MODE RELAY NO. 2
B 8 BLOWER MODE RELAY NO. 1
B13 BLOWER MODE RELAY NO. 3
B11 BLOWER MODE RELAY NO. 2
B 9 BLOWER MODE RELAY NO. 1
B19 BLOWER RESISTOR NO. 3
B18 BLOWER RESISTOR NO. 2
B17 BLOWER RESISTOR NO. 1
B16 BLOWER MOTOR NO. 3
20A A. C FAN NO. 3
A. C FAN NO. 3 RELAY
20A A. C FAN NO. 2
A. C FAN NO. 2 RELAY
20A A. C FAN NO. 1
A. C FAN NO. 1 RELAY
B15 BLOWER MOTOR NO. 2
B14 BLOWER MOTOR NO. 1
C12 COOL BOX
From Exhaust Brake ECU <24–6>
A21 A/C THERMISTOR
D 3 DIODE(A/C)
V 3 VSV(A/C Idle–Up)
EB : Floor cross member No. 5 center(*3)
EE : Floor cross member No. 5 center(*4)
Near the glow plug No. 4
A 9 A/C MAGNETIC CLUTCH RELAY
A 7 A/C AMPLIFIER
To CDS FAN NO. 1 Relay<32–4>
D18 DIODE(Surge)
A. C CUT RELAY
J 7 JUNCTION CONNECTOR
Instrument panel right
Instrument panel left