
## D RELAY LOCATIONS

### [Engine Compartment]
### (LHD)

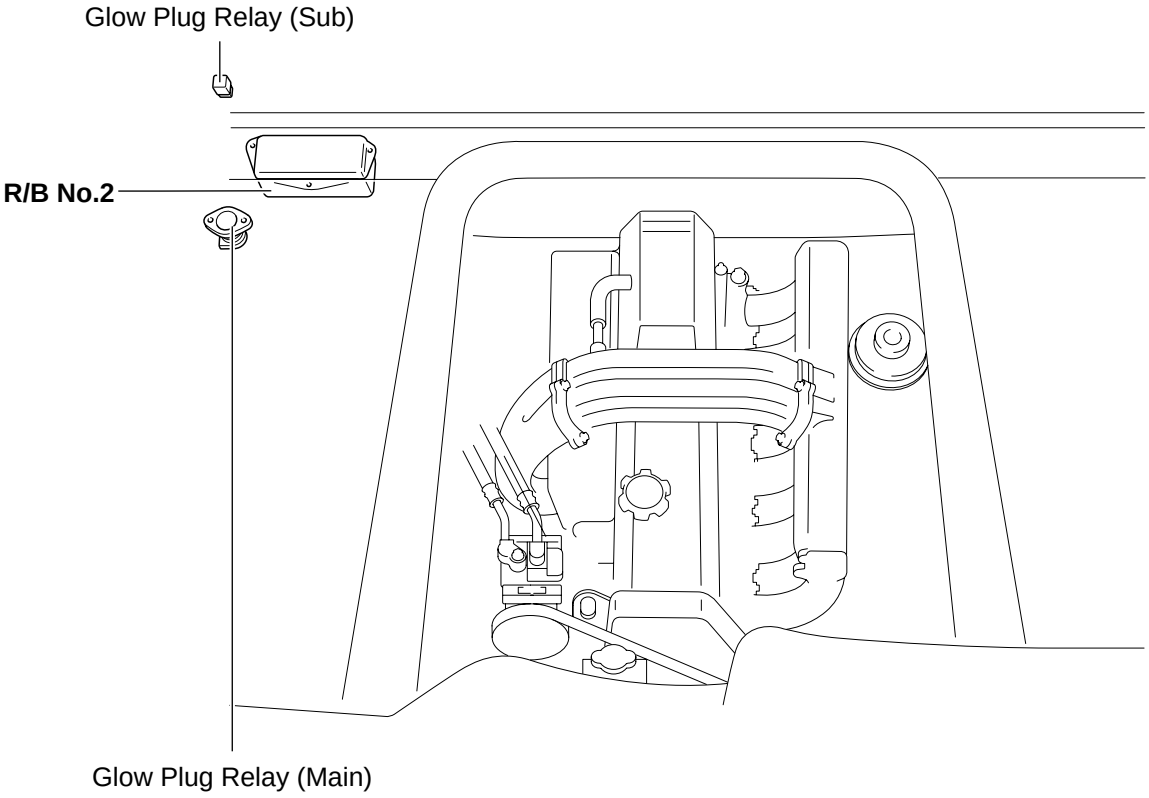


### (RHD)

