
Position of Parts in Engine Compartment

[LHD : 3RZ–FE]

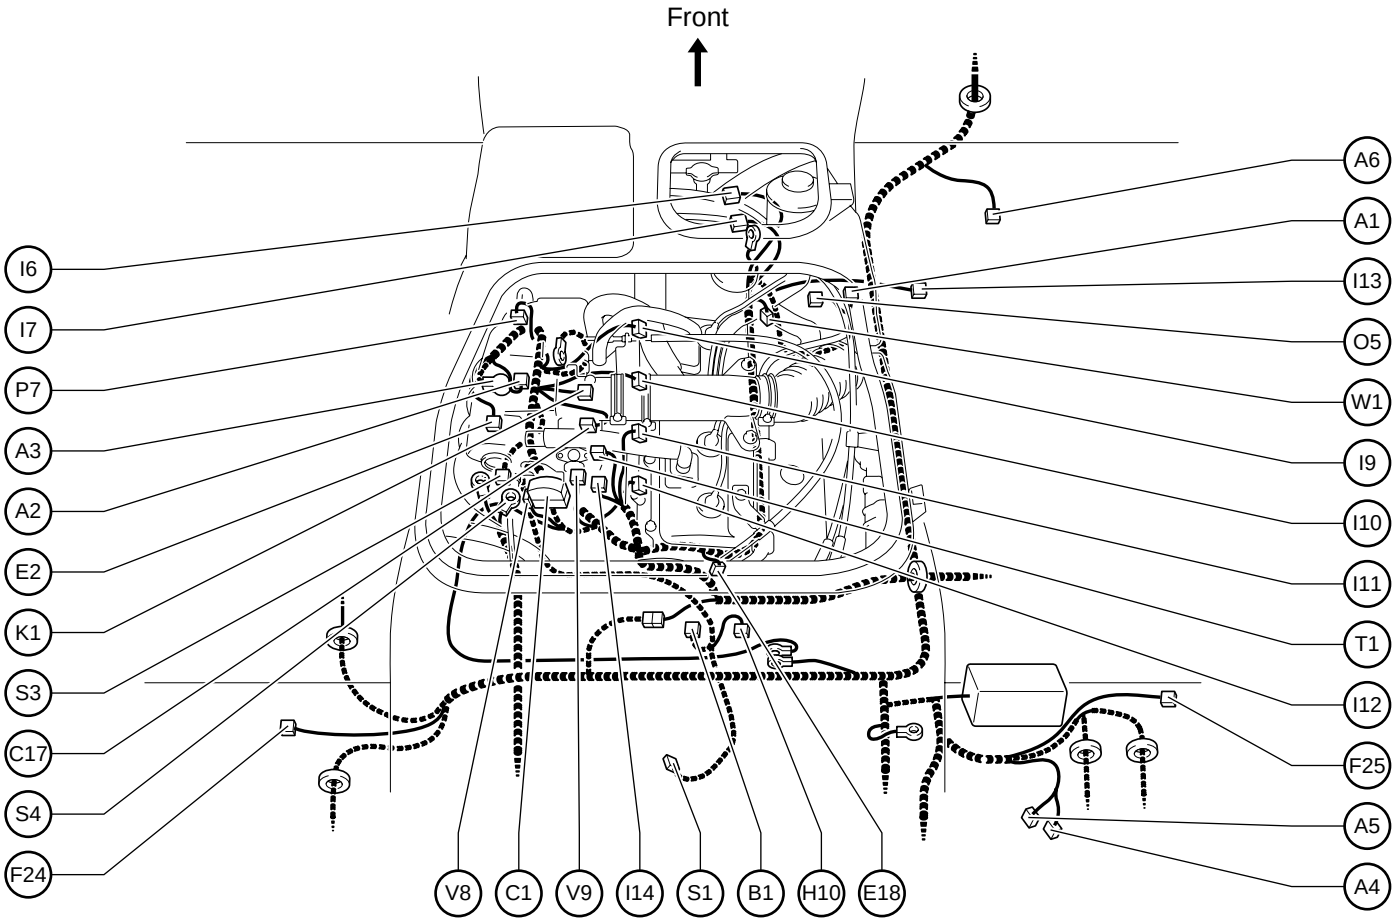

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 4 Automatic Door Control ECU (LHD Gliding Door Type)
A 5 Automatic Door Control ECU (LHD Gliding Door Type)
A 6 Automatic Door Emergency SW

B 1 Back–Up Light SW

C 1 Check Connector
C17 Crankshaft Position Sensor

E 2 Engine Oil Level Sensor
E18 EFI Water Temp. Sensor

F24 Front Side Marker Light LH
F25 Front Side Marker Light RH

H10 Heated Oxyen Sensor

I 6 Igniter and Ignition Coil No.1
I 7 Igniter and Ignition Coil No.2
I 9 Injector No.1
I 10 Injector No.2
I 11 Injector No.3
I 12 Injector No.4
I 13 Intake Air Temp. Sensor
I 14 ISC Valve

K 1 Knock Sensor

O 5 Oil Pressure SW

P 7 Power Steering Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter

T 1 Throttle Position Sensor

V 8 Vacuum Sensor
V 9 Variable Resistor

W 1 Water Temp. Sender