
Position of Parts in Engine Compartment

[LHD : 1HZ]

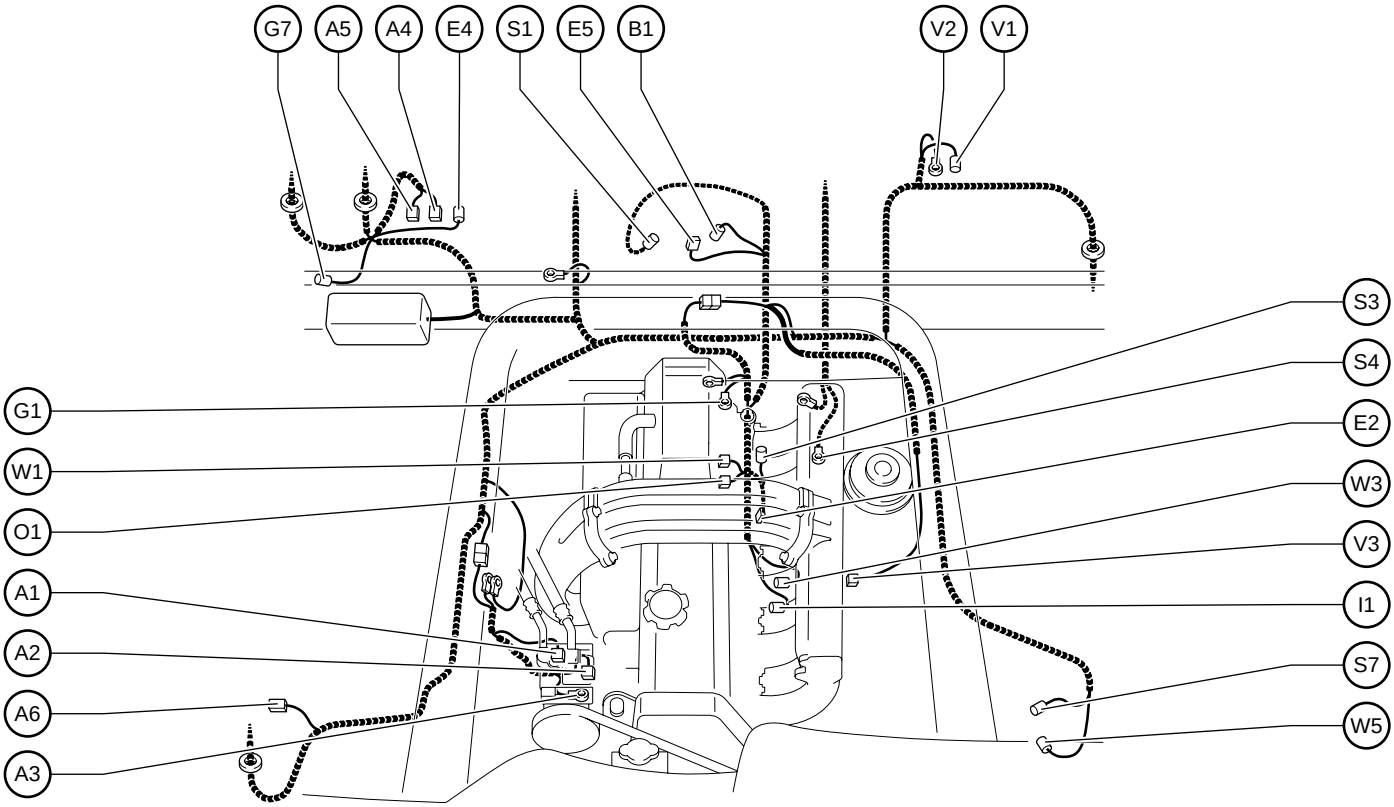

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 4 Automatic Door Control ECU (LHD Gliding Door Type)
A 5 Automatic Door Control ECU (LHD Gliding Door Type)
A 6 Automatic Door Emergency SW

B 1 Back–Up Light SW

E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW

G 1 Glow Plug
G 7 Glow Plug Relay (Sub)

I 1 Injector Pump

O 1 Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter
S 7 Sub Radiator Fan Motor

V 1 Vacuum SW
V 2 Vacuum SW
V 3 VSV (A/C Idle–Up)

W 1 Water Temp. Sender
W 3 Water Temp. Sensor (Glow)
W 5 Water Temp. SW (Sub Radiator Fan)