
Position of Parts in Engine Compartment

[LHD : 15B–FTE]

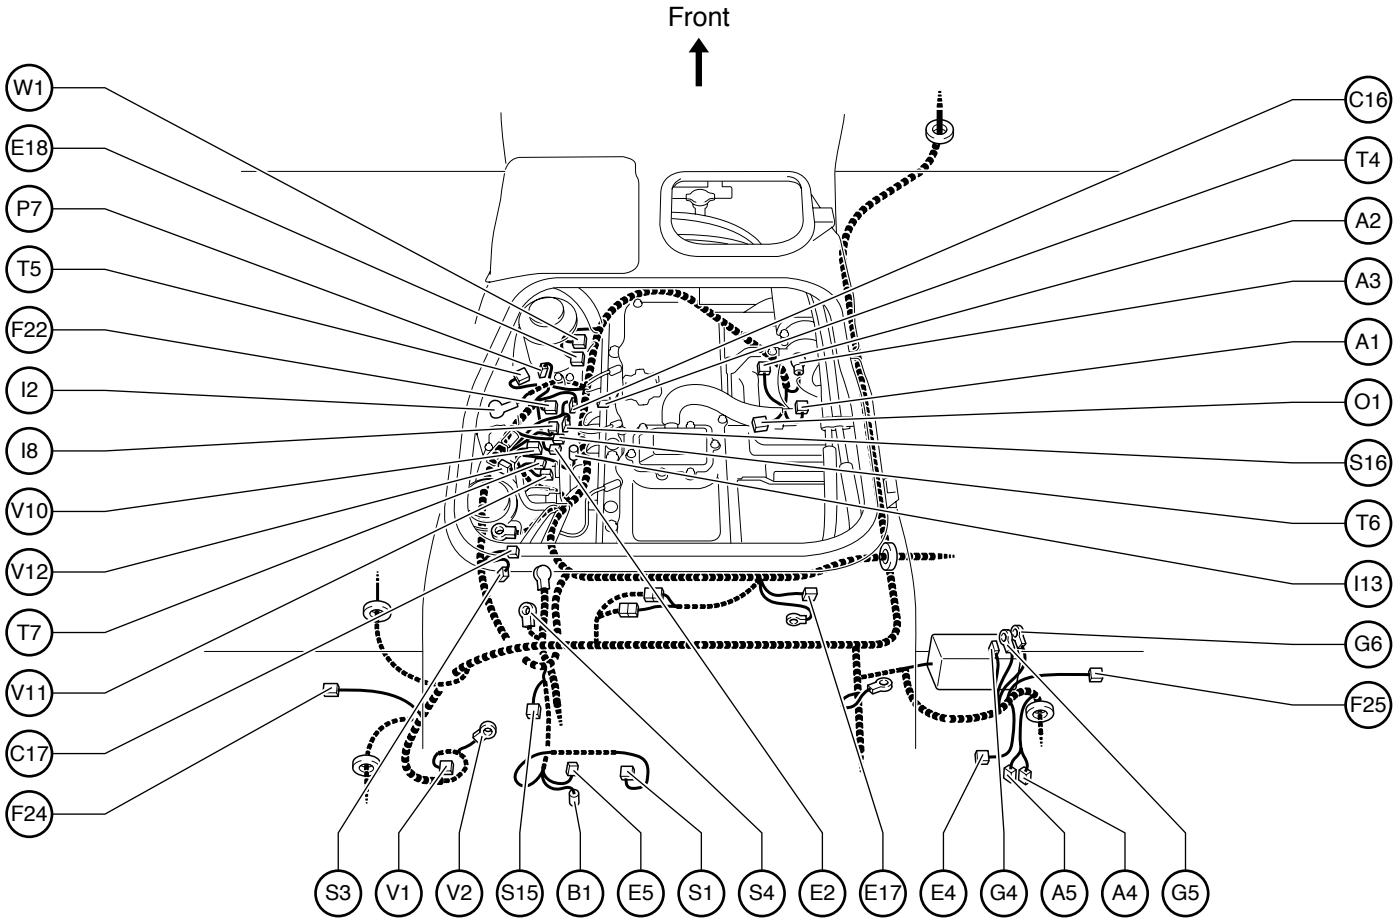

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 4 Automatic Door Control ECU (LHD Gliding Door Type)
A 5 Automatic Door Control ECU (LHD Gliding Door Type)

B 1 Back–Up Light SW

C16 Camshaft Position Sensor
C17 Crankshaft Position Sensor

E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW
E17 EDU
E18 EFI Water Temp. Sensor

F22 Fuel Temp. Sensor
F24 Front Side Marker Light LH
F25 Front Side Marker Light RH

G 4 Glow Plug Relay (Main)
G 5 Glow Plug Relay (Main)
G 6 Glow Plug Relay (Main)

I 2 Intake Heater
I 8 Injection Pump
I 13 Intake Air Temp. Sensor

O 1 Oil Pressure SW

P 7 Power Steering Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter
S15 Shift Position Indicator SW
S16 Spill Valve

T 4 Throttle Control Motor
T 5 Throttle Open SW
T 6 Timing Control Valve
T 7 Turbo Pressure Sensor

V 1 Vacuum SW
V 2 Vacuum SW
V10 VRV (EGR)
V11 VSV (EGR Cut)
V12 VSV (Pressure Sensor)

W 1 Water Temp. Sender