
Position of Parts in Engine Compartment

[LHD : 14B]

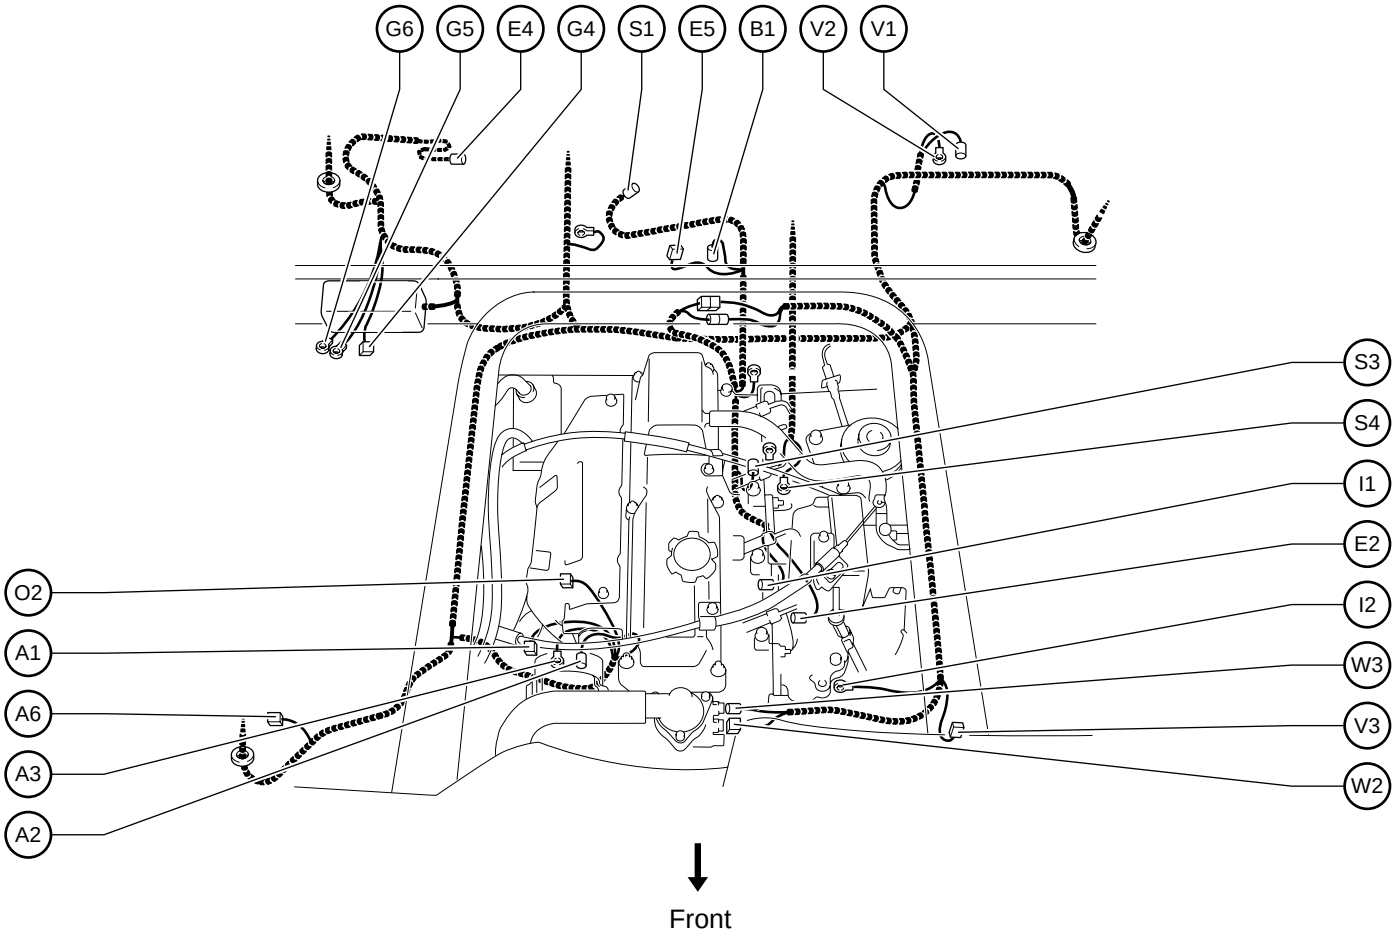

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 6 Automatic Door Emergency SW

B 1 Back–Up Light SW

E 2 Engine Oil Level Sensor
E 4 Exhaust Brake Retarder Solenoid
E 5 Exhaust Neutral SW

G 4 Glow Plug Relay (Main)
G 5 Glow Plug Relay (Main)
G 6 Glow Plug Relay (Main)

I 1 Injector Pump
I 2 Intake Heater

O 2 Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter

V 1 Vacuum SW
V 2 Vacuum SW
V 3 VSV (A/C Idle–Up)

W 2 Water Temp. Sender
W 3 Water Temp. Sensor (Glow)