
Position of Parts in Instrument Panel

[LHD]

∗1 : 14B
∗2 : Except 14B
∗3 : Except 15B-FTE
∗4 : 15B-FTE

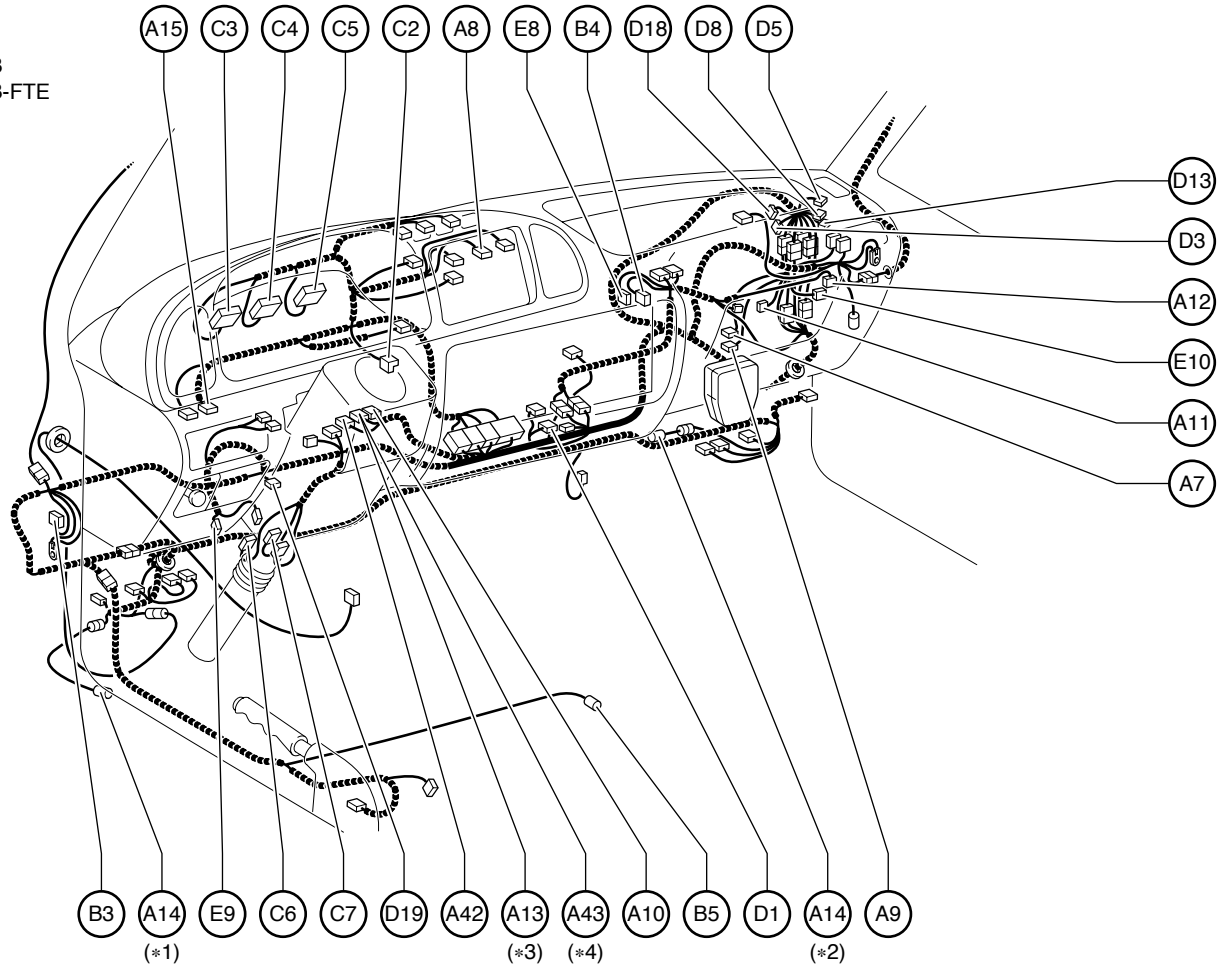

A 7 A/C Amplifier
A 8 A/C Control SW
A 9 A/C Magnetic Clutch Relay
A10 Accel Inter–Lock
A11 Accel Inter–Lock Relay No.1
A12 Accel Inter–Lock Relay No.2
A13 Accel SW
A14 Air Cleaner Warning Sensor
A15 Automatic Door Control SW
A42 Accel Position Sensor
A43 Accelerator Pedal SW

B 3 Brake Oil Level SW
B 4 Brake Vacuum Warning Buzzer
B 5 Buckle SW

C 2 Cigarette Lighter
C 3 Combination Meter
C 4 Combination Meter
C 5 Combination Meter
C 6 Combination SW
C 7 Combination SW

D 1 DC/DC Converter
D 3 Diode (A/C)
D 5 Diode (Center Door No.2)
D 8 Diode (Step Light)
D13 Diode (Exhaust Brake Retarder Solenoid)
D18 Diode (Surge)
D19 DLC3

E 8 Emergency Door Warning Buzzer
E 9 Exhaust Brake Clutch SW
E10 Exhaust Brake ECU