
Position of Parts in Body

[LHD : Luggage Room Type]

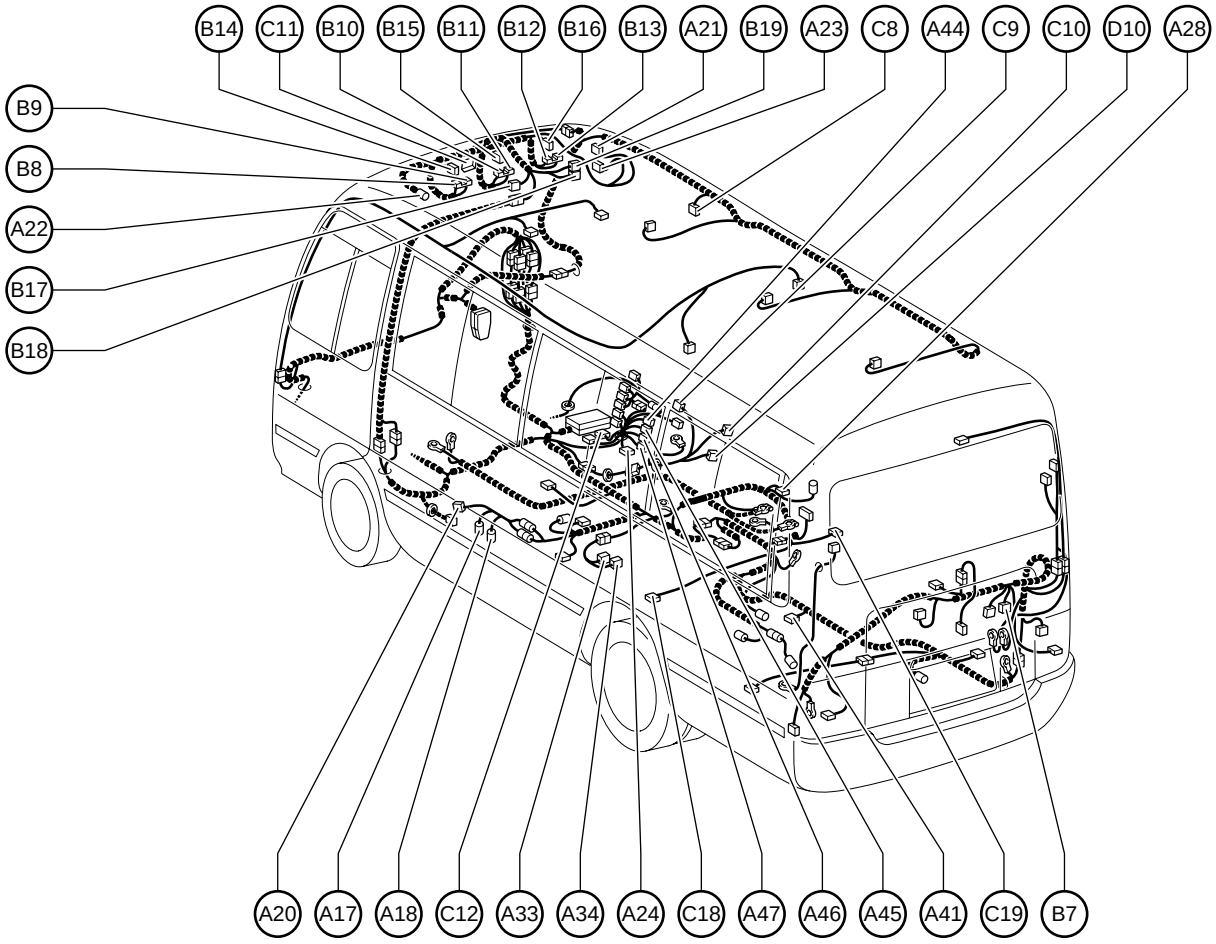

A17 A/C Condenser Fan Motor No.1
A18 A/C Condenser Fan Motor No.2
A20 A/C Dual Pressure SW
A21 A/C Thermistor
A22 Air Inlet Control Servo Motor
A23 Air Vent Mode Control Servo Motor
A24 Automatic Door Control ECU (Folding Door Type)
A28 Automatic Door Warning Buzzer
A33 ABS Actuator
A34 ABS Actuator
A41 ABS Speed Sensor Rear
A44 ABS ECU
A45 ABS ECU
A46 ABS ECU
A47 ABS ECU

B 7 Back Door Courtesy SW (Luggage Room Type)
B 8 Blower Mode Relay No.1
B 9 Blower Mode Relay No.1
B10 Blower Mode Relay No.2
B11 Blower Mode Relay No.2
B12 Blower Mode Relay No.3
B13 Blower Mode Relay No.3
B14 Blower Motor No.1
B15 Blower Motor No.2
B16 Blower Motor No.3
B17 Blower Resistor No.1
B18 Blower Resistor No.2
B19 Blower Resistor No.3

C 8 Center Door Courtesy SW (Folding Type)
C 9 Center Door Courtesy SW Front (Gliding Door Type)
C10 Center Door Courtesy SW Rear (Gliding Door Type)
C11 Clock
C12 Cool Box
C18 Center Side Marker Light LH
C19 Center Side Marker Light RH

D10 Door Lock Opener Motor