
Position of Parts in Body

[LHD : Luggage Room Type]

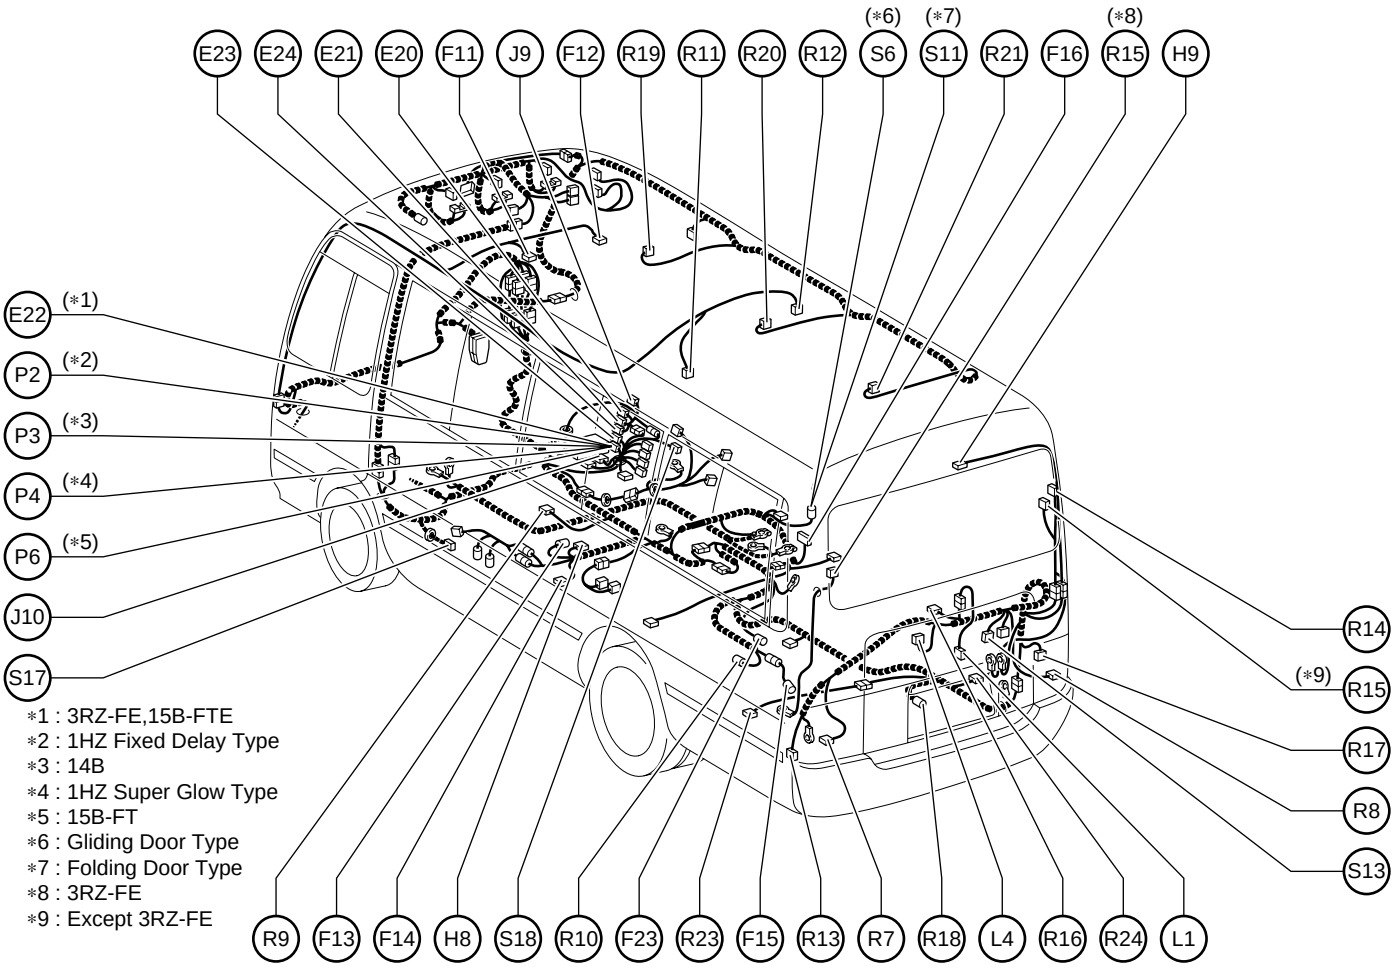

∗1 : 3RZ-FE,15B-FTE
∗2 : 1HZ Fixed Delay Type
∗3 : 14B
∗4 : 1HZ Super Glow Type
∗5 : 15B-FT
∗6 : Gliding Door Type
∗7 : Folding Door Type
∗8 : 3RZ-FE
∗9 : Except 3RZ-FE

E 20 Engine ECU
E 21 Engine ECU
E 22 Engine ECU
E 23 Engine ECU
E 24 Engine ECU

F 11 Front Speaker LH
F 12 Front Speaker RH
F 13 Fuel Heater
F 14 Fuel Sedimentary SW
F 15 Fuel Sender
F 16 Fuse Block
F 23 Fuel Pump

H 8 Heater Pump
H 9 High Mounted Stop Light

J 9 Junction Connector
J 10 Junction Connector

L 1 License Plate Light (Luggage Room Type)
L 4 Luggage Room Light

P 2 Pre–Heating Timer (Fixed Delay Type)
P 3 Pre–Heating Timer (Intake Heater)
P 4 Pre–Heating Timer (Super Glow Type)
P 6 Pre–Heating Timer (15B–FT)

R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Heater Motor No.1
R 10 Rear Heater Motor No.2
R 11 Rear Speaker LH
R 12 Rear Speaker RH
R 13 Rear Washer Motor
R 14 Rear Window Defogger
R 15 Rear Window Defogger
R 16 Rear Wiper Motor
R 17 Rear Wiper Relay
R 18 Reverse Warning Buzzer
R 19 Room Light No.1
R 20 Room Light No.2
R 21 Room Light No.3
R 23 Rear Side Marker Light LH
R 24 Rear Side Marker Light RH

S 6 Step Light (Gliding Door Type)
S 11 Step Light (Folding Door Type)
S 13 Short Connector (Rear Lights)
S 17 Side Turn Light LH
S 18 Side Turn Light RH