
Position of Parts in Instrument Panel

[RHD]

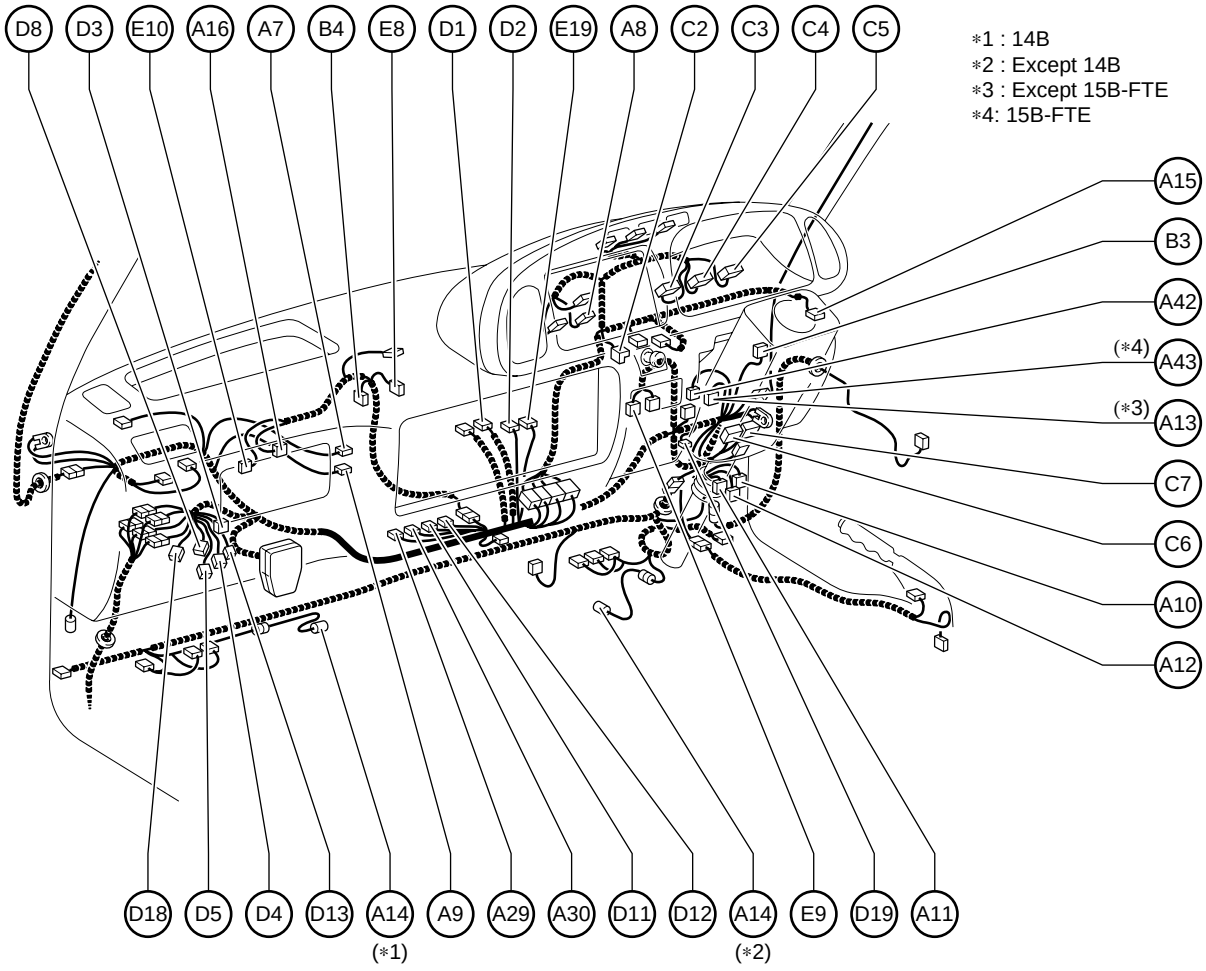

A 7 A/C Amplifier
A 8 A/C Control SW
A 9 A/C Magnetic Clutch Relay
A10 Accel Inter–Lock
A11 Accel Inter–Lock Relay No.1
A12 Accel Inter–Lock Relay No.2
A13 Accel SW
A14 Air Cleaner Warning Sensor
A15 Automatic Door Control SW
A16 Automatic Door Relay
A29 Automatic Door Relay No.2 (RHD Gliding Door Type)
A30 Automatic Door Relay No.3 (RHD Gliding Door Type)
A42 Accel Position Sensor
A43 Accelerator Pedal SW

B 3 Brake Oil Level SW
B 4 Brake Vacuum Warning Buzzer

C 2 Cigarette Lighter
C 3 Combination Meter
C 4 Combination Meter
C 5 Combination Meter
C 6 Combination SW
C 7 Combination SW

D 1 DC/DC Converter
D 2 Destination Display SW
D 3 Diode (A/C)
D 4 Diode (Center Door No.1)
D 5 Diode (Center Door No.2)
D 8 Diode (Step Light)
D11 Diode (Parking Brake)
D12 Diode (Center Door No.3)
D13 Diode (Exhaust Brake Retarder Solenoid)
D18 Diode (Surge)
D19 DLC3

E 8 Emergency Door Warning Buzzer
E 9 Exhaust Brake Clutch SW
E10 Exhaust Brake ECU
E19 Emergency SW