
# Connector Joining Wire Harness and Wire Harness

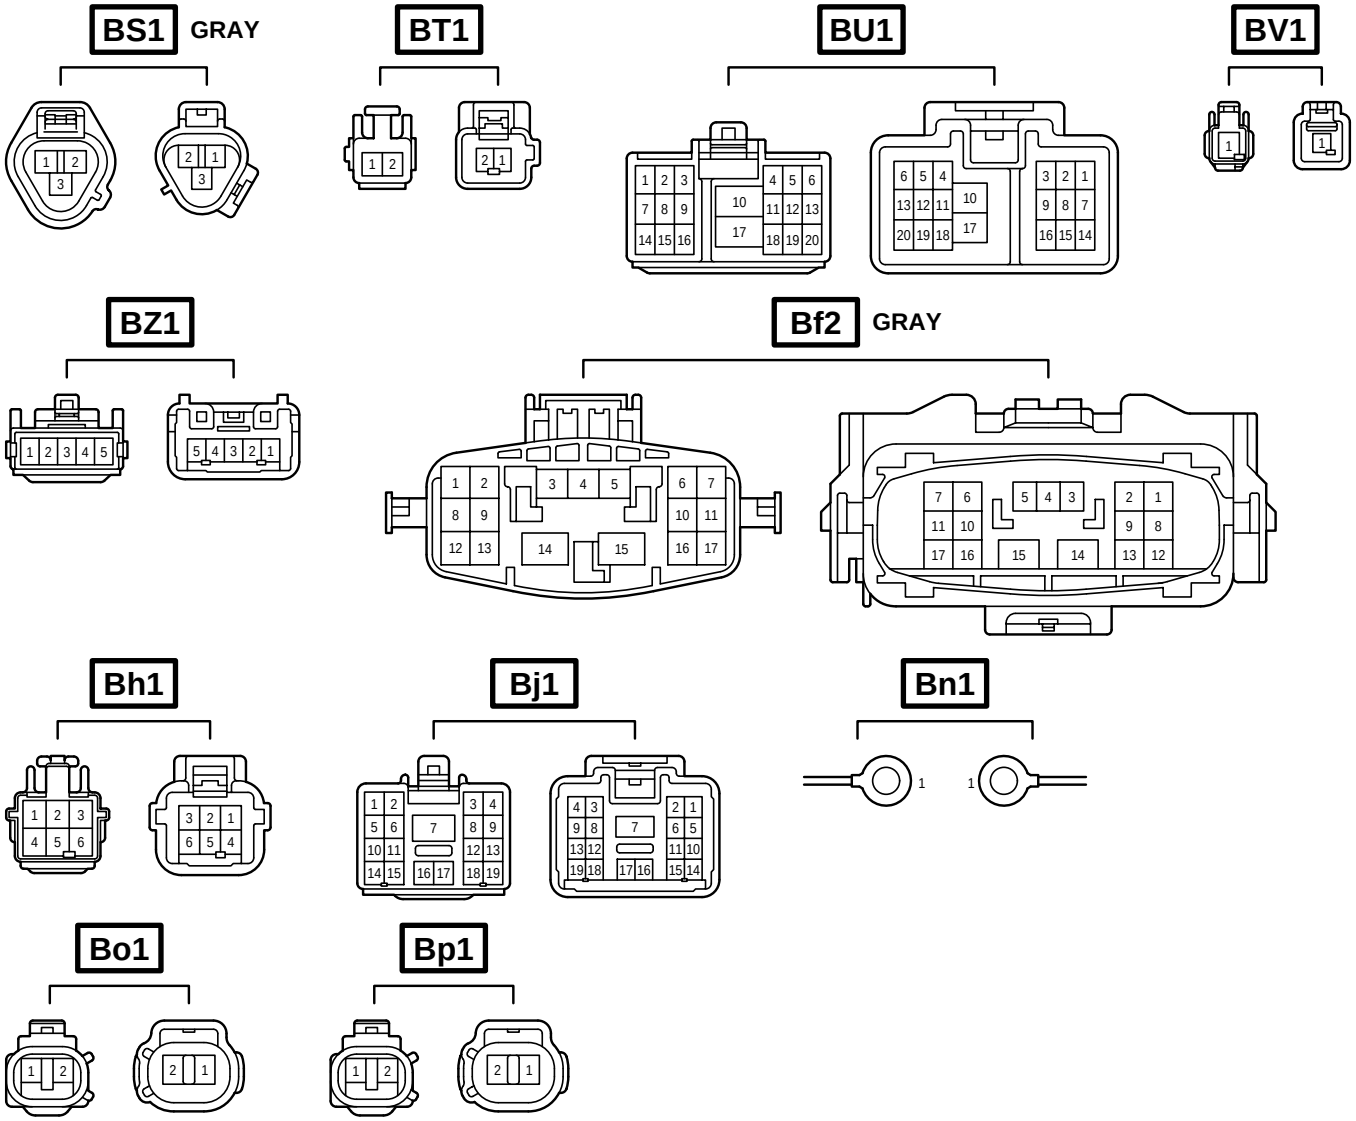


| Code | Joining Wire Harness and Wire Harness |
|---|---|
| BS1 | Floor Wire and Gauge Wire |
| BT1 | Floor No.2 Wire and Back Door No.1 Wire |
| BU1 | Floor Wire and Floor No.2 Wire |
| BV1 | Rear Window No.1 Wire and Floor No.2 Wire |
| BZ1 | Rear Door No.1 Wire and Rear Door No.2 Wire |
| Bf2 | Engine Room Main Wire and Frame Wire |
| Bh1 | Pillar No.2 Wire and Floor No.2 Wire |
| Bj1 | Engine Room Main Wire and Engine Wire |
| Bn1 | |
| Bo1 | Floor Wire and Floor No.3 Wire |
| Bp1 | Floor Wire and Rear Body Wire |