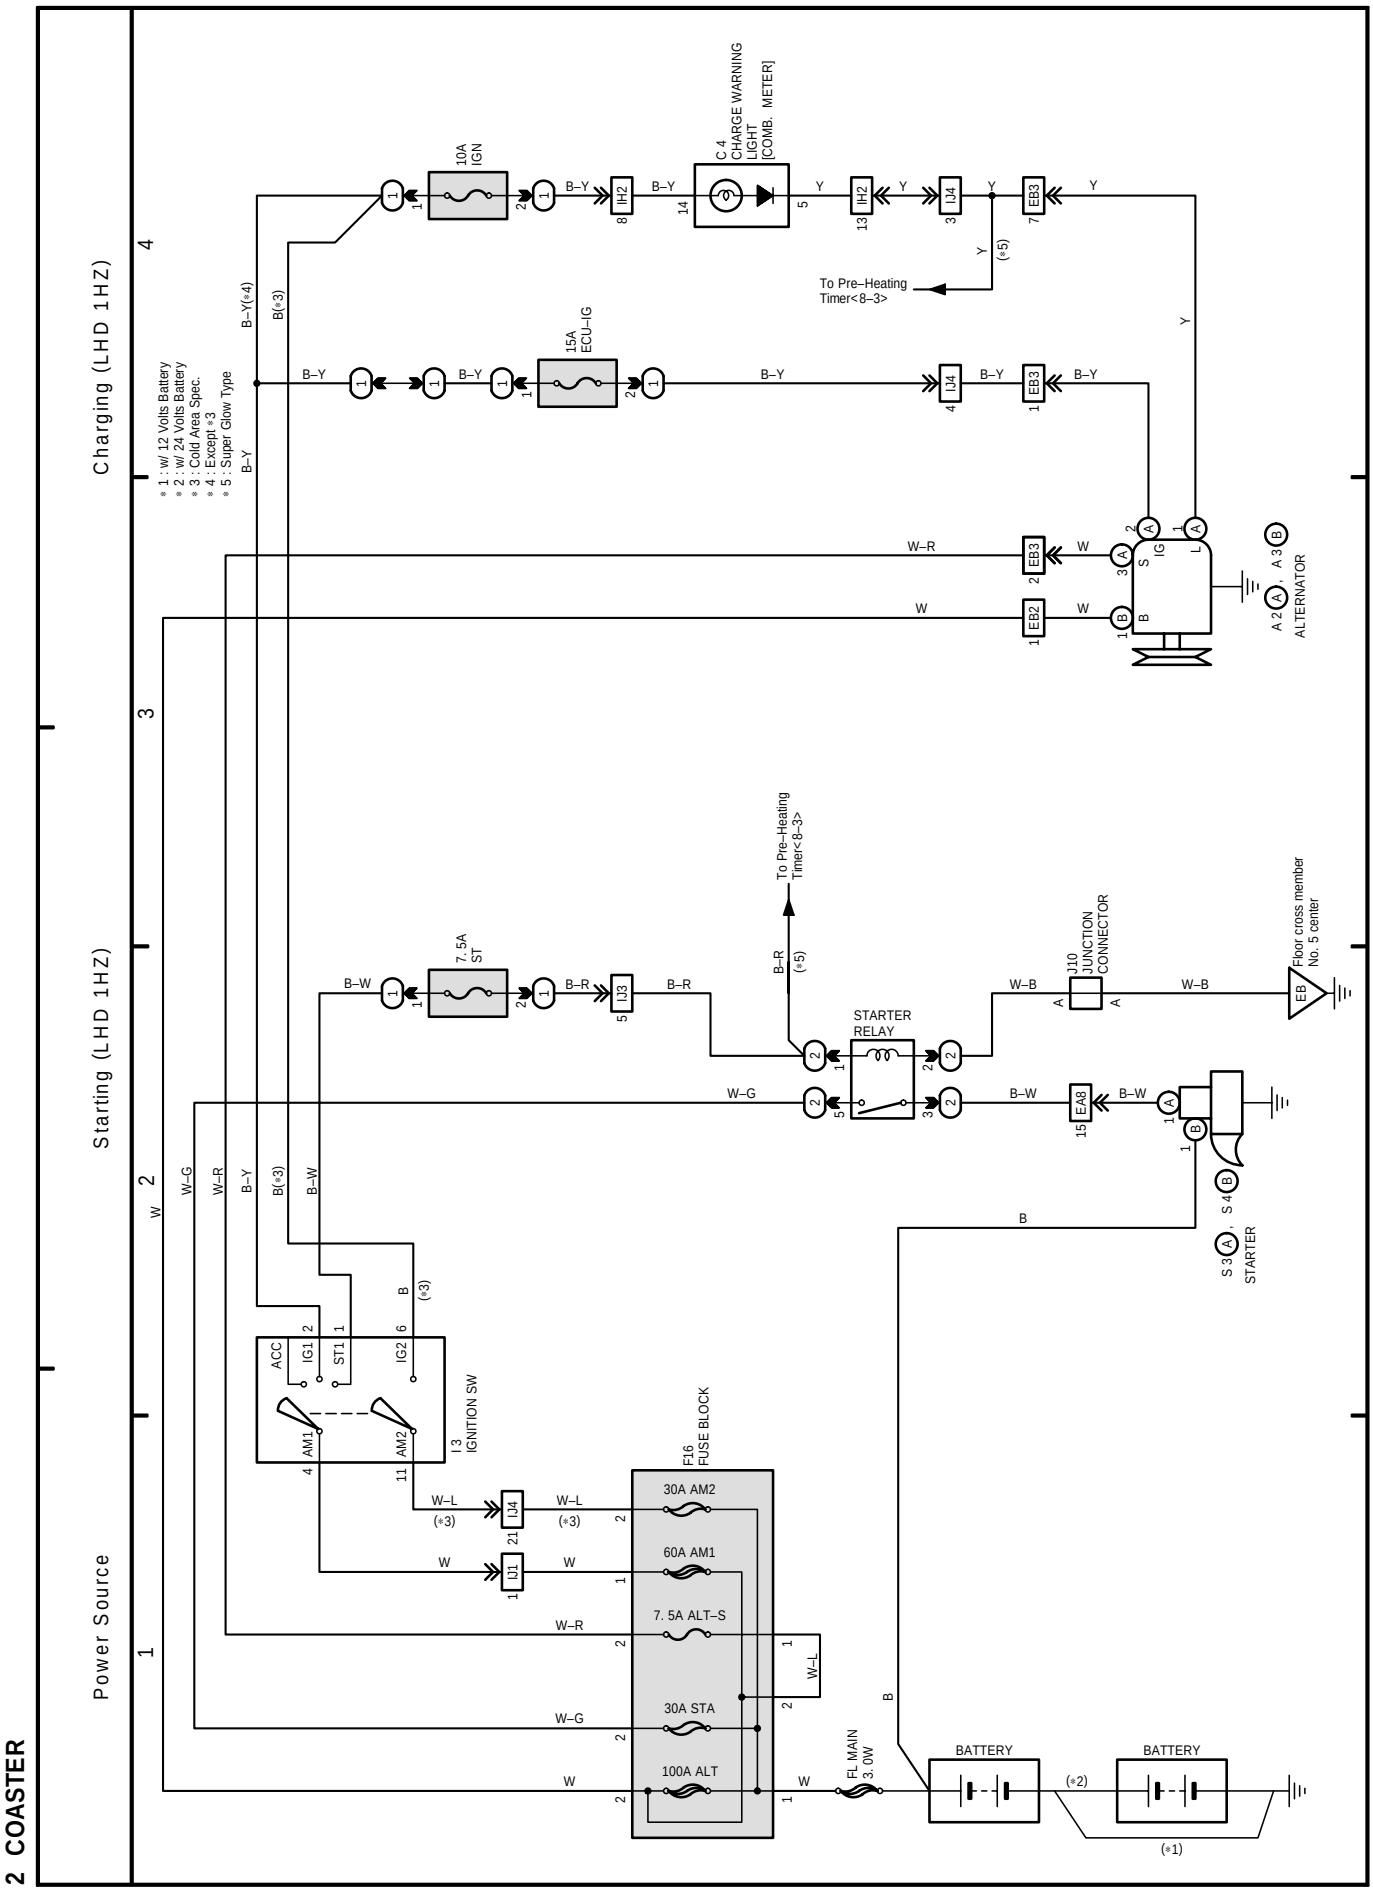

2 COASTER
Power Source
Starting (LHD 1HZ)
Charging (LHD 1HZ)
1
2
3
4
W
* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
* 3 : Cold Area Spec.
* 4 : Except *3
* 5 : Super Glow Type
10A IGN
15A ECU–IG
7. 5A ST
C 4 CHARGE WARNING LIGHT [COMB. METER]
To Pre–Heating Timer<8–3>
STARTER RELAY
J10 JUNCTION CONNECTOR
Floor cross member No. 5 center
EB
ALTERNATOR
A 2 (A) , A 3 (B)
STARTER
S 3 (A) , S 4 (B)
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
FI6 FUSE BLOCK
30A AM2
60A AM1
7. 5A ALT–S
30A STA
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY
(*1)
(*2)
(*3)
(*5)