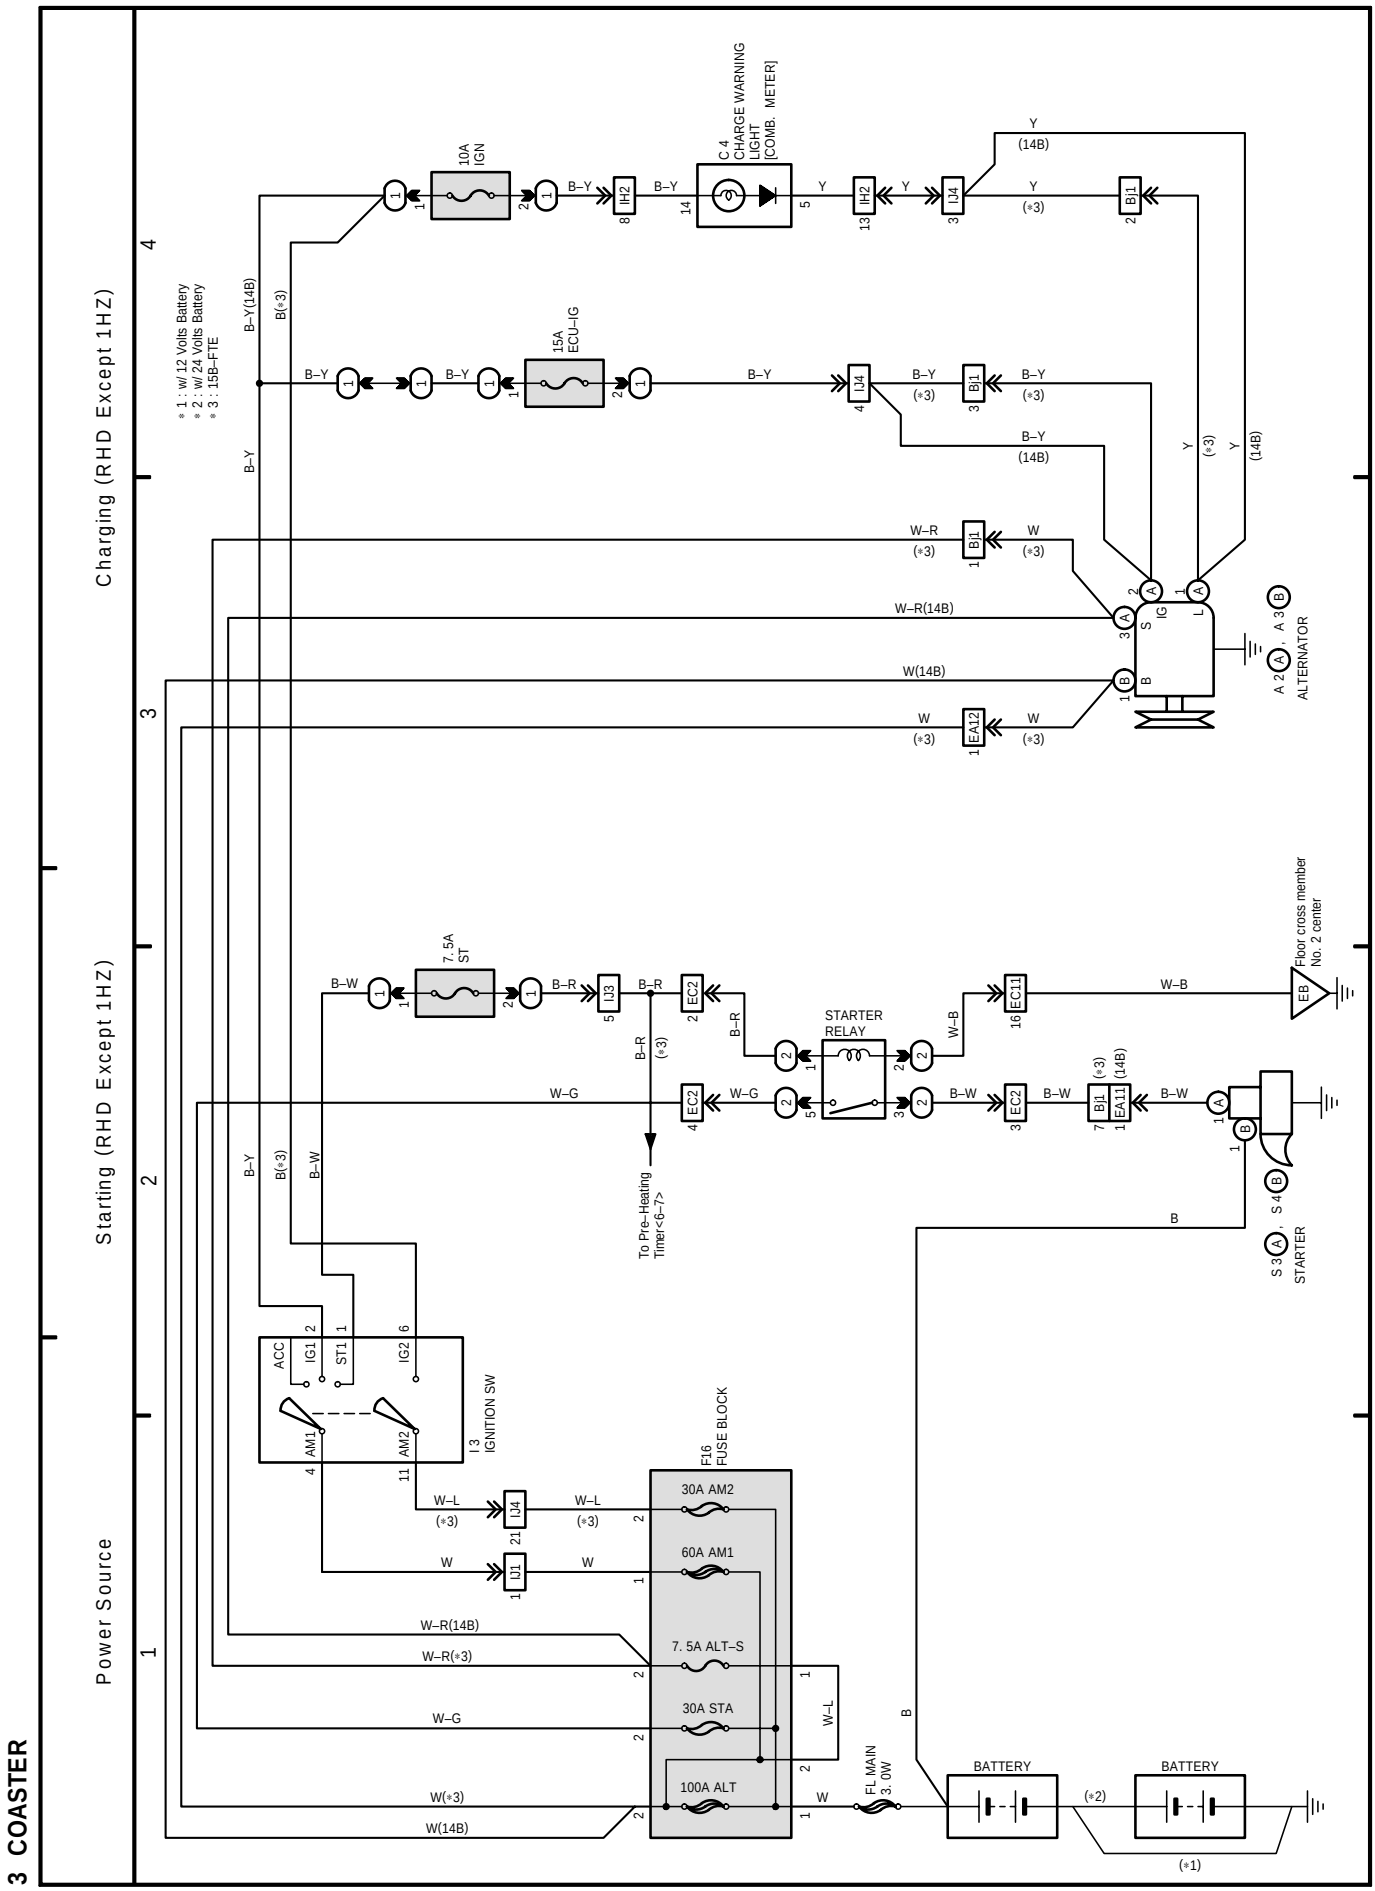

3 COASTER
Power Source
Starting (RHD Except 1HZ)
Charging (RHD Except 1HZ)
1
2
3
4
* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
* 3 : 15B–FTE
10A IGN
15A ECU–IG
C 4 CHARGE WARNING LIGHT [COMB. METER]
7. 5A ST
STARTER RELAY
ALTERNATOR
STARTER
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
30A AM2
60A AM1
7. 5A ALT–S
30A STA
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY
(*1)
(*2)
To Pre–Heating Timer<6–7>
Floor cross member No. 2 center
EB
B–Y
B–Y(14B)
B(*3)
B–W
B–R
W–G
W–R(14B)
W–R(*3)
W(*3)
W(14B)
W–L
W
B