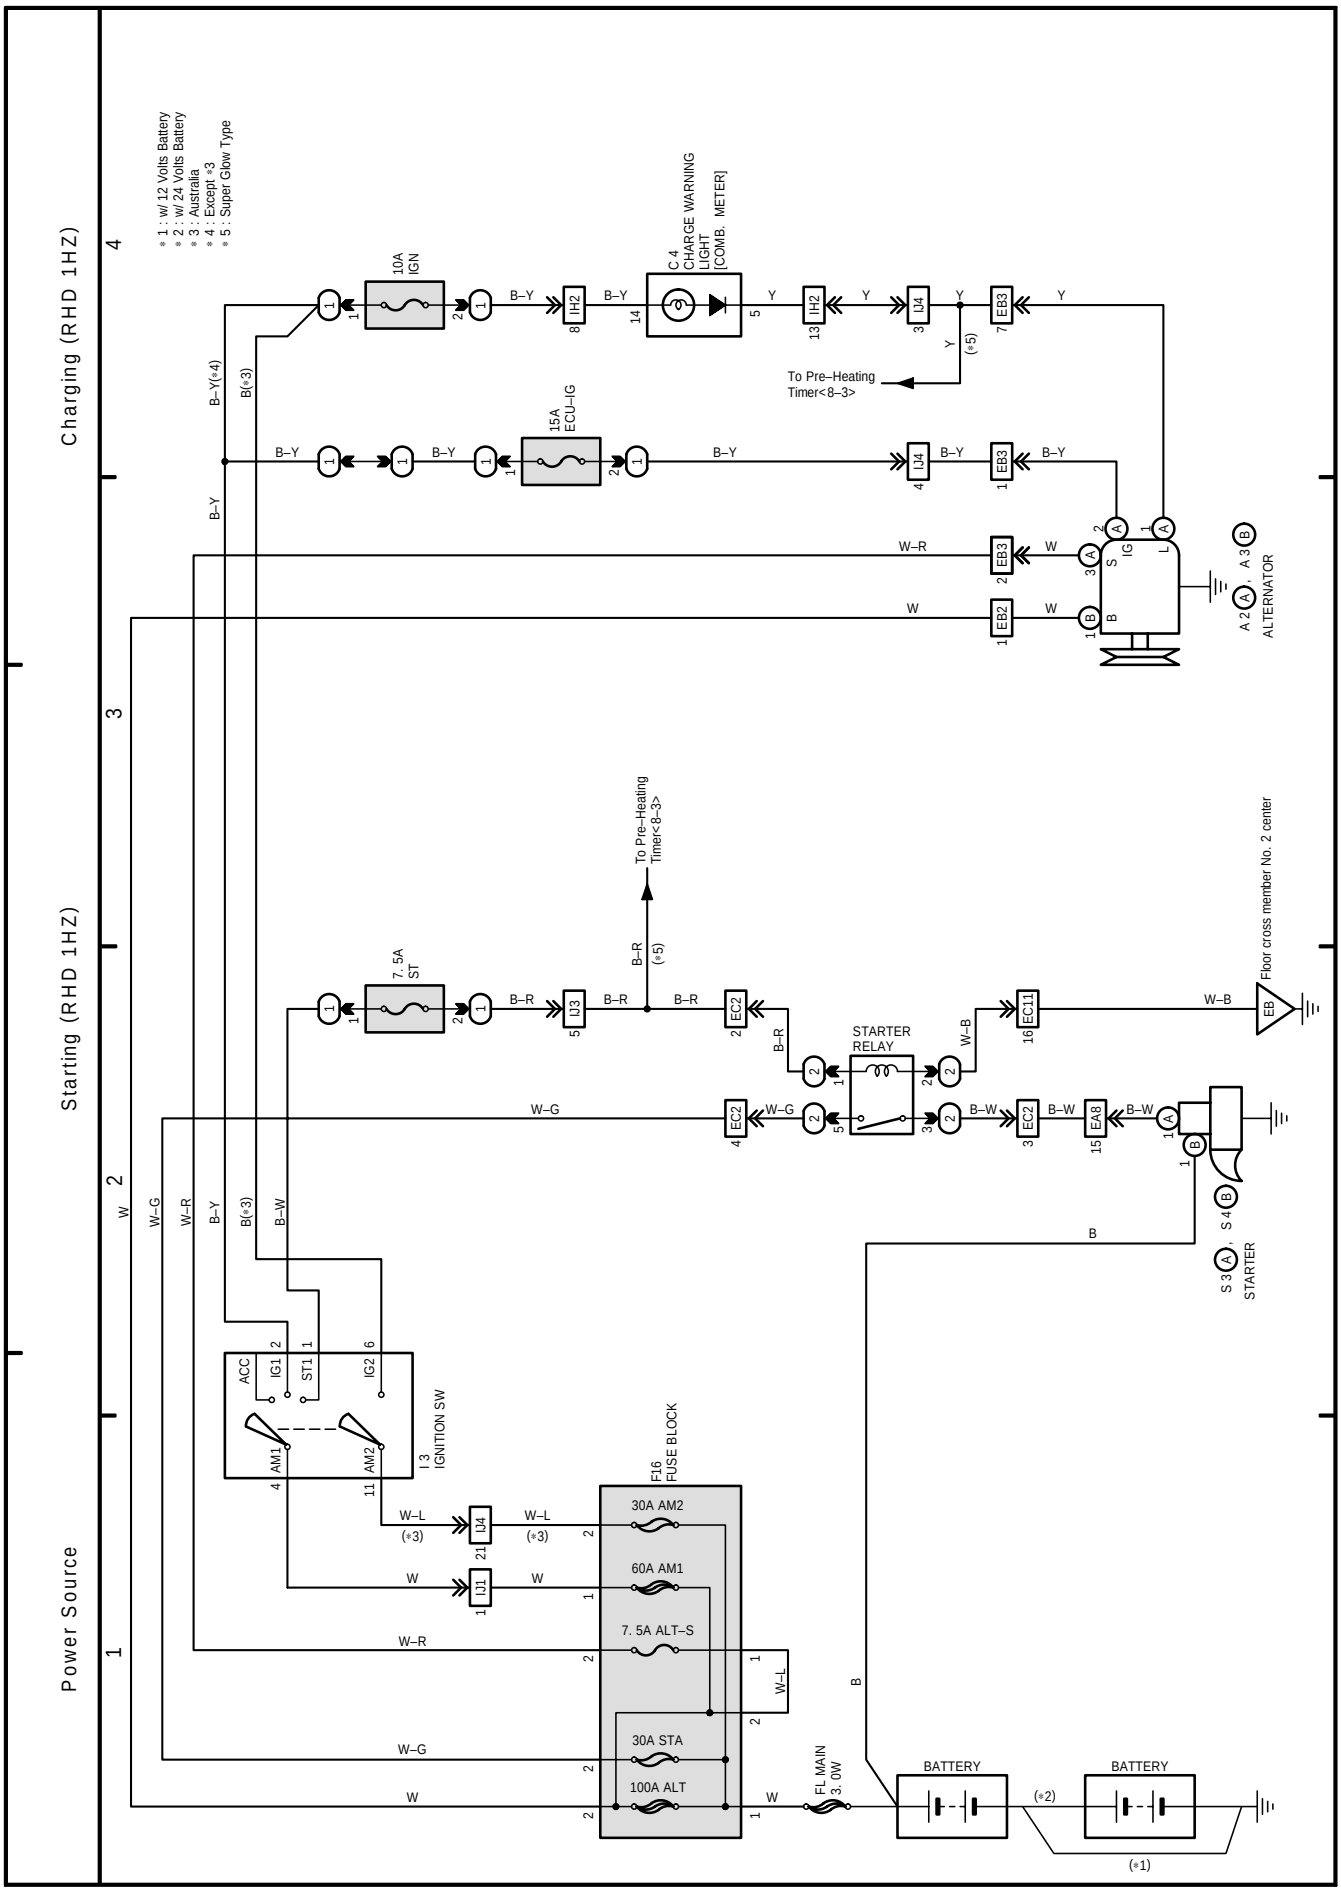

* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
* 3 : Australia
* 4 : Except *3
* 5 : Super Glow Type
Charging (RHD 1HZ)
Starting (RHD 1HZ)
Power Source
10A IGN
C 4 CHARGE WARNING LIGHT [COMB. METER]
15A ECU–IG
7. 5A ST
To Pre–Heating Timer<8–3>
STARTER RELAY
Floor cross member No. 2 center
ALTERNATOR
STARTER
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
FI16 FUSE BLOCK
30A AM2
60A AM1
7. 5A ALT–S
30A STA
100A ALT
FL MAIN 3. 0W
BATTERY
BATTERY